


BLOWER RESISTOR INSPECTION


AC3FE-01

1. REMOVE GLOVE COMPARTMENT PARTS (See page [BO-52](#))

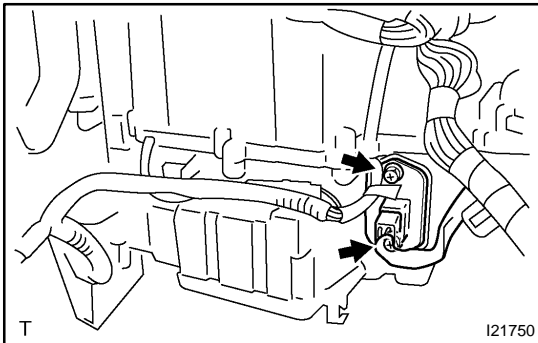

2. REMOVE BLOWER RESISTOR


- (a) Disconnect the resistor connector from the blower resistor.
- (b) Remove the 2 screws and blower resistor.

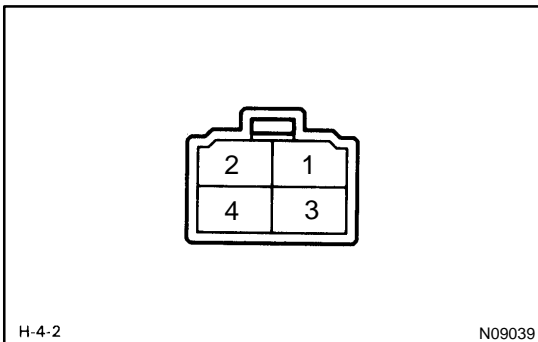

3. INSPECT BLOWER RESISTOR RESISTANCE

Tester connection	Condition	Specified condition
1-4	Constant	$2.2 \pm 0.1 \Omega$
1-3	Constant	$1.2 \pm 0.2 \Omega$
1-2	Constant	$1.8 \pm 0.2 \Omega$

If resistance is not as specified, replace the blower resistor.

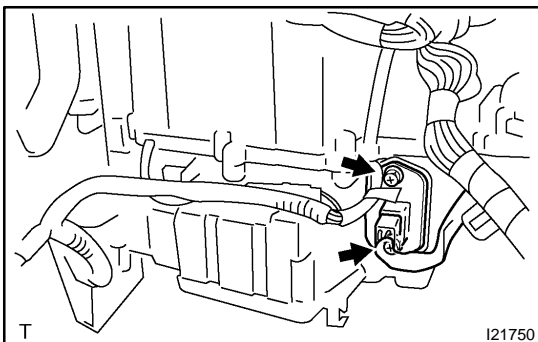

4. INSTALL BLOWER RESISTOR

- (a) Install the blower resistor with the 2 screws.
 - (b) Connect the resistor connector to the blower resistor.
5. INSTALL GLOVE COMPARTMENT PARTS (See page [BO-52](#))