

## DISASSEMBLY

1. REMOVE BLOWER MOTOR (See page [AC-71](#))
2. REMOVE AIR INLET SERVOMOTOR (See page [AC-40](#))