



INSTALLATION

1. TIGHTEN IDLE PULLEY LOCK NUT TEMPORALLY
Torque: 2.5 N·m (25 kgf·cm, 22 in.-lbf)
2. INSTALL DRIVE BELT
3. USING ADJUSTING BOLT, ADJUST DRIVE BELT TENSION
Drive belt tension
New belt: 160 ± 25 lbf
Used belt: 100 ± 25 lbf
4. TIGHTEN IDLE PULLEY LOCK NUT
Torque: 39 N·m (400 kgf·cm, 29 ft.-lbf)
5. INSTALL PS PUMP DRIVE BELT
6. INSTALL ENGINE UNDER COVER