



INSPECTION

1. INSPECT BACK-UP LIGHT SWITCH CONTINUITY

Condition	Tester connection	Specified condition
Free	-	No continuity
Push	1 - 2	Continuity

If continuity is not as specified, replace the switch.

2. INSPECT PARK/NEUTRAL POSITION SWITCH CONTINUITY

(A44D: See page [AT-22](#))

(A340E, A340F: See page [DI-482](#))