

DISASSEMBLY

1. **REMOVE HEADREST**
2. **REMOVE RECLINING ADJUSTER RELEASE HANDLE**
3. **REMOVE OUTER SHIELD**

Remove the screw and outer shield.

4. **REMOVE INNER SHIELD**

Remove the screw and inner shield.

5. **REMOVE SEATBACK ASSEMBLY**

- (a) Remove the hog rings.
- (b) Remove the 4 bolts and seatback assembly.

6. **REMOVE SEATBACK COVER**

- (a) Remove the headrest supports.
- (b) Remove the seatback frame from the seatback cover with pad.
- (c) Remove the hog rings and seatback cover from the seatback pad.

7. **REMOVE SEAT CUSHION ASSEMBLY**

Remove the 4 bolts and seat cushion assembly.

8. **REMOVE SEAT CUSHION COVER**

- (a) Remove the hog rings and seat cushion frame from the seat cushion cover with pad.
- (b) Remove the hog rings and seat cushion cover from the seat cushion pad.

9. **REMOVE RECLINING CONNECTING PIPE**

Remove the reclining connecting pipe from the seat tracks.

10. **REMOVE INSIDE INNER SHIELD**

Remove the screw and inside inner shield.

11. **REMOVE INSIDE OUTER SHIELD**

Remove the screw and inside outer shield.

12. **REMOVE EQUALIZING WIRE**