

INSTALLATION

INSTALL FRONT SEAT

- (a) Slide the front seat to the rearmost position.

NOTICE:

Make sure that seat adjuster locks.

- (b) Without holding the seat track handle, mount the seat to the vehicle.

HINT:

If holding the seat track handle, the adjusted rearmost positions slip off.

- (c) Tighten the bolts on the front side temporarily, from the bolt on the outer side tighten completely.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

- (d) Slide the seat to the frontmost position to install the bolts on the rear side.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

- (e) Install the 2 seat track covers.