

DISASSEMBLY

1. REMOVE REAR SEAT CUSHION HINGE COVERS

Using a screwdriver, remove the rear seat cushion hinge covers.

HINT:

Tape the screwdriver tip before use.

2. REMOVE REAR SEAT CUSHION HINGE UPPER COVERS

Remove the screws and rear seat cushion hinge upper covers.

3. REMOVE REAR SEAT CUSHION COVERS

Remove the rear seat cushion covers from the rear seat cushion pads.