

## SEAT BELT PRETENSIONER REMOVAL


BO42N-01

### CAUTION:

- When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.
- Never disassemble the front seat outer belt.
- Never use seat belt pretensioner from another vehicle. When replacing parts, replace new one.

### REMOVE FRONT SEAT OUTER BELT

- Regular cab, Extra cab:  
Remove the quarter trim (See page [BO-60](#), [BO-63](#)).
- Double cab:  
Remove the center pillar (See page [BO-68](#)).

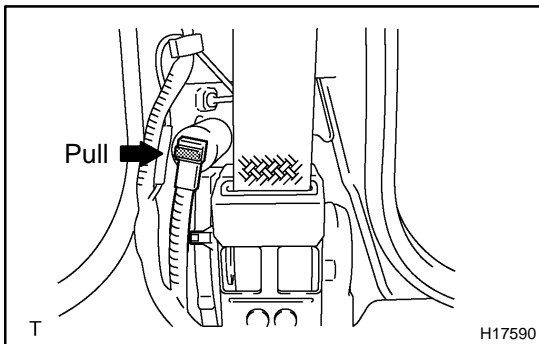

- Pull the locking button and disconnect the pretensioner connector.
- Remove the 2 bolts and front seat outer belt with the pretensioner.

### Torque:

**36 N·m (365 kgf·cm, 27 ft·lbf) for upper bolt**  
**42 N·m (430 kgf·cm, 31 ft·lbf) for lower bolt**