



REMOVAL

1. **DISCONNECT CONNECTOR**
2. **DISCONNECT BRAKE LINES**

Using SST, disconnect the 5 brake lines from the ABS actuator.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

3. **REMOVE ABS ACTUATOR ASSEMBLY**

Remove the bolt, 2 nuts and ABS actuator assembly.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

4. **REMOVE ABS ACTUATOR**

Remove the 2 nuts and the ABS actuator.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)