


## REMOVAL

1. REMOVE MASTER CYLINDER (See page BR-10)
2. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER
3. REMOVE PEDAL RETURN SPRING
4. REMOVE CLIP AND CLEVIS PIN

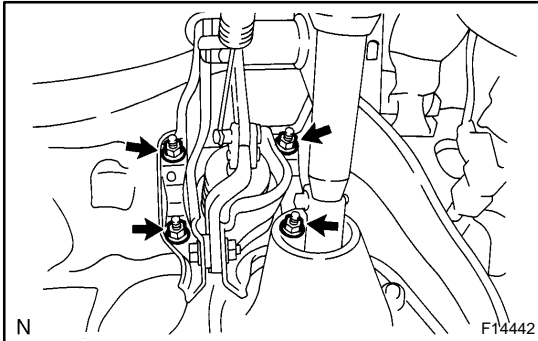

5. REMOVE BRAKE BOOSTER
  - (a) Remove the clevis from the push rod.
  - (b) Remove the 4 booster installation nuts.
  - (c) Remove the booster and gasket.
  - (d) Remove the 2 stopper rings, brake booster bracket and gasket from the brake booster.