


## REMOVAL

1. DISCONNECT LEVEL WARNING SWITCH CONNECTOR
2. DISCONNECT WIRE HARNESS FROM BRACKET
3. TAKE OUT FLUID WITH SYRINGE

### NOTICE:

Do not let brake fluid remain on a painted surface. Wash it off immediately.

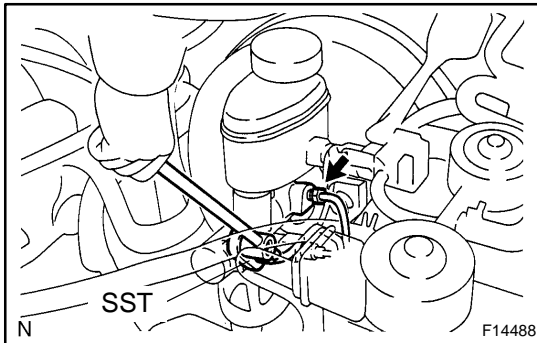


4. DISCONNECT BRAKE LINES

Using SST, disconnect the 3 brake lines and remove the brake line from the master cylinder and 3-way.

SST 09023-00100

**Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)**

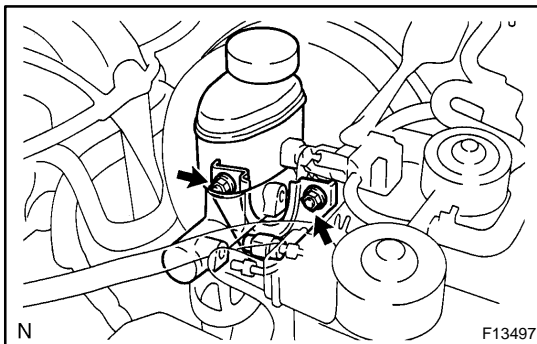

5. REMOVE MASTER CYLINDER

Remove the 2 nuts, wire harness bracket, 3-way, check valve bracket and master cylinder.

**Torque: 13 N·m (130 kgf-cm, 9 ft-lbf)**