



REMOVAL

1. DISCONNECT FLEXIBLE HOSE

- (a) Remove the union bolt and disconnect the flexible hose.
Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

NOTICE:

At the time of installation, for correct brake hose routing, ensure that the hose hangs down before installing hose to caliper.

- (b) Use a container to catch the brake fluid.

2. REMOVE CALIPER FROM TORQUE PLATE

Remove the 2 slide pins and caliper.

Torque: 88 N·m (900 kgf·cm, 65 ft·lbf)

3. REMOVE 2 BRAKE PADS WITH 4 ANTI-SQUEAL SHIMS AND PAD WEAR INDICATOR

4. REMOVE 4 PAD SUPPORT PLATES