


REMOVAL

1. REMOVE FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

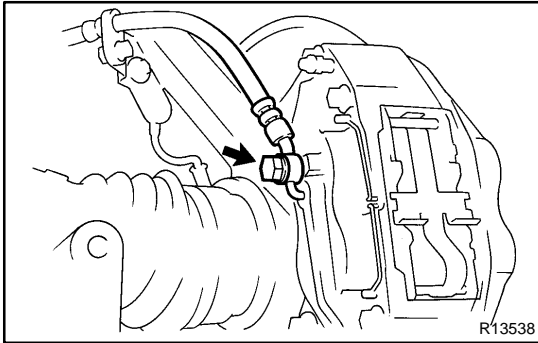


2. DISCONNECT FLEXIBLE HOSE

Remove the union bolt and 2 gaskets from the caliper, then disconnect the flexible hose from the caliper.

Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

HINT:

At the time of installation, install the flexible hose lock securely in the lock hole in the caliper.

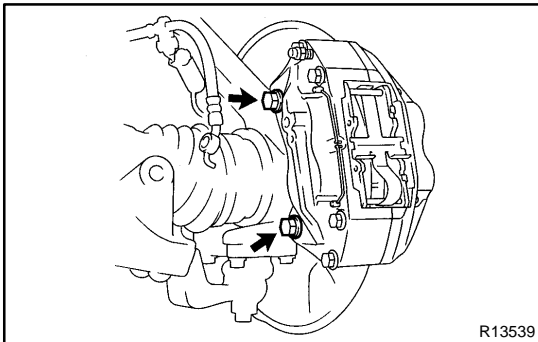

3. REMOVE CALIPER

Remove the 2 mounting bolts and caliper.

Torque: 123 N·m (1,250 kgf·cm, 90 ft·lbf)

4. REMOVE CLIP, 2 PINS AND ANTI-RATTLE SPRING

5. REMOVE 2 PADS WITH 4 ANTI-SQUEAL SHIMS