



## REMOVAL

- 1. REMOVE GENERATOR DRIVE BELT**
  - (a) Loosen the adjusting lock nut and pivot bolt.
  - (b) Loosen the adjusting bolt, and remove the drive belt.
- 2. REMOVE GENERATOR**
  - (a) Disconnect the generator connector.
  - (b) Remove the nut, and disconnect the generator wire.
  - (c) Remove the pivot bolt and adjusting lock nut.
  - (d) Remove the generator.

### Torque:

**51 N·m (520kgf·cm, 38 ft·lbf) for pivot bolt**

**18.5 N·m (189kgf·cm, 25 ft·lbf) for adjusting lock nut**