



## DISASSEMBLY

1. PULL OUT BOOT WITH PUSH ROD
2. REMOVE PISTON

Using compressed air, remove the piston with the spring from the cylinder.