



INSTALLATION

1. **INSTALL THERMOSTAT**
 - (a) Place a new gasket to the thermostat.
 - (b) Install the thermostat with the jiggle valve downward.
 - (c) Install the water inlet with the 3 nuts.
Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)
2. **CONNECT LOWER RADIATOR HOSE**
3. **FILL WITH ENGINE COOLANT**
4. **START ENGINE AND CHECK FOR LEAKS**