

<b>DTC</b>	<b>P0607/54</b>	<b>Control Module Performance</b>
------------	-----------------	-----------------------------------

## CIRCUIT DESCRIPTION

See page [DI-389](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0607/54	ECM malfunction	• ECM

## WIRING DIAGRAM

See page [DI-389](#).

## INSPECTION PROCEDURE

See page [DI-389](#).