



## DISASSEMBLY

### 1. REMOVE DRIVE AND DRIVEN ROTORS

Remove the 9 screws, pump cover, drive rotor, driven rotor and O-ring.

### 2. REMOVE RELIEF VALVE

- (a) Using snap ring pliers, remove the snap ring.
- (b) Remove the retainer, spring(s) and relief valve.