MANUAL TRANSMISSION (W59) SST (Special Service Tools)

PP09R-02

| | 09308–00010 | Oil Seal Puller | Output shaft rear bearing outer race |
|--|---------------|--|--|
| | (09308–10010) | Oil Seal Puller | Extension housing oil seal |
| | 09312-20011 | Transmission Gear Remover & Replacer | 5th gear Output shaft rear bearing Reverse gear |
| Ð | (09313–00010) | Reverse Gear Remover | |
| (F) | (09313–00030) | Rear Bearing Replacer | |
| and a start of the | (09313–00040) | Plate "A" | |
| | (09313–00050) | Plate "B" | |
| | 09316–60011 | Transmission & Transfer Bearing Replacer | No.3 clutch hub Counter gear center bearing outer race |
| | (09316–00011) | Replacer Pipe | |
| | (09316–00071) | Replacer "F" | |
| | 09506–35010 | Differential Drive Pinion Rear Bearing Replacer | Input shaft bearing Output shaft center bearing |
| | 09950–00020 | Bearing Remover | |

| 09950–40011 | Puller B Set | Counter 5th gear No.3 clutch hub Reverse gear Counter gear side race |
|---------------|--------------|---|
| 09950–60010 | Replacer Set | |
| (09951–00440) | Replacer 44 | Front bearing retainer oil seal |
| (09951–00510) | Replacer 51 | Counter gear center bearing outer race |
| (09951–00560) | Replacer 56 | Output shaft rear bearing outer race Extension housing oil seal Transfer adaptor oil seal |
| 09950–70010 | Handle Set | |
| (09951–07150) | Handle 150 | |

110