## **SUSPENSION AND AXLE**SST (Special Service Tools)

PP3HC-02

CPUE	09214–76011	Crankshaft Pulley Replacer	Rear differential (3RZ-FE, 5VZ-FE w/ Diff. lock)
	09223–15020	Oil Seal & Bearing Replacer	Front differential
	09223–15030	Oil Seal & Bearing Replacer	Front axle (4WD and pre runner)
	09223–56010	Crankshaft Rear Oil Seal Replacer	Rear axle
	09226–10010	Crankshaft Front & Rear Bearing Replacer	Front differential
	09240-00020	Wire Gauge Set	Front drive shaft (4WD)
	09308-00010	Oil Seal Puller	Front differential Rear axle Rear differential (3RZ–FE, 5VZ–FE w/ Diff. lock)
	09309–37010	Transmission Bearing Replacer	Front differential Front suspension (4WD and pre runner)
	09316–12010	Transfer Bearing Replacer	Rear differential (Except 2RZ-FE)
	09316–60011	Transmission & Transfer Bearing Replacer	
	(09316–00011)	Replacer Pipe	Rear differential
	(09316–00021)	Replacer "A"	Rear differential

2003 TOYOTA TACOMA (RM1002U)

	(09316–00051)	Replacer "D"	Rear axle Rear differential (3RZ-FE, 5VZ-FE w/ Diff. lock)
	09318–12010	Transfer Bearing Adjusting Nut Wrench	Front axle (4WD and pre runner)
	09330-00021	Companion Flange Holding Tool	Front differential Rear differential
	09350–20015	TOYOTA Automatic Transmission Tool Set	Front differential
	(09369–20040)	Piston Spring Compressor Set	
	09350–32014	TOYOTA Automatic Transmission Tool Set	Front differential Rear differential
	09308–10010	Oil Seal Puller	
	09502–12010	Differential Bearing Replacer	Front differential
(Proposition of the Control of the C	09504–00011	Differential Side Bearing Adjusting Nut Wrench	Rear differential (2RZ-FE and 3RZ-FE, 5VZ-FE w/ Diff. lock)
	09504–22012	Differential Side Bearing Replacer	Rear differential (3RZ–FE, 5VZ–FE w/o Diff. lock)
	09506–30012	Differential Drive Pinion Rear Bearing Cone Replacer	Front differential Rear differential
	09506–35010	Differential Drive Pinion Rear Bearing Replacer	Front suspension (4WD and pre runner) Rear differential (3RZ-FE, 5VZ-FE w/o Diff. lock)
	09515–30010	Rear Wheel Bearing Replacer	Rear axle

	09521–24010	Drive Shaft Boot Clamping Tool	Front drive shaft (4WD)
	09521–25011	Rear Axle Shaft Puller	Rear axle
	09523–36010	Rear Axle Hub Guide Tool	Rear differential (3RZ–FE, 5VZ–FE w/o Diff. lock)
	09527–17011	Rear Axle Shaft Bearing Remover	Front axle
	09550–10013	Replacer Set "B"	
	(09252–10010)	No. 1 Replacer Handle–	Rear differential Rear suspension
	(09553–10010)	Differential Side Bearing Replacer	Rear suspension
	(09557–10011)	Differential Drive Pinion Front Bearing Replacer	Rear differential (2RZ-FE)
	09554–22010	Differential Oil Seal Replacer	Front differential
	09554–30011	Differential Oil Seal Replacer	Rear differential (2RZ-FE)
	09556–22010	Drive Pinion Front Bearing Remover	Front differential Rear differential
	09564–32011	Differential Preload Adaptor	Front differential
D 0000	09570-22011	Differential Mounting Cushion Remover & Replacer	Front differential

	09608–32010	Steering Knuckle Oil Seal Replacer	Front differential
	09610–20012	Pitman Arm Puller	Front suspension
	09612–65014	Steering Worm Bearing Puller	Front differential
	(09612–01020)	Claw "B"	
<b>1 1 1 1 1 1 1 1 1 1</b>	(09612–01050)	Hanger Pin with Nut	
	09628–62011	Ball Joint Puller	Front axle (2WD) Front drive shaft (4WD) Front suspension
	09631–10030	Oil Seal Remover	Front drive shaft (4WD)
	09632–36010	Steering Vane Pump Bearing Replacer	Front suspension (4WD and pre runner)
	09636–20010	Upper Ball Joint Dust Cover Replacer	Front differential Rear differential
	09649–17010	Steering Knuckle Tool	Front axle (4WD and pre runner) Rear differential (3RZ-FE, 5VZ-FE w/o Diff. lock)
	09650–17011	Hub Bolt Remover	Front axle (4WD) Rear axle
	09710–28012	Front Suspension Bushing Tool Set	Rear suspension
	(09710–07062)	Bushing Replacer	

	09710–30021	Suspension Bushing Tool Set	
	(09710–03031)	Bushing Remover	Front suspension (2WD)
	(09710-03051)	Bushing Replacer	Front axle (4WD)
	(09710-03071)	Remover	Front suspension (2WD)
	(09710–03101)	Bushing Replacer	Front suspension (2WD)
	(09710–03141)	Bushing Remover Base	Front suspension (2WD)
	09710–30041	Rear Suspension Bushing Tool Set	Rear suspension
	(09710–03211)	Remover	
	09726–40010	Lower Control Shaft Bearing Replacer	Rear differential (3RZ-FE, 5VZ-FE w/ Diff. lock)
	09727–22011	Front Spring Compressor	Front suspension (2WD)
9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	(09727–23010)	Hook Set	
	(09727–23020)	Spacer	
	(09727–23030)	Rod Set	

	(09727–23040)	Attachment Set	
<b>DO (1)</b>			
	09727–30021	Coil Spring Compressor	Front suspension (4WD and pre runner)
J	09751–36011	Brake Line Union Nut 10 x 12 mm Wrench	Rear axle
	09922–10010	Variable Open Wrench	Front suspension (4WD and pre runner)
	09950-00020	Bearing Remover	Front differential Rear differential
	09950–30012	Puller A Set	
	(09951–03010)	Upper Plate	Front differential Rear differential
	(09953–03010)	Center Bolt	Front differential Rear differential
010101	(09954–03010)	Arm	Front differential Rear differential
	(09955-03030)	Lower Plate 130	Front differential Rear differential
	(09956–03020)	Adapter 18	Front differential Rear differential (2RZ-FE, 3RZ-FE, 5VZ-FE w/ Diff. lock)
	(09956–03050)	Adapter 24	Rear differential (3RZ-FE, 5VZ-FE w/o Diff. lock)
	09950–40011	Puller B Set	

	(09951–04010)	Hanger 150	Front axle (4WD and pre runner), Fron differential, Front suspension (4WD and pre runner), Rear differential
	(09951–04020)	Hanger 200	Front axle (4WD and pre runner)
	(09952–04010)	Slide Arm	Front axle (4WD and pre runner), Fron differential, Front suspension (4WD and pre runner), Rear differential
	(09953–04020)	Center Bolt 150	Front axle (4WD and pre runner), Fron differential, Front suspension (4WD and pre runner), Rear differential
	(09954–04010)	Arm 25	Front axle (4WD and pre runner), Fron differential, Front suspension (4WD and pre runner), Rear differential
	(09955–04011)	Claw No.1	Front differential
	(09955–04031)	Claw No.3	Front axle (4WD and pre runner), Front suspension (4WD and pre runner)
	(09955–04061)	Claw No.6	Front differential Rear differential
8	(09957–04010)	Attachment	Front axle (4WD and pre runner), Fron differential, Front suspension (4WD and pre runner), Rear differential
	(09958–04011)	Holder	Front axle (4WD and pre runner), Fron differential, Front suspension (4WD and pre runner), Rear differential
	09950–60010	Replacer Set	
9	(09951–00350)	Replacer 35	Rear suspension
9	(09951–00380)	Replacer 38	Front differential

9	(09951–00450)	Replacer 45	Rear differential (2RZ-FE)
9	(09951–00480)	Replacer 48	Front differential Rear differential (Except 2RZ-FE)
9	(09951–00490)	Replacer 49	Front axle (2WD)
6	(09951–00540)	Replacer 54	Front differential
6	(09951–00550)	Replacer 55	Rear differential (3RZ–FE, 5VZ–FE w/ Diff. lock)
6	(09951–00560)	Replacer 56	Rear axle
6	(09951–00610)	Replacer 61	Rear axle
6	(09951–00640)	Replacer 64	Front axle (2WD) Rear differential (3RZ-FE, 5VZ-FE w/o Diff. lock)
0	(09951–00650)	Replacer 65	Front axle (4WD and pre runner) Front differential
0000	09950–60020	Replacer Set No.2	
6	(09951–00710)	Replacer 71	Front axle (2WD) Rear axle Rear differential
(e)	(09951–00730)	Replacer 73	Rear differential (3RZ–FE, 5VZ–FE w/ Diff. lock)
6	(09951–00790)	Replacer 79	Front differential Rear differential

6	(09951–00810)	Replacer 81	Front axle (4WD)
6	(09951–00890)	Replacer 89	Rear axle
6	(09951–00910)	Replacer 91	Front axle (4WD and pre runner) Rear differential (3RZ–FE, 5VZ–FE w/o Diff. lock)
	09950–70010	Handle Set	Front axle Front differential Rear axle Rear differential
	(09951–07150)	Handle 150	
	09960–10010	Variable Pin Wrench Set	Rear differential (3RZ-FE, 5VZ-FE w/ Diff. lock)
	(09962–01000)	Variable Pin Wrench Arm Assy	
	(09963–00700)	Pin 7	