## TRANSFER SST (Special Service Tools)

PP0AC-03

09223–15020	Oil Seal & Bearing Replacer	Planetary gear outer bearing
09304–12012	Input Shaft Front Bearing Replacer	Shift fork shaft oil seal
09316–60011	Transmission & Transfer Bearing Replacer	
(09316–00011)	Replacer Pipe	High and low clutch hub Rear output shaft bearing Front case oil seal
(09316–00071)	Replacer "F"	Rear output shaft bearing
09330-00021	Companion Flange Holding Tool	Companion flange
09515–30010	Rear Wheel Bearing Replacer	Planetary gear outer bearing
09554–22010	Differential Oil Seal Replacer	Extension housing oil seal
09554–30011	Differential Oil Seal Replacer	Planetary gear outer bearing
09555–55010	Differential Drive Pinion Bearing Replacer	Driven sprocket rear bearing Rear output shaft bearing Planetary gear outer bearing
09612–65014	Steering Worm Bearing Puller	
(09612–01030)	Claw "C"	Planetary gear inner bearing

2003 TOYOTA TACOMA (RM1002U)

Author: Date: 122

<b>5</b> )	(09612–01050)	Hanger Pin with Nut	Planetary gear inner bearing
	(0,012 01000)		
	09950–40011	Puller B Set	
	(09951-04020)	Hanger 200	Companion flange
	(09952-04010)	Slide Arm	Companion flange
	(09953-04030)	Center Bolt 200	Companion flange
	(09954–04010)	Arm 25	Companion flange
	(09955–04051)	Claw No.5	Companion flange
8	(09957–04010)	Attachment	Companion flange
	(09958–04011)	Holder	Companion flange
Consessed by Conse	09950–60010	Replacer Set	
9	(09951–00220)	Replacer 22	Companion flange oil seal
(e)	(09951–00350)	Replacer 35	Companion flange oil seal
6	(09951–00570)	Replacer 57	Planetary gear inner bearing

2003 TOYOTA TACOMA (RM1002U)

Author: Date: 123

## PREPARATION - TRANSFER

6	(09951–00590)	Replacer 59	Front bearing retainer oil seal
	(09952–06010)	Adapter	Companion flange oil seal
	09950–70010	Handle Set	
	(09951–07100)	Handle 100	Front bearing retainer oil seal Planetary gear outer bearing Planetary gear inner bearing Companion flange oil seal

Author: Date: 124