


## REMOVAL

1. DRAIN DIFFERENTIAL OIL
2. REMOVE DRIVE SHAFTS (See page SA-34)
3. DISCONNECT FRONT PROPELLER SHAFT (See page PR-11)

### HINT:

Support the front propeller shaft securely.

4. REMOVE TUBE WITH WIRE HARNESS ASSEMBLY
  - (a) Disconnect the breather hose, vacuum hose and actuator connector.
  - (b) Remove the bolt and tube with wire harness assembly.
5. REMOVE FRONT DIFFERENTIAL CARRIER
  - (a) Support the front differential with a jack.

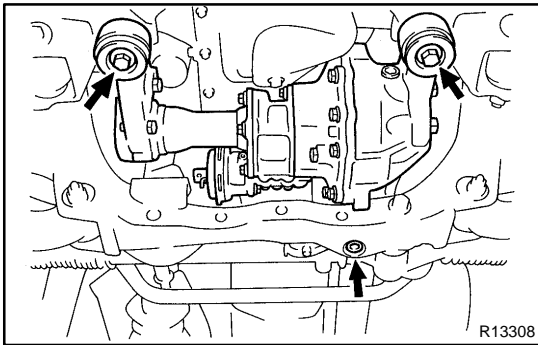

- (b) Remove the rear mounting nut.
- (c) Remove the 2 front mounting bolts.
- (d) Lower the jack and remove the front differential carrier.
6. REMOVE DIFFERENTIAL MOUNTING CUSHIONS
  - (a) Remove the 2 bolts and rear mounting cushion.
  - (b) Remove the 5 bolts and 2 front mounting cushions.