
FRONT WHEEL HUB BOLT (4WD and PRE RUNNER) REPLACEMENT

SA1G7-02

HINT:


Pre runner is the model described below. RZN191L–TRPDKAB, RZN196L–CRPDKAB, RZN196L–PRPDKAB, VZN195L–CRPDKAB, VZN195L–PRPDKAB

- 1. REMOVE FRONT WHEEL
- 2. REMOVE BRAKE CALIPER AND DISC (See page SA-24)

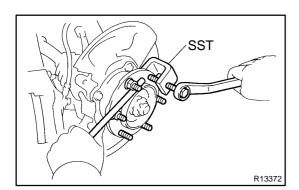

3. REMOVE HUB BOLT

Using SST, remove the hub bolt. SST 09650–17011

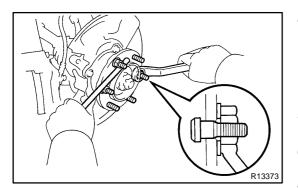

4. INSTALL HUB BOLT

- (a) Install a washer and nut to a new hub bolt as shown in the illustration.
- (b) Using a hammer handle or an equivalent to hold, install the bolt by torquing the nut.
- 5. INSTALL BRAKE DISC AND CALIPER (See page SA-30)
- 6. INSTALL FRONT WHEEL Torque: 110 N·m (1,150 kgf·cm, 83 ft·lbf)
- 7. DEPRESS BRAKE PEDAL SEVERAL TIMES