


INSPECTION

INSPECT FUEL TANK AND LINE

- Check the fuel lines for cracks or leakage, and all connections for deformation.
- Check the fuel tank vapor vent system hoses and connections for looseness, sharp bends or damage.
- Check the fuel tank for deflation, cracks, fuel leakage or tank band looseness.
- Check the filler neck for damage or fuel leakage.
- Hose and tube connections are as shown in the illustration.

If a problem is found, repair or replace the part as necessary.

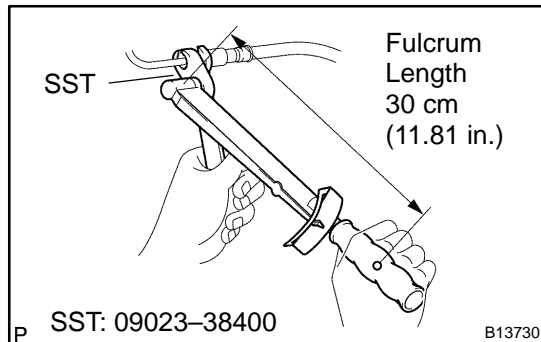

SST: 09023-38400

B13730

