



INSPECTION

1. **INSPECT HEATER RESISTANCE OF A/F SENSOR**
 - (a) Disconnect the sensor connector.
 - (b) Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance:

at 20°C (68°F)	0.8 – 1.4 Ω
at 800°C (1,472°F)	1.8 – 3.2 Ω

If the resistance is not as specified, replace the sensor.

Torque: 20 N·m (200 kgf-cm, 14 ft-lbf)

- (c) Connect the sensor connector.
2. **INSPECT OPERATION OF A/F SENSOR**
(See page [DI-421](#))