

REASSEMBLY

NOTICE:


When using a vise, do not overtighten it.

1. COAT PARTS INDICATED BY ARROWS WITH POWER STEERING FLUID (See page SR-32).
2. INSTALL VANE PUMP SHAFT WITH VANE PUMP PULLEY
3. INSTALL STRAIGHT PINS

Using a plastic hammer, tap in 2 new pins to the front housing.

NOTICE:

Be careful not to damage the pins.

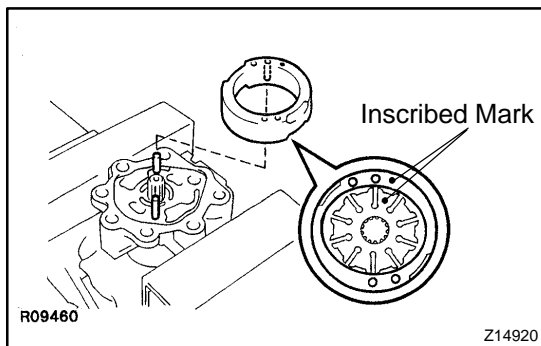

4. INSTALL CAM RING


Install the cam ring with the inscribed mark facing outward.

HINT:

Align the holes of the cam ring with the straight pins.

5. INSTALL VANE PUMP ROTOR

- (a) Install the rotor with the inscribed mark facing outward.
- (b) Install a new snap ring to the vane pump shaft.

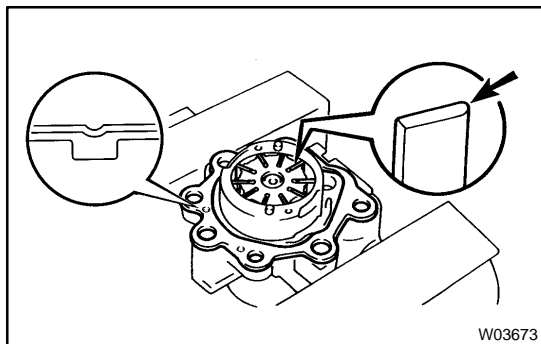

6. INSTALL VANE PLATES AND GASKET


- (a) Install the 10 plates with the round end facing outward.
- (b) Install a new gasket on the front housing.

NOTICE:

Be careful the direction of the gasket.

7. INSTALL SIDE PLATE

Align the holes of the plate and 2 straight pins.

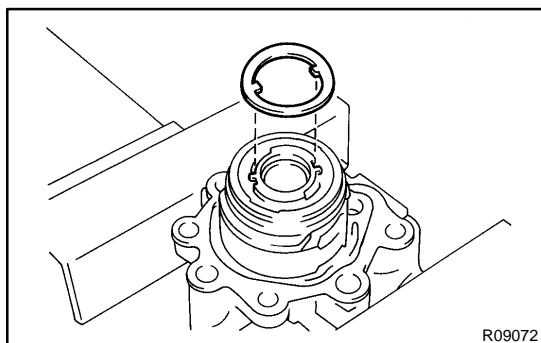

8. INSTALL WAVE WASHER

Install the washer so that its protrusions fit into the slots in the side plate.

9. INSTALL REAR HOUSING

- (a) Coat 2 new O-rings with power steering fluid and install them to the rear housing.
- (b) Install the rear housing with the 2 bolts.

Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)

10. INSTALL SPRING, FLOW CONTROL VALVE AND PRESSURE PORT UNION

- (a) Install the spring to the front housing.
- (b) Install the flow control valve facing the correct direction (See page [SR-32](#)).
- (c) Coat a new O-ring with power steering fluid and install it to the pressure port union.
- (d) Install the pressure port union.

Torque: 83 N·m (850 kgf·cm, 61 ft·lbf)

11. INSTALL OIL RESERVOIR

- (a) Coat a new O-ring with power steering fluid and install it to the oil reservoir.
- (b) Install the oil reservoir with the 3 bolts.

Torque:

Front side bolt: 13 N·m (130 kgf·cm, 9 ft·lbf)

Rear side bolts: 24 N·m (240 kgf·cm, 17 ft·lbf)

12. MEASURE PS VANE PUMP ROTATING TORQUE (See page [SR-34](#))