



REMOVAL

REMOVE STARTER

- (a) Disconnect the starter connector.
- (b) Remove the nut, and disconnect the starter wire.
Torque: 8.8 N·m (90 kgf-cm, 78 in.-lbf)
- (c) Remove the 2 bolts and starter.
Torque: 39 N·m (400 kgf-cm, 29 ft-lbf)