





# 1 TOYOTA TACOMA ELECTRICAL WIRING DIAGRAM

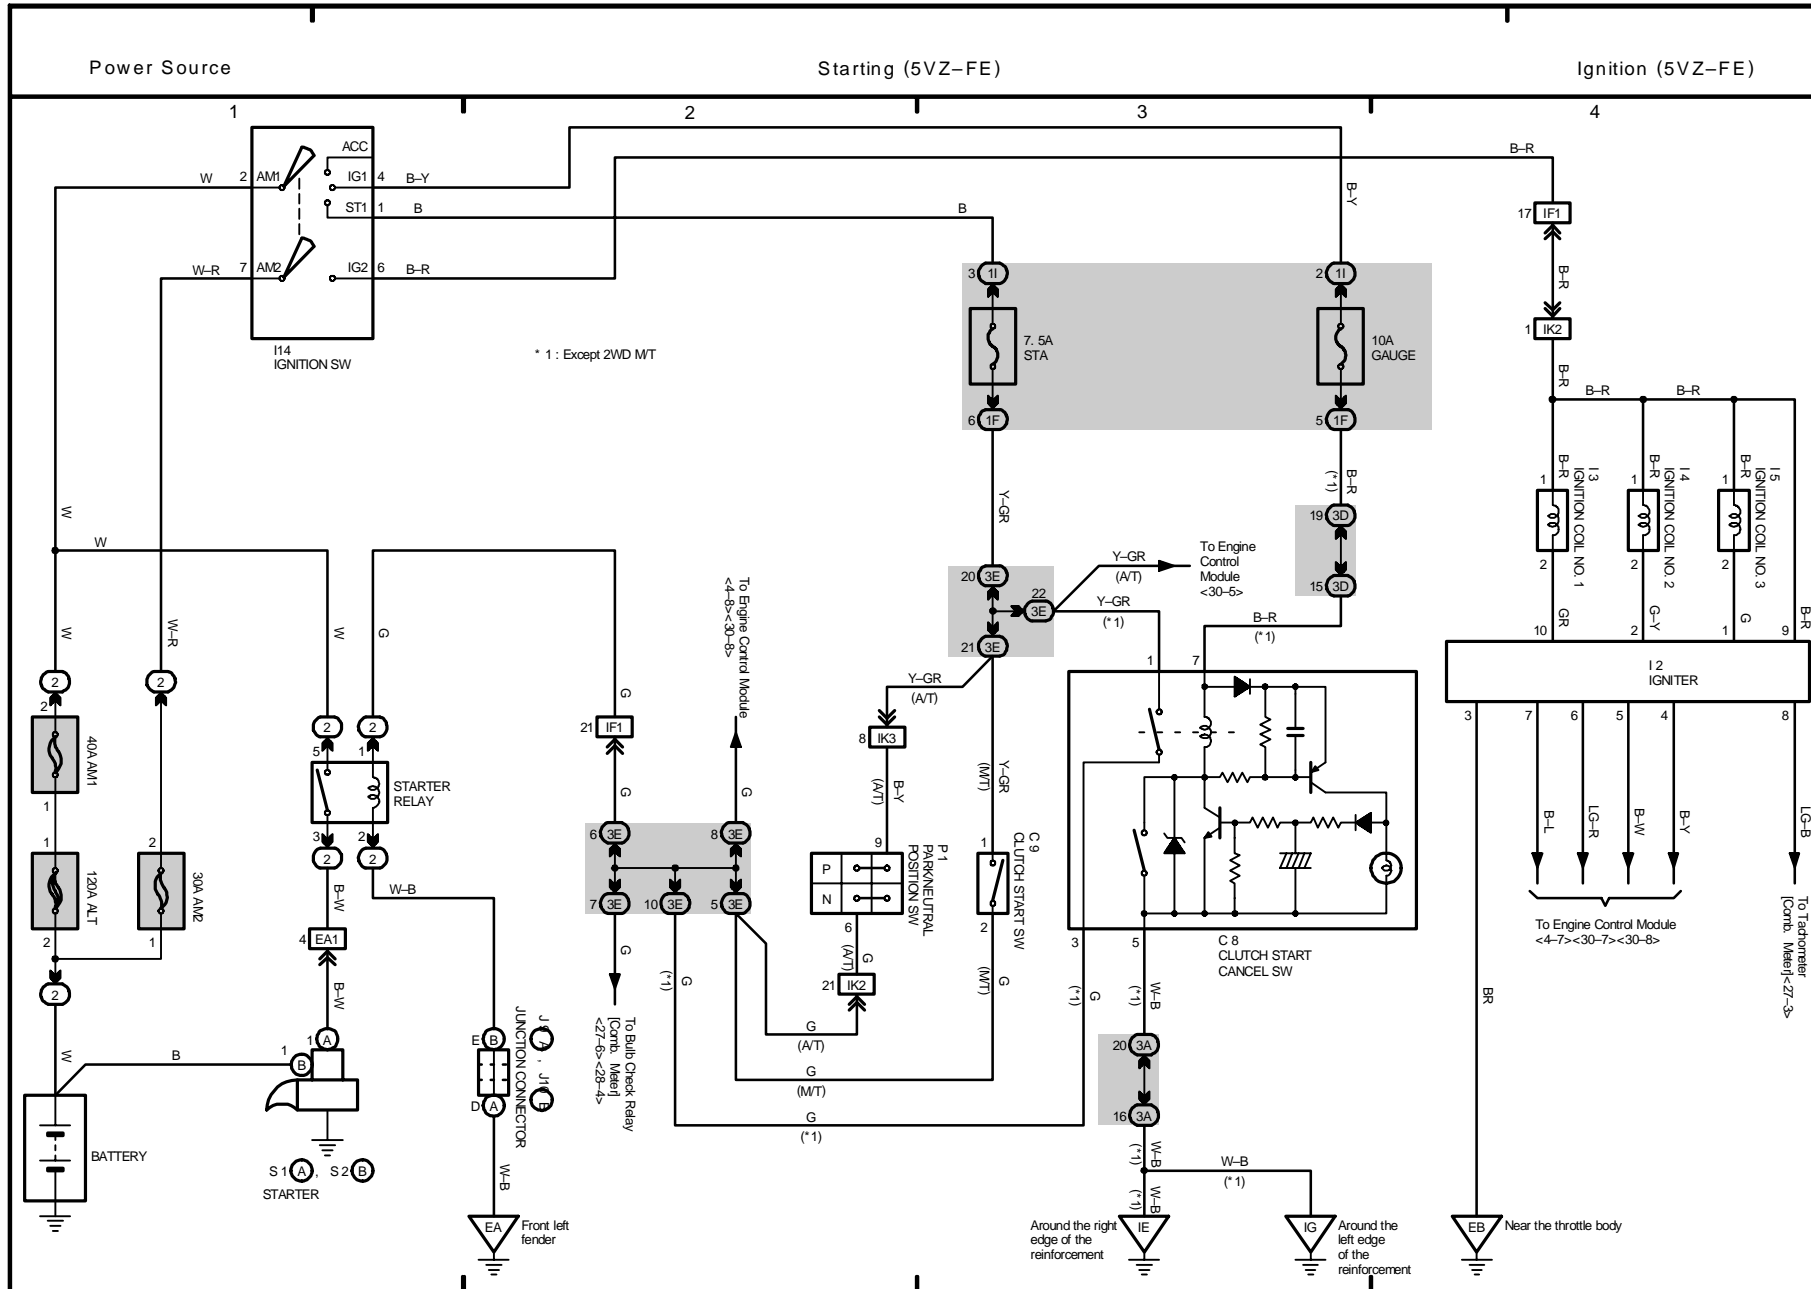

# M OVERALL ELECTRICAL WIRING DIAGRAM

---

2 TOYOTA TACOMA

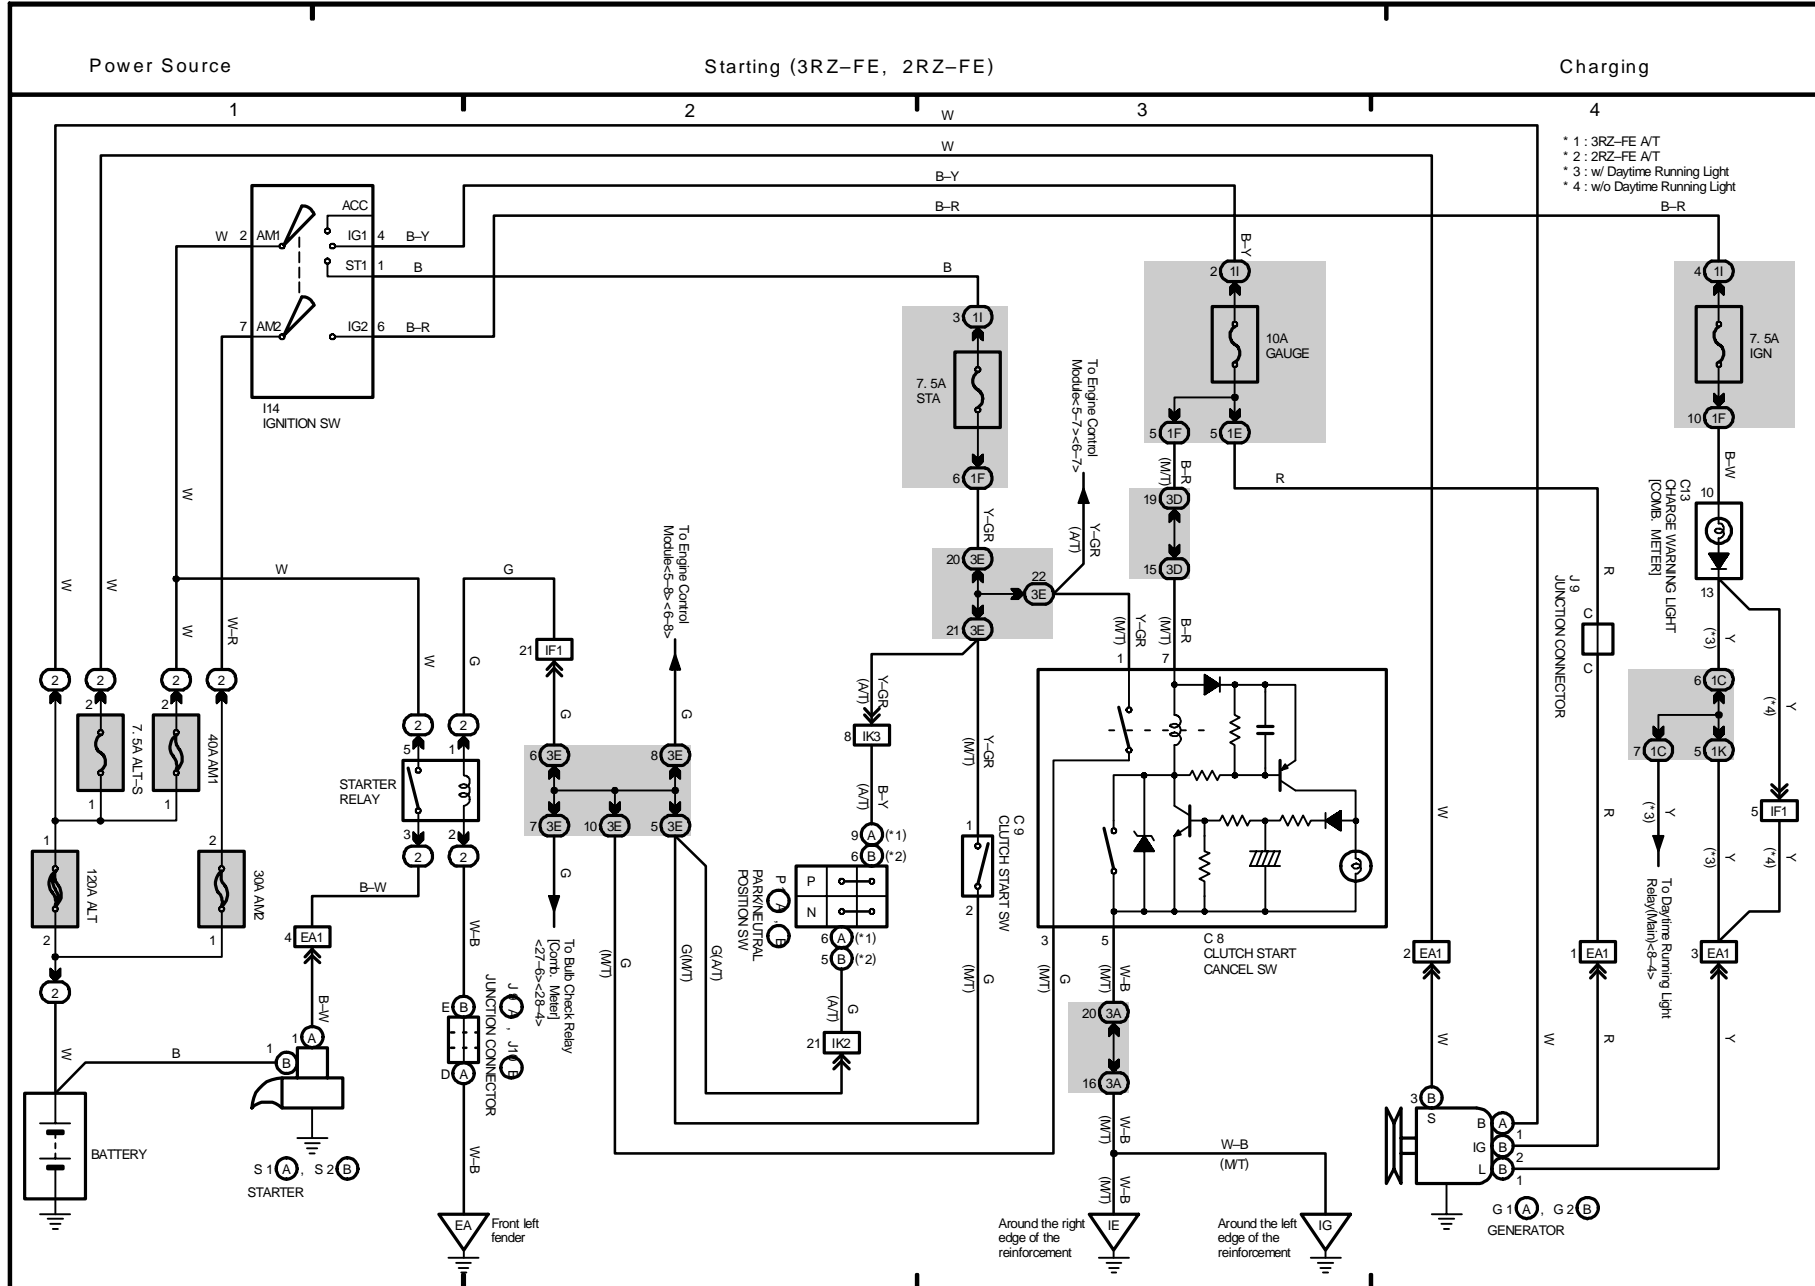

2003 TOYOTA TACOMA (EWD517U)


- \* 1 : 3RZ-FE AT
- \* 2 : 2RZ-FE AT
- \* 3 : w/ Daytime Running Light
- \* 4 : w/o Daytime Running Light



3 TOYOTA TACOMA


Power Source

Ignition (3RZ-FE, 2RZ-FE)

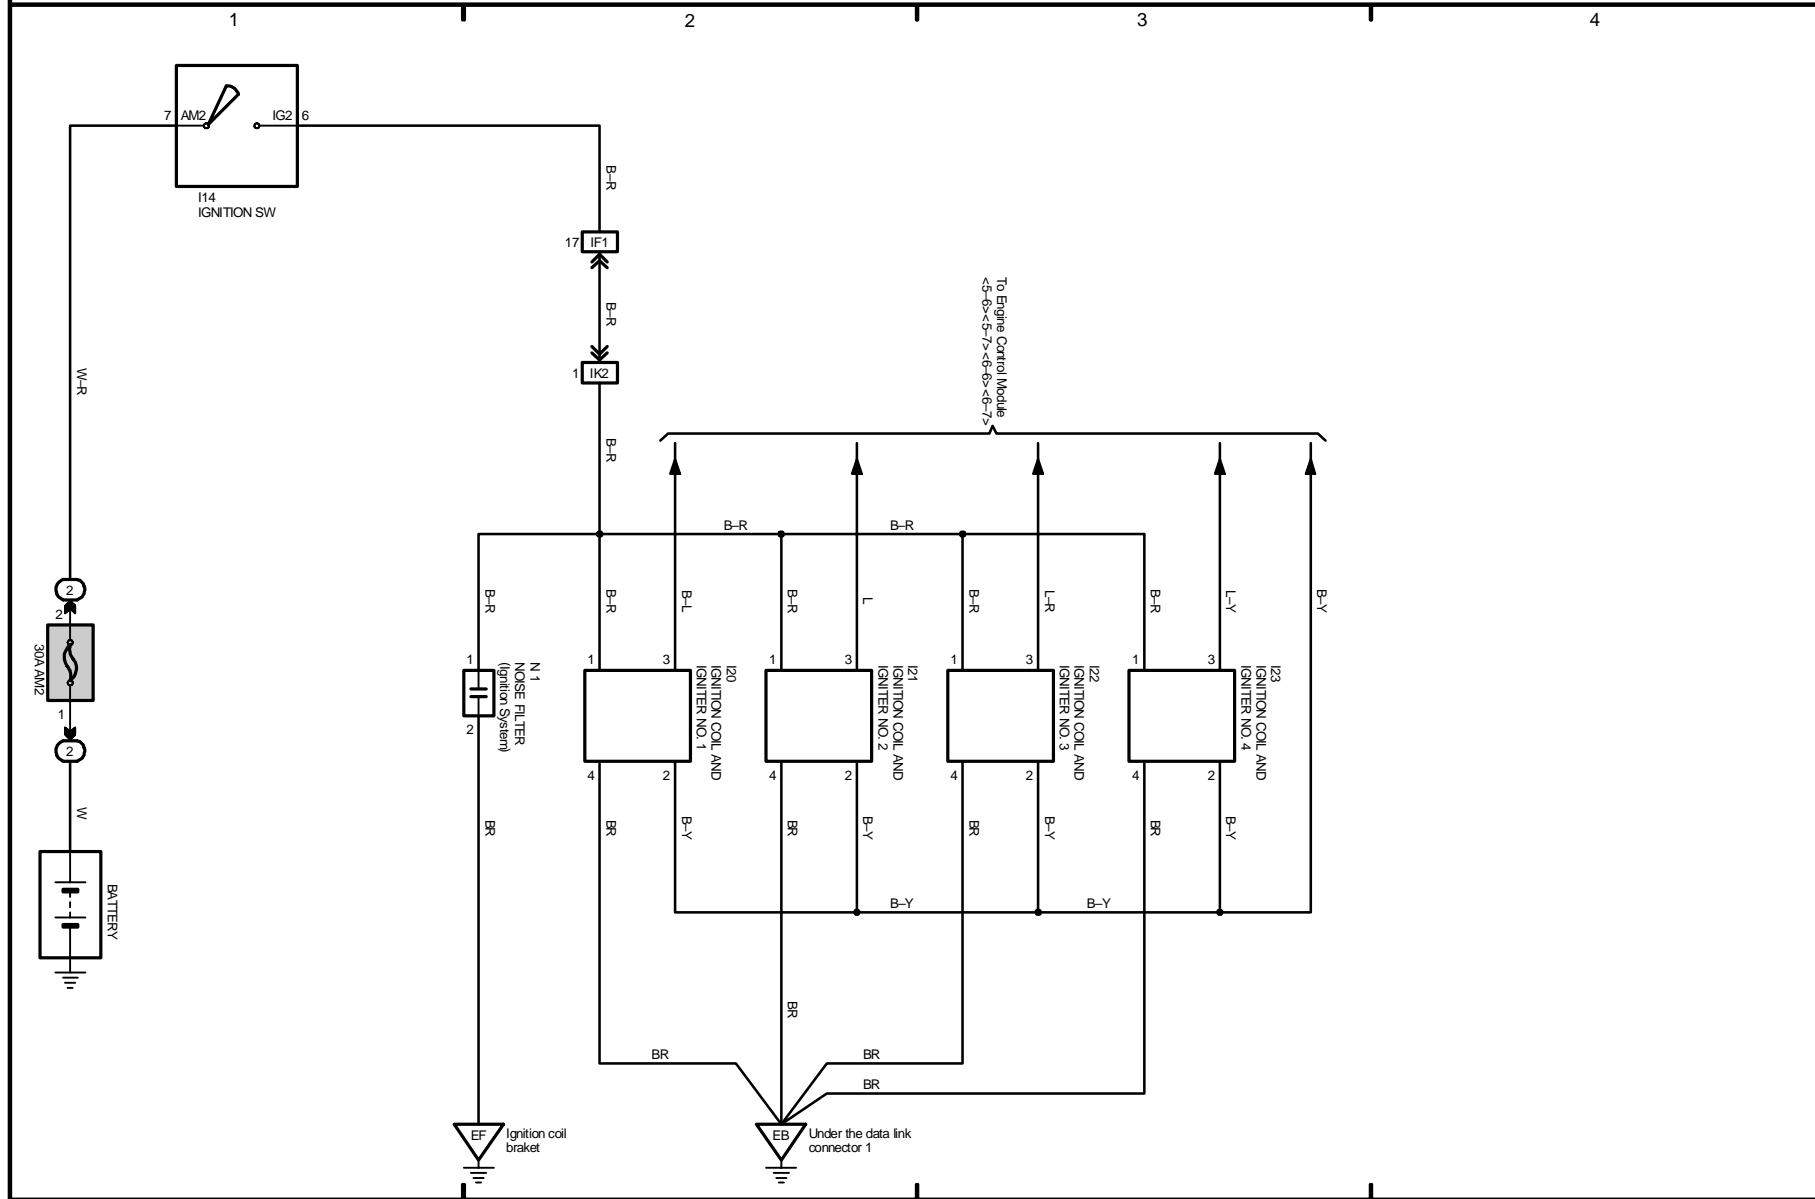

# M OVERALL ELECTRICAL WIRING DIAGRAM

---

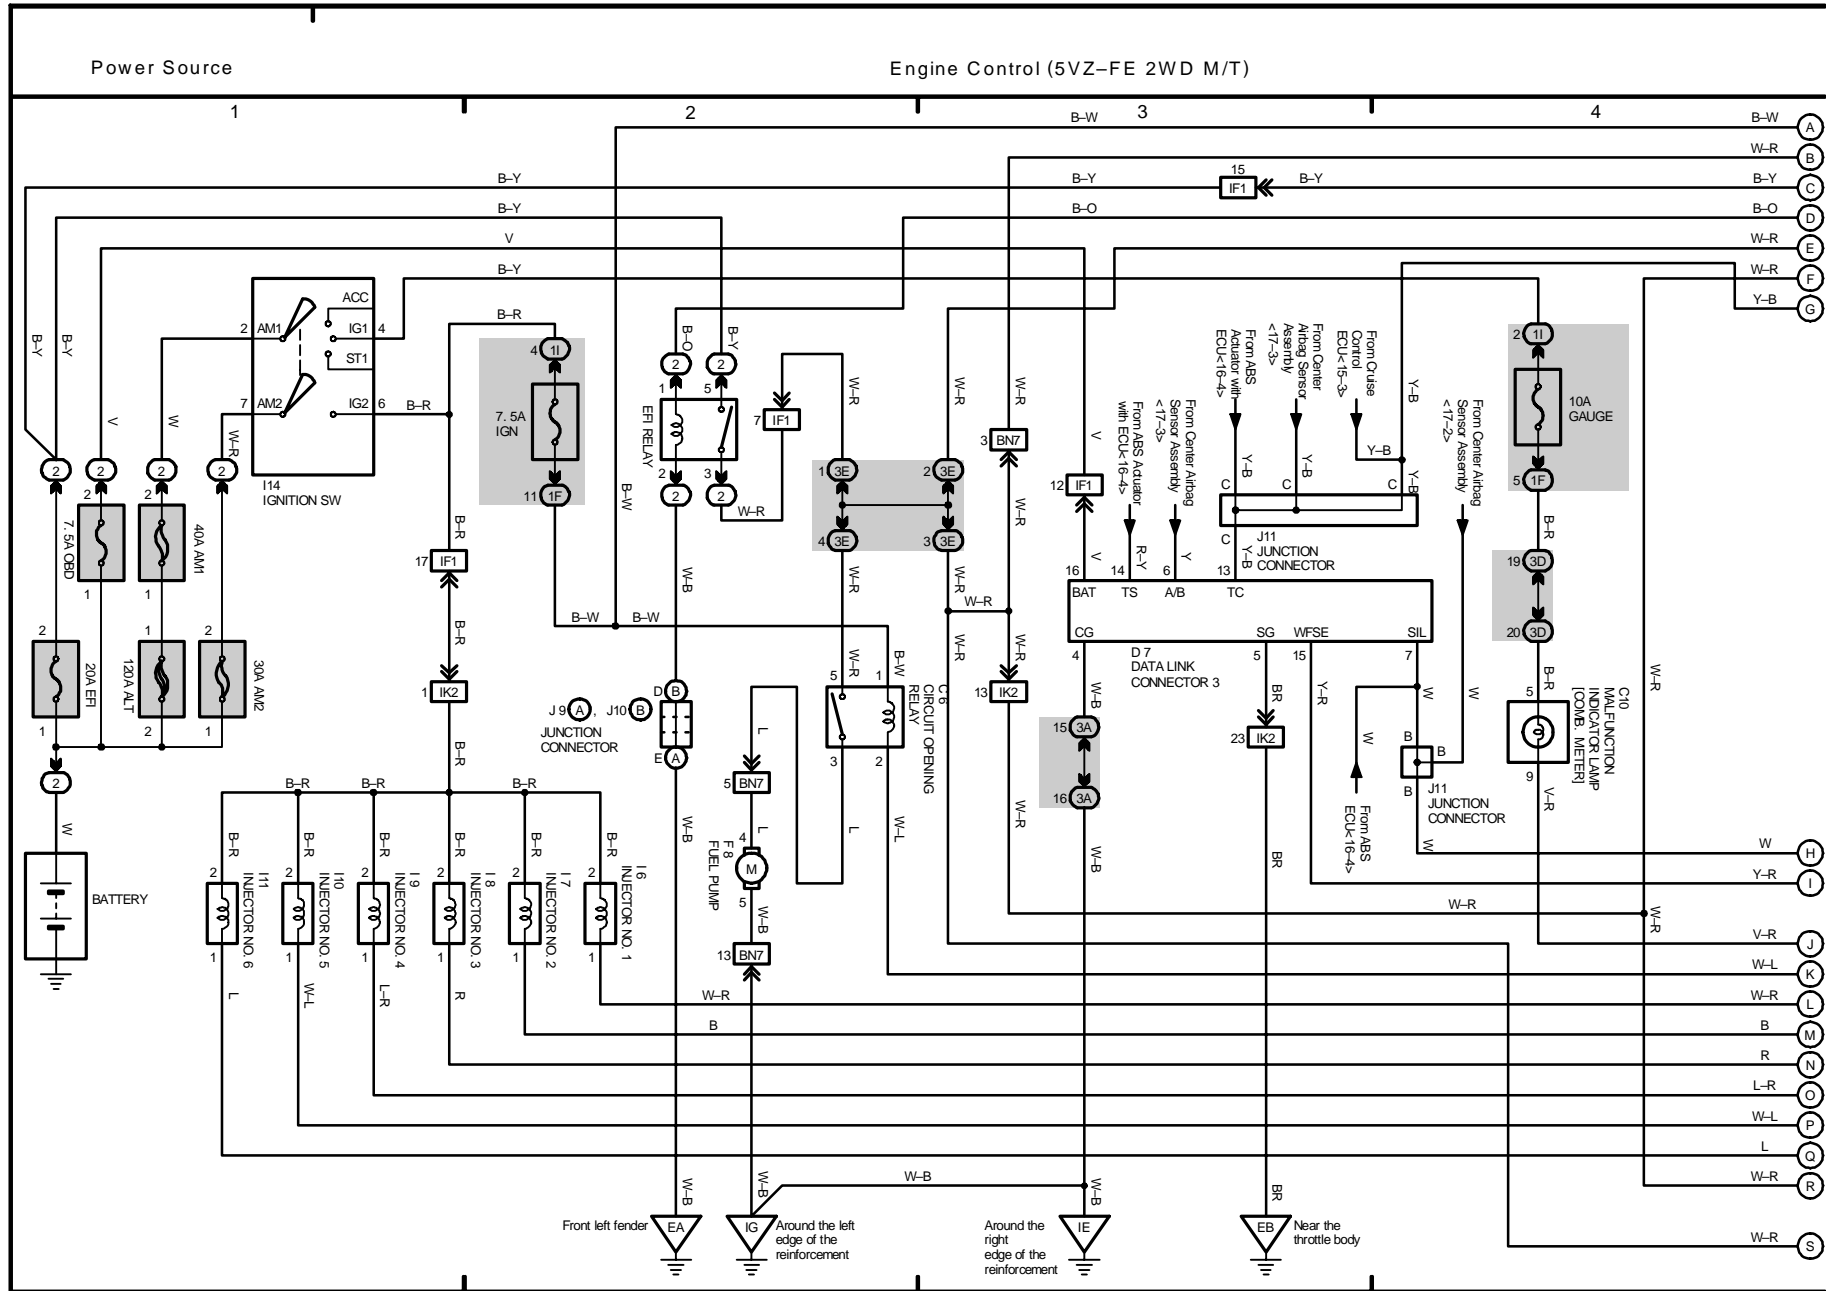


2003 TOYOTA TACOMA (EWD517J)






Engine Control (5VZ-FE 2WD M/T)

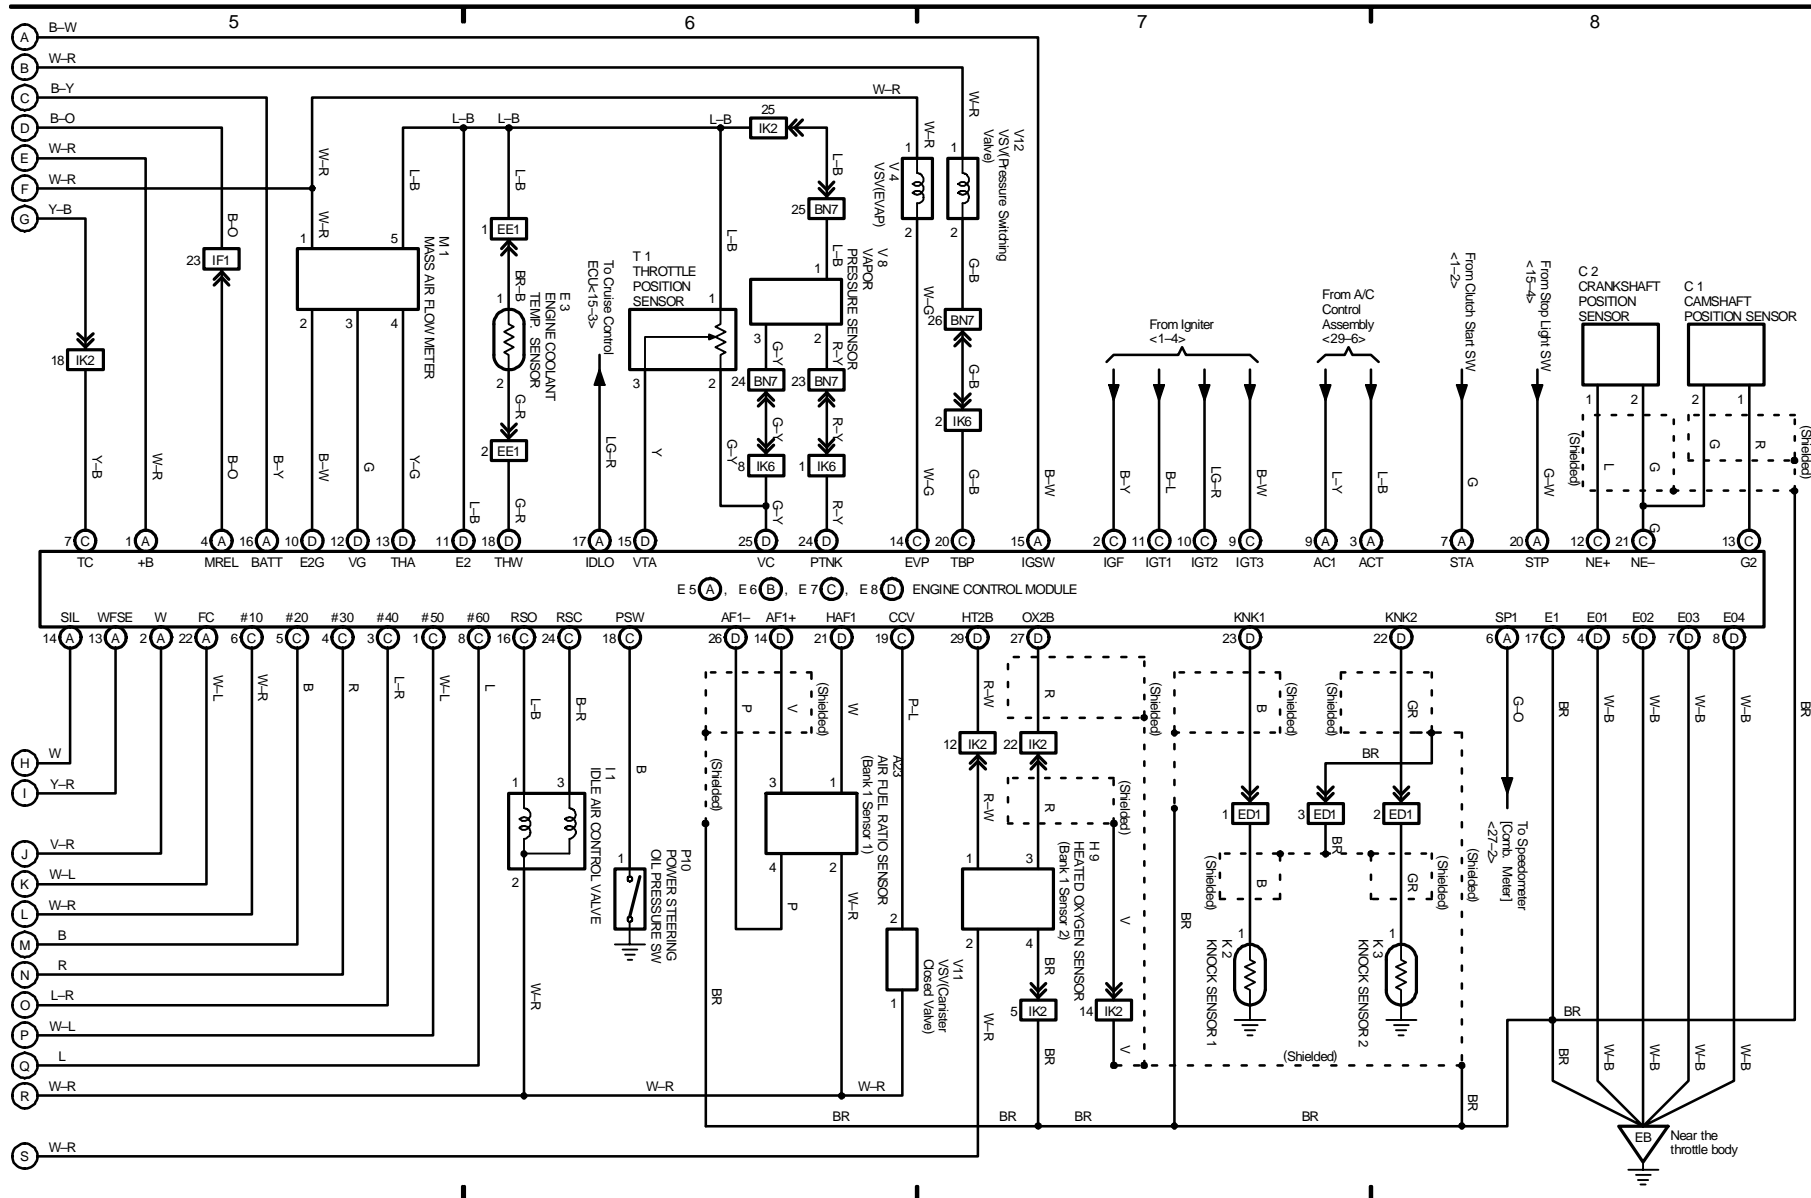

## M OVERALL ELECTRICAL WIRING DIAGRAM

---

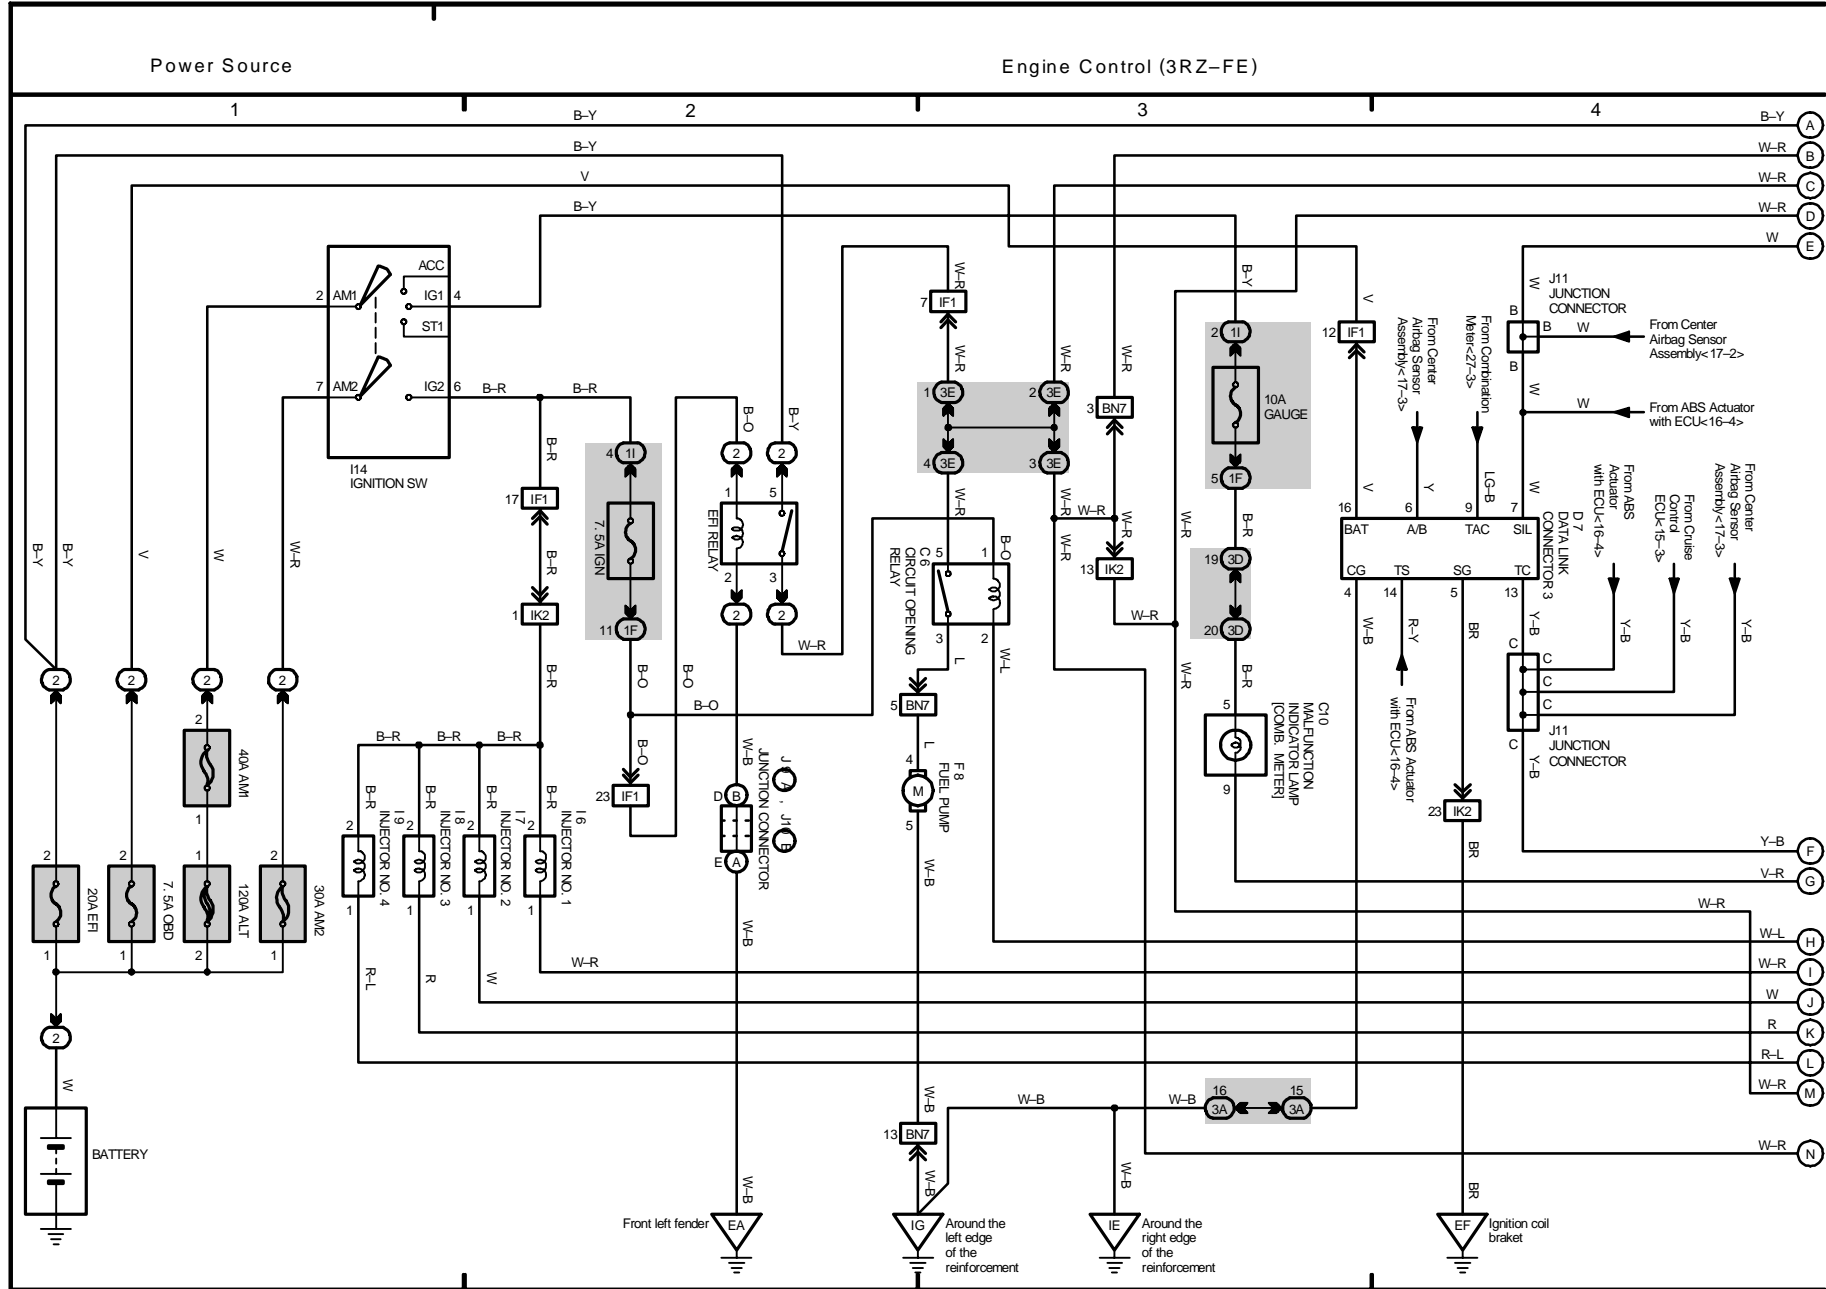


2003 TOYOTA TACOMA (EWD517U)



Engine Control (3RZ-FE)

\* 1: 4WD  
 \* 2: Shielded

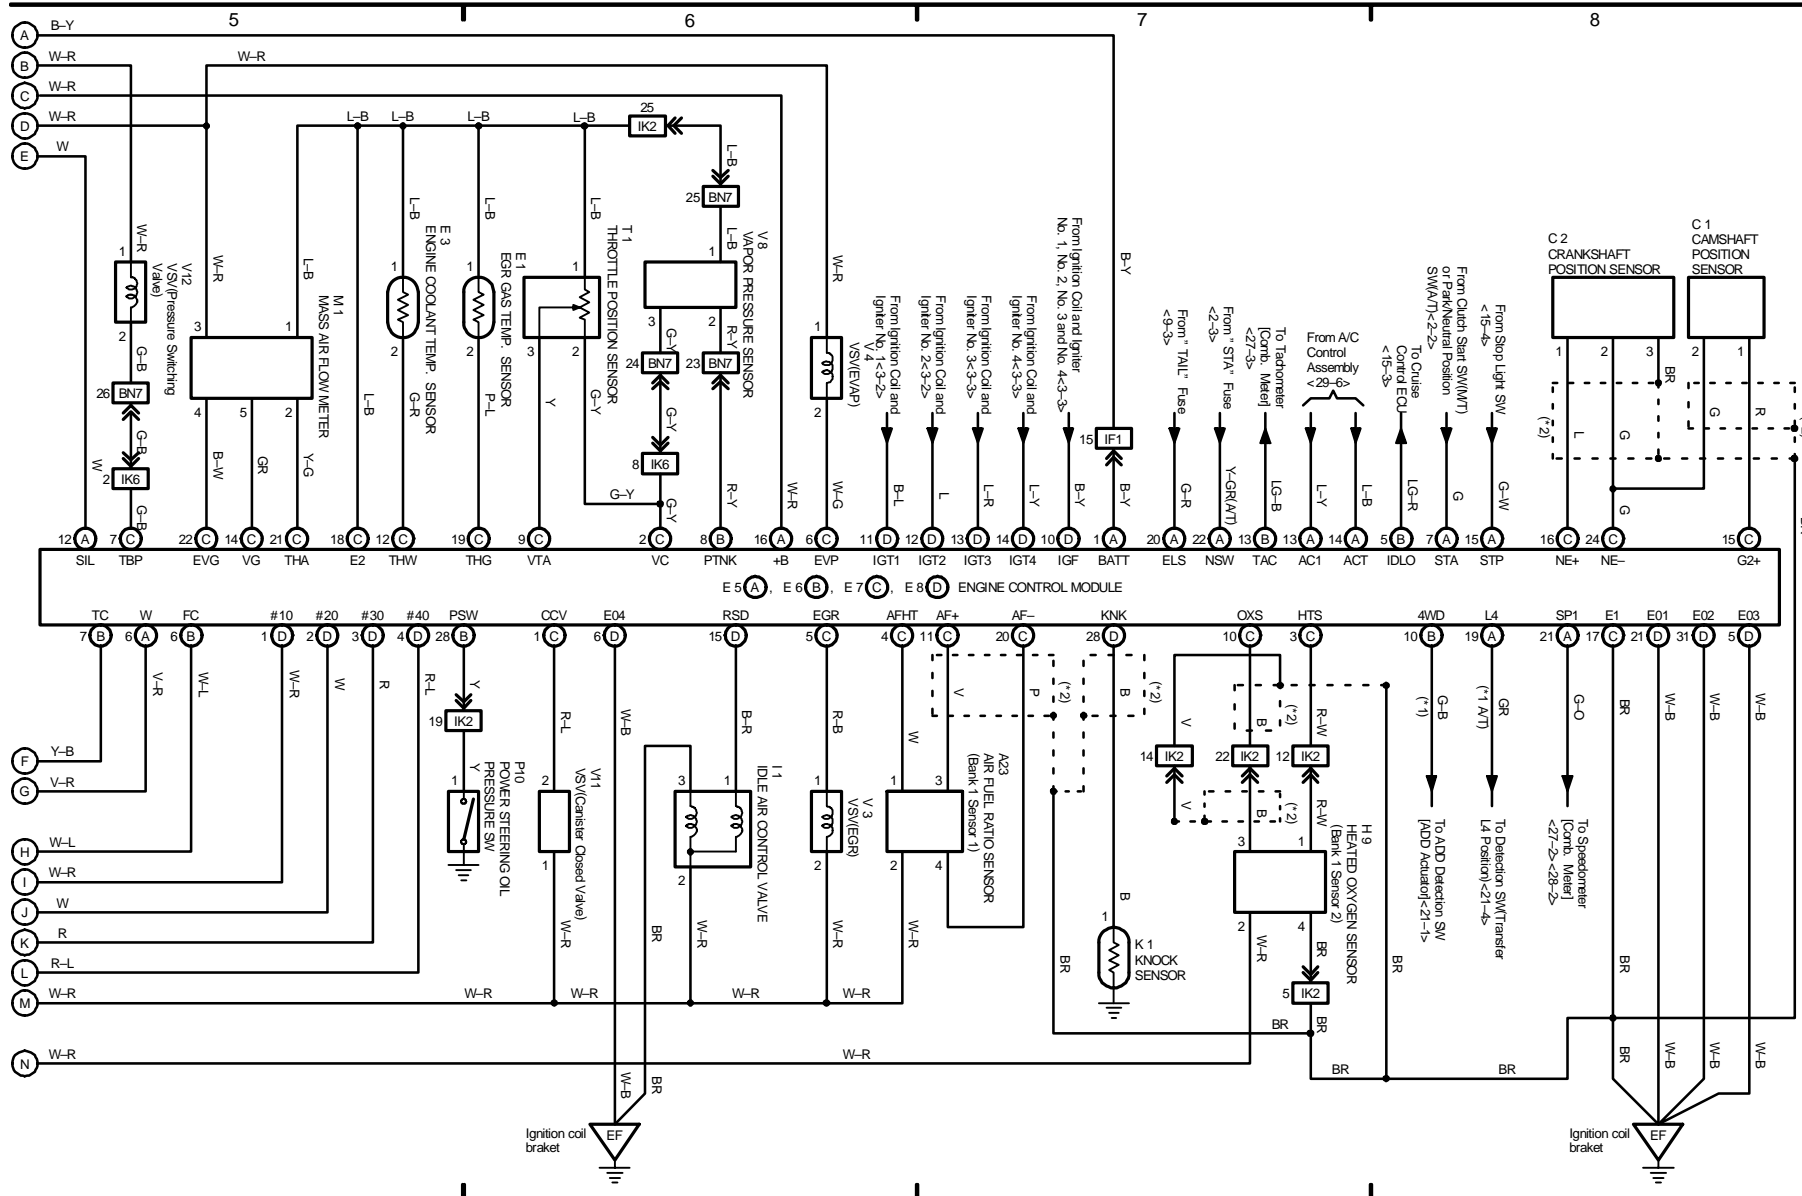

# M OVERALL ELECTRICAL WIRING DIAGRAM

---








Engine Control (2RZ-FE)

\* 1: Shielded

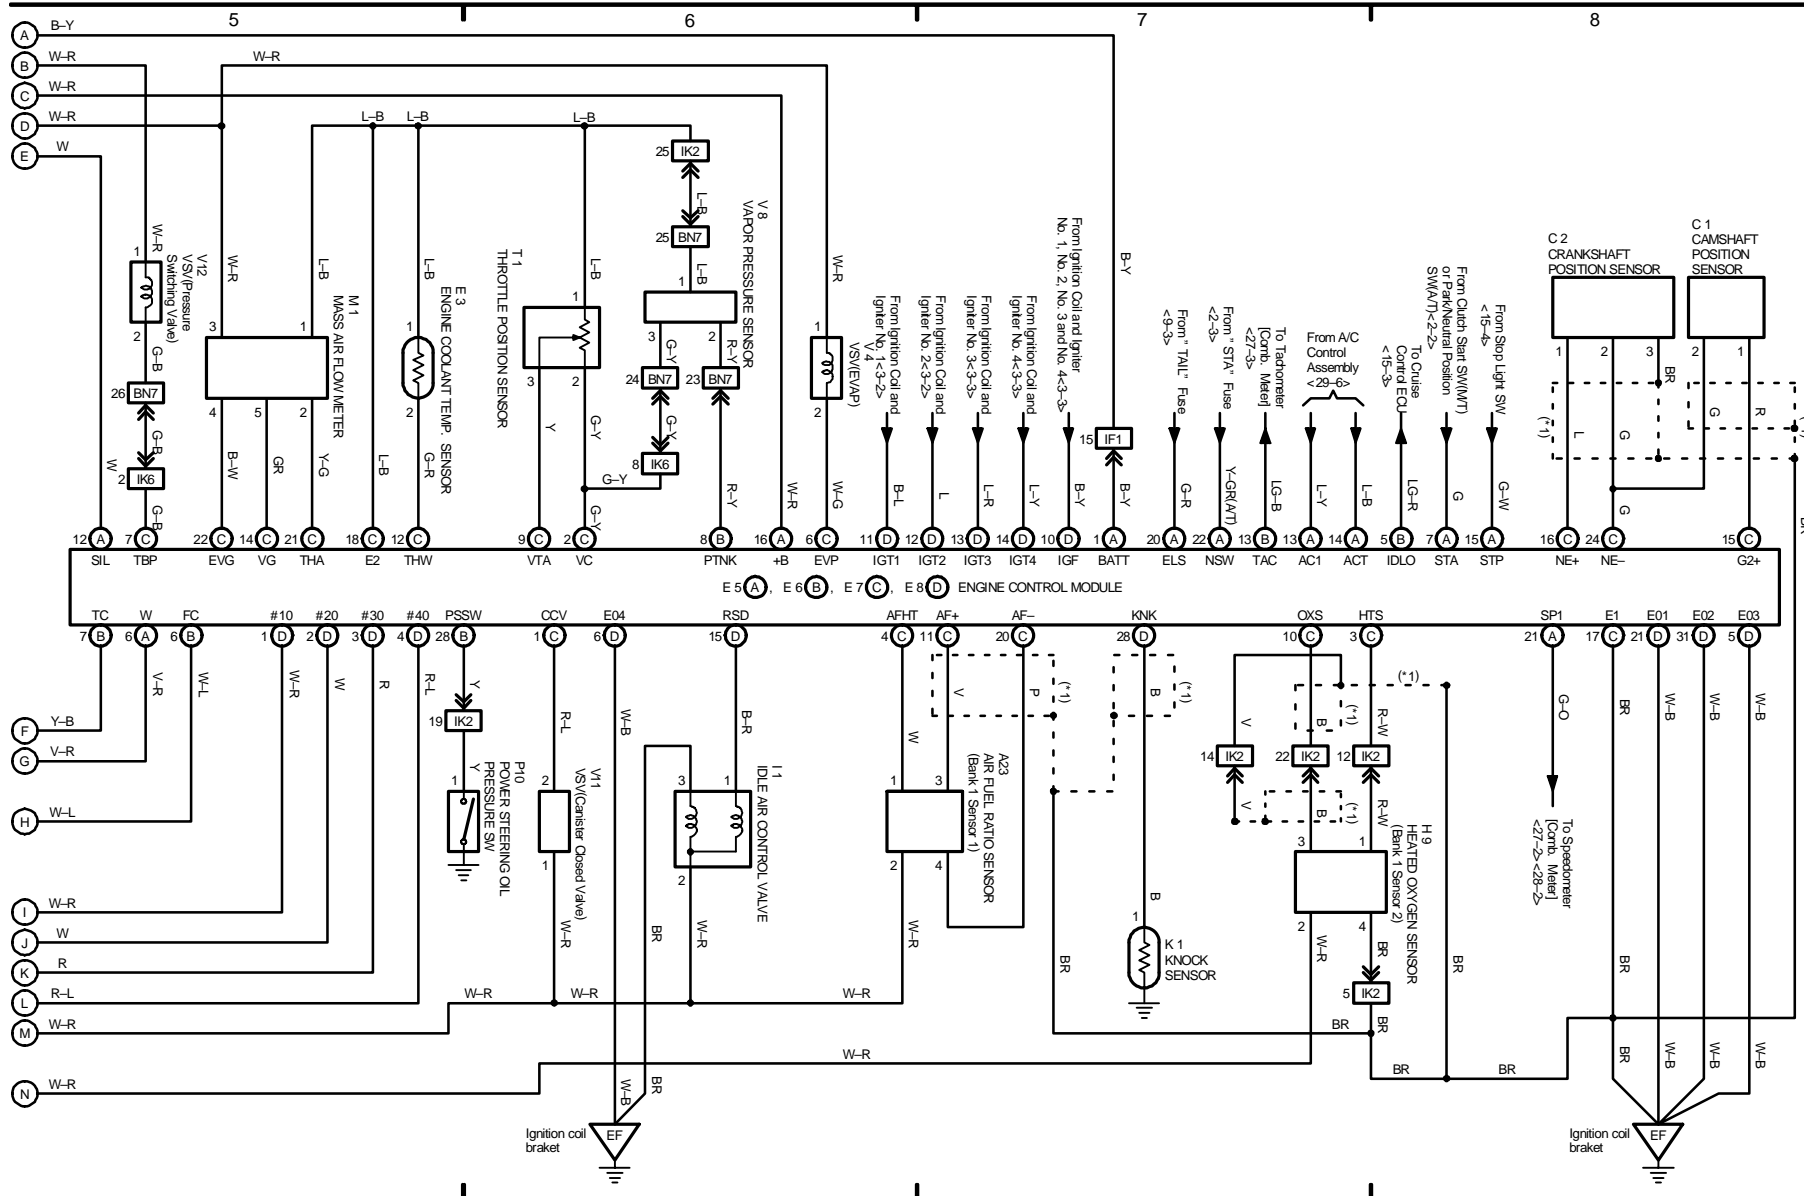


# M OVERALL ELECTRICAL WIRING DIAGRAM

---

7 TOYOTA TACOMA

Power Source

Headlight (w/o Daytime Running Light)

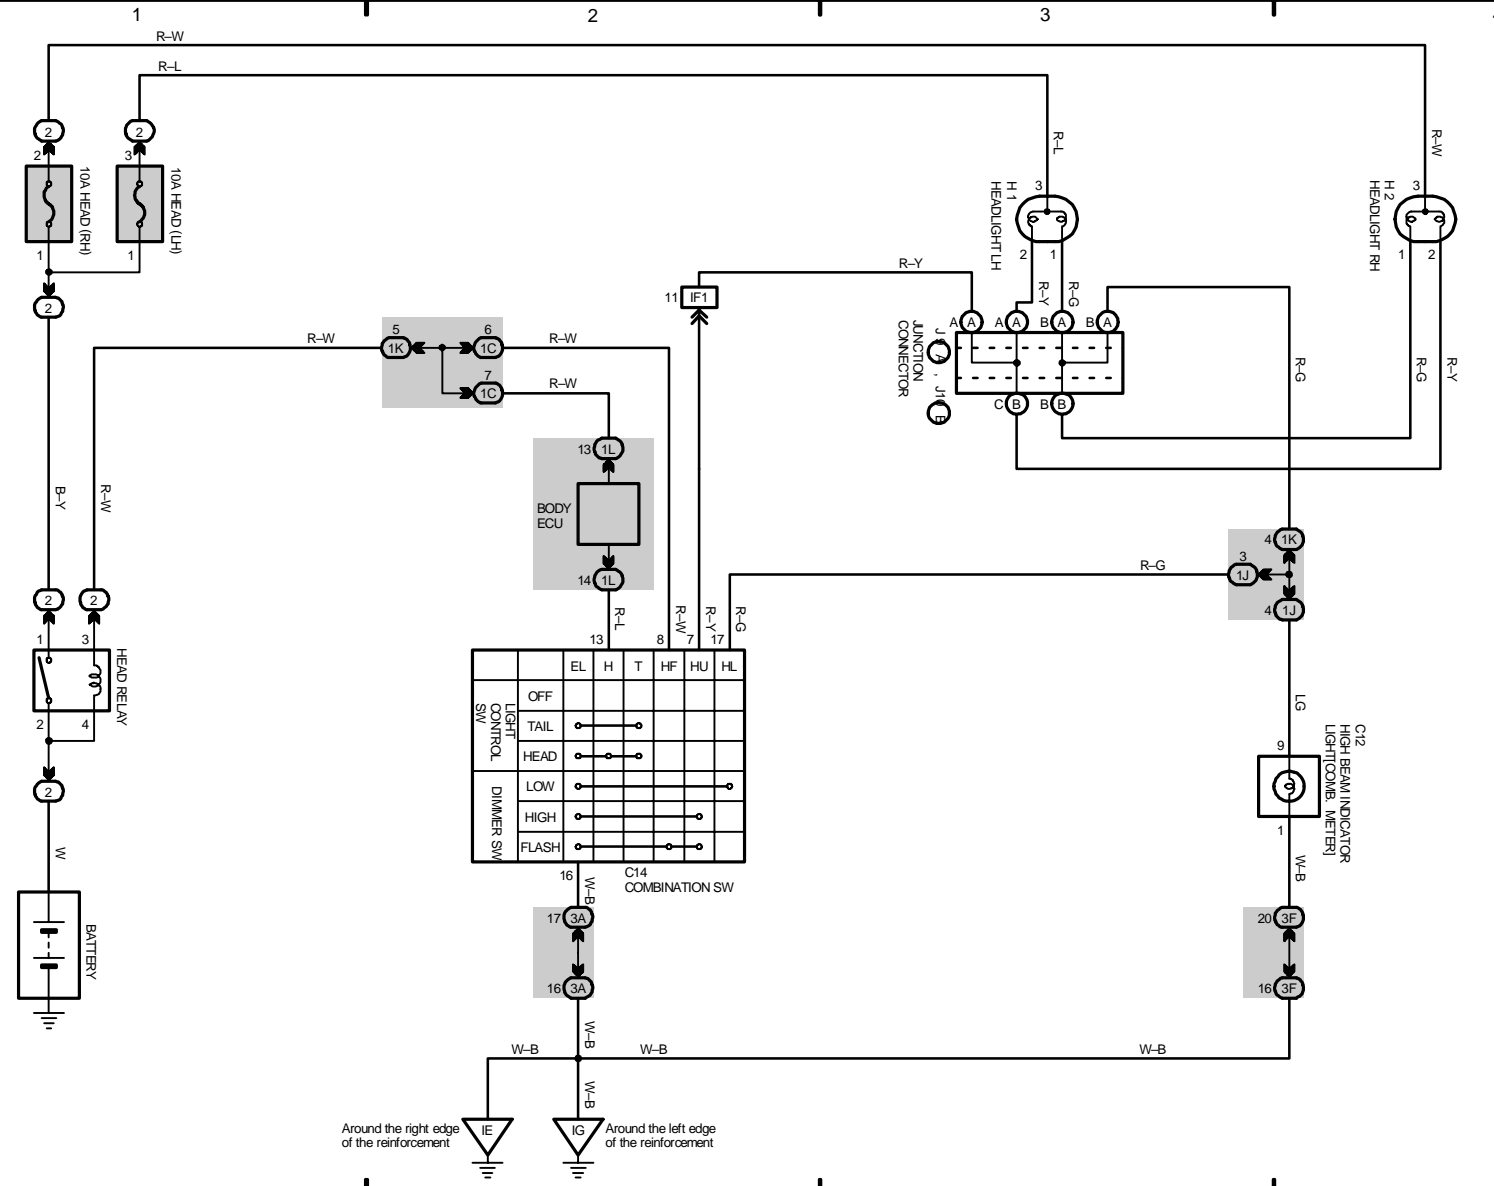

	EL	H	T	HF	HU	HL
OFF						
TAIL						
HEAD						
LOW						
HIGH						
FLASH						

2003 TOYOTA TACOMA (EWD517U)






# M OVERALL ELECTRICAL WIRING DIAGRAM


---

9 TOYOTA TACOMA

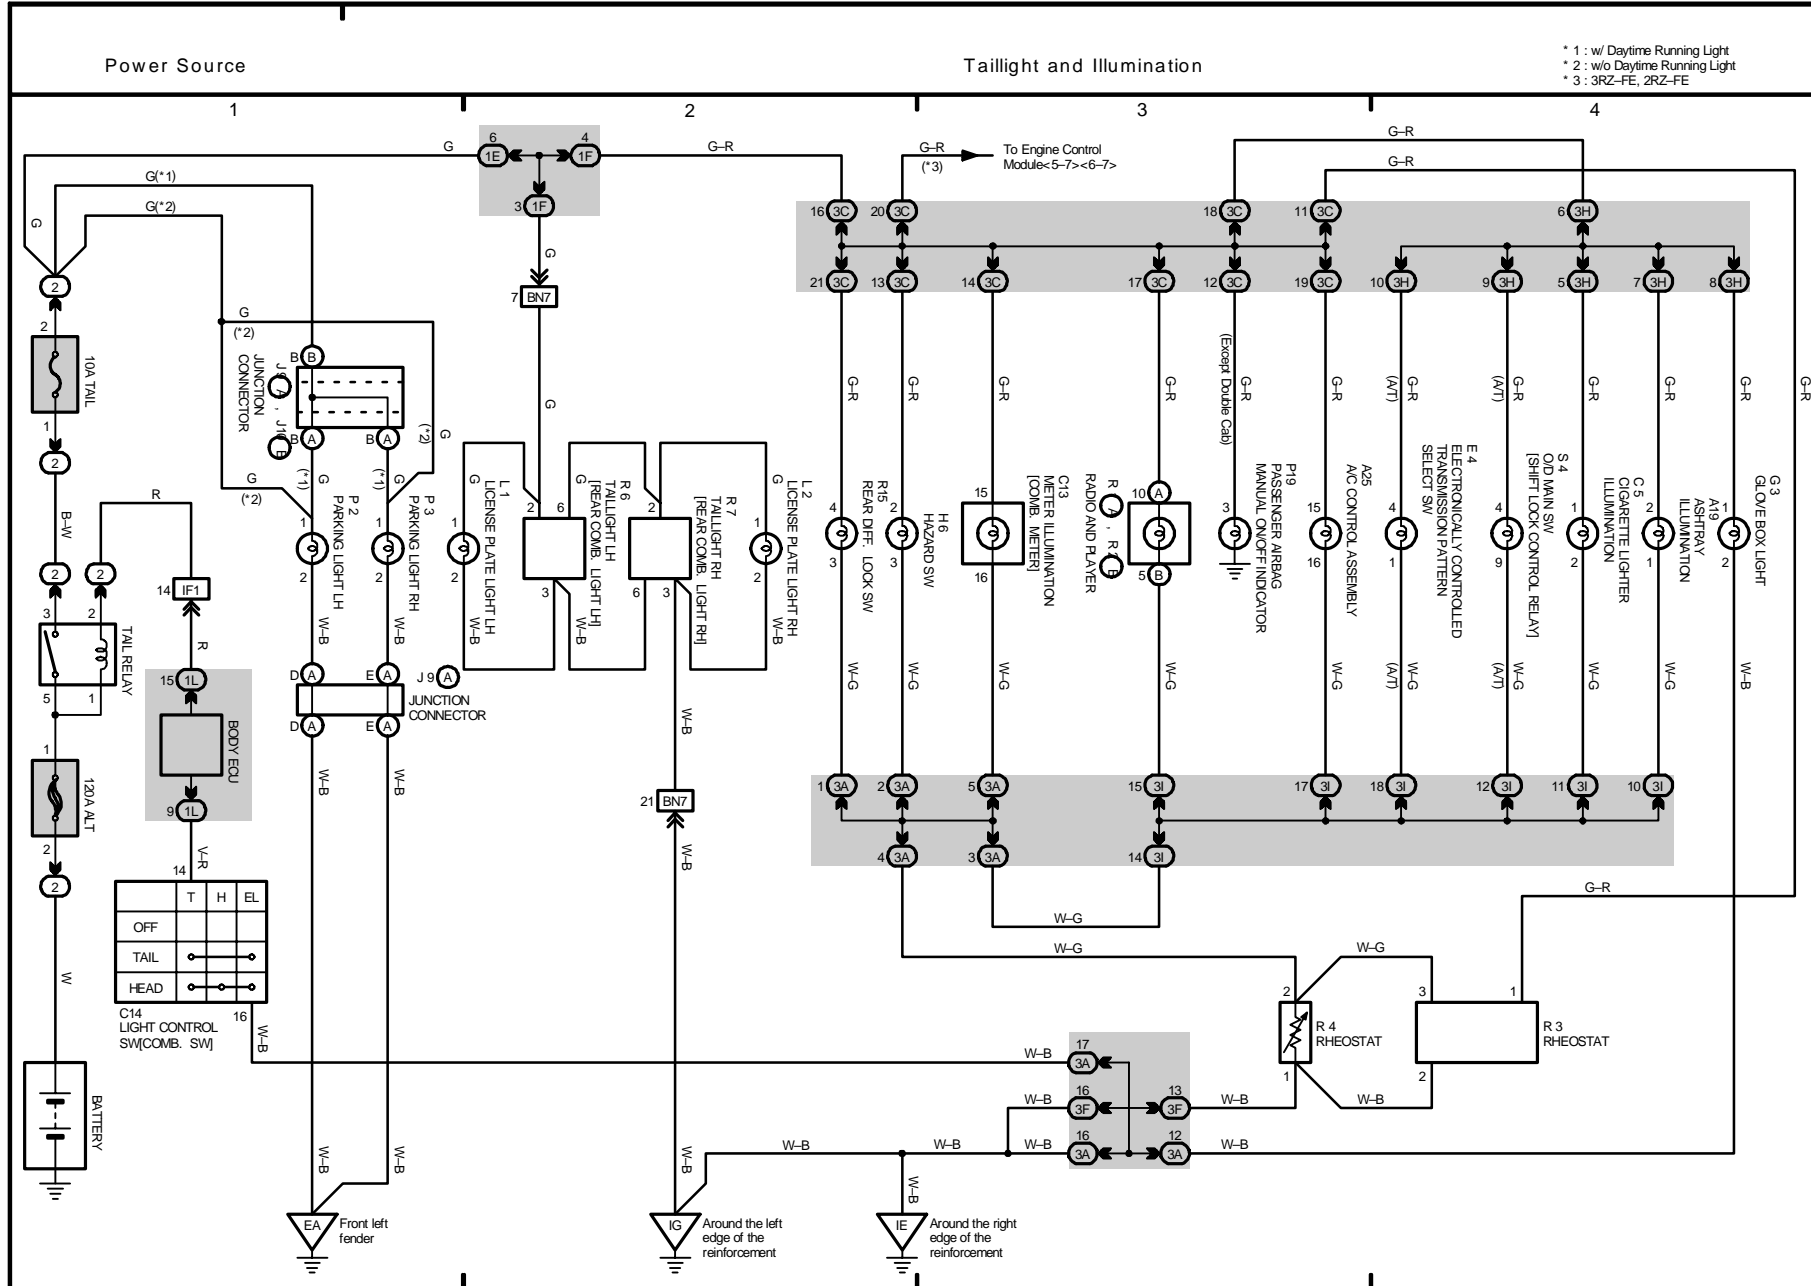






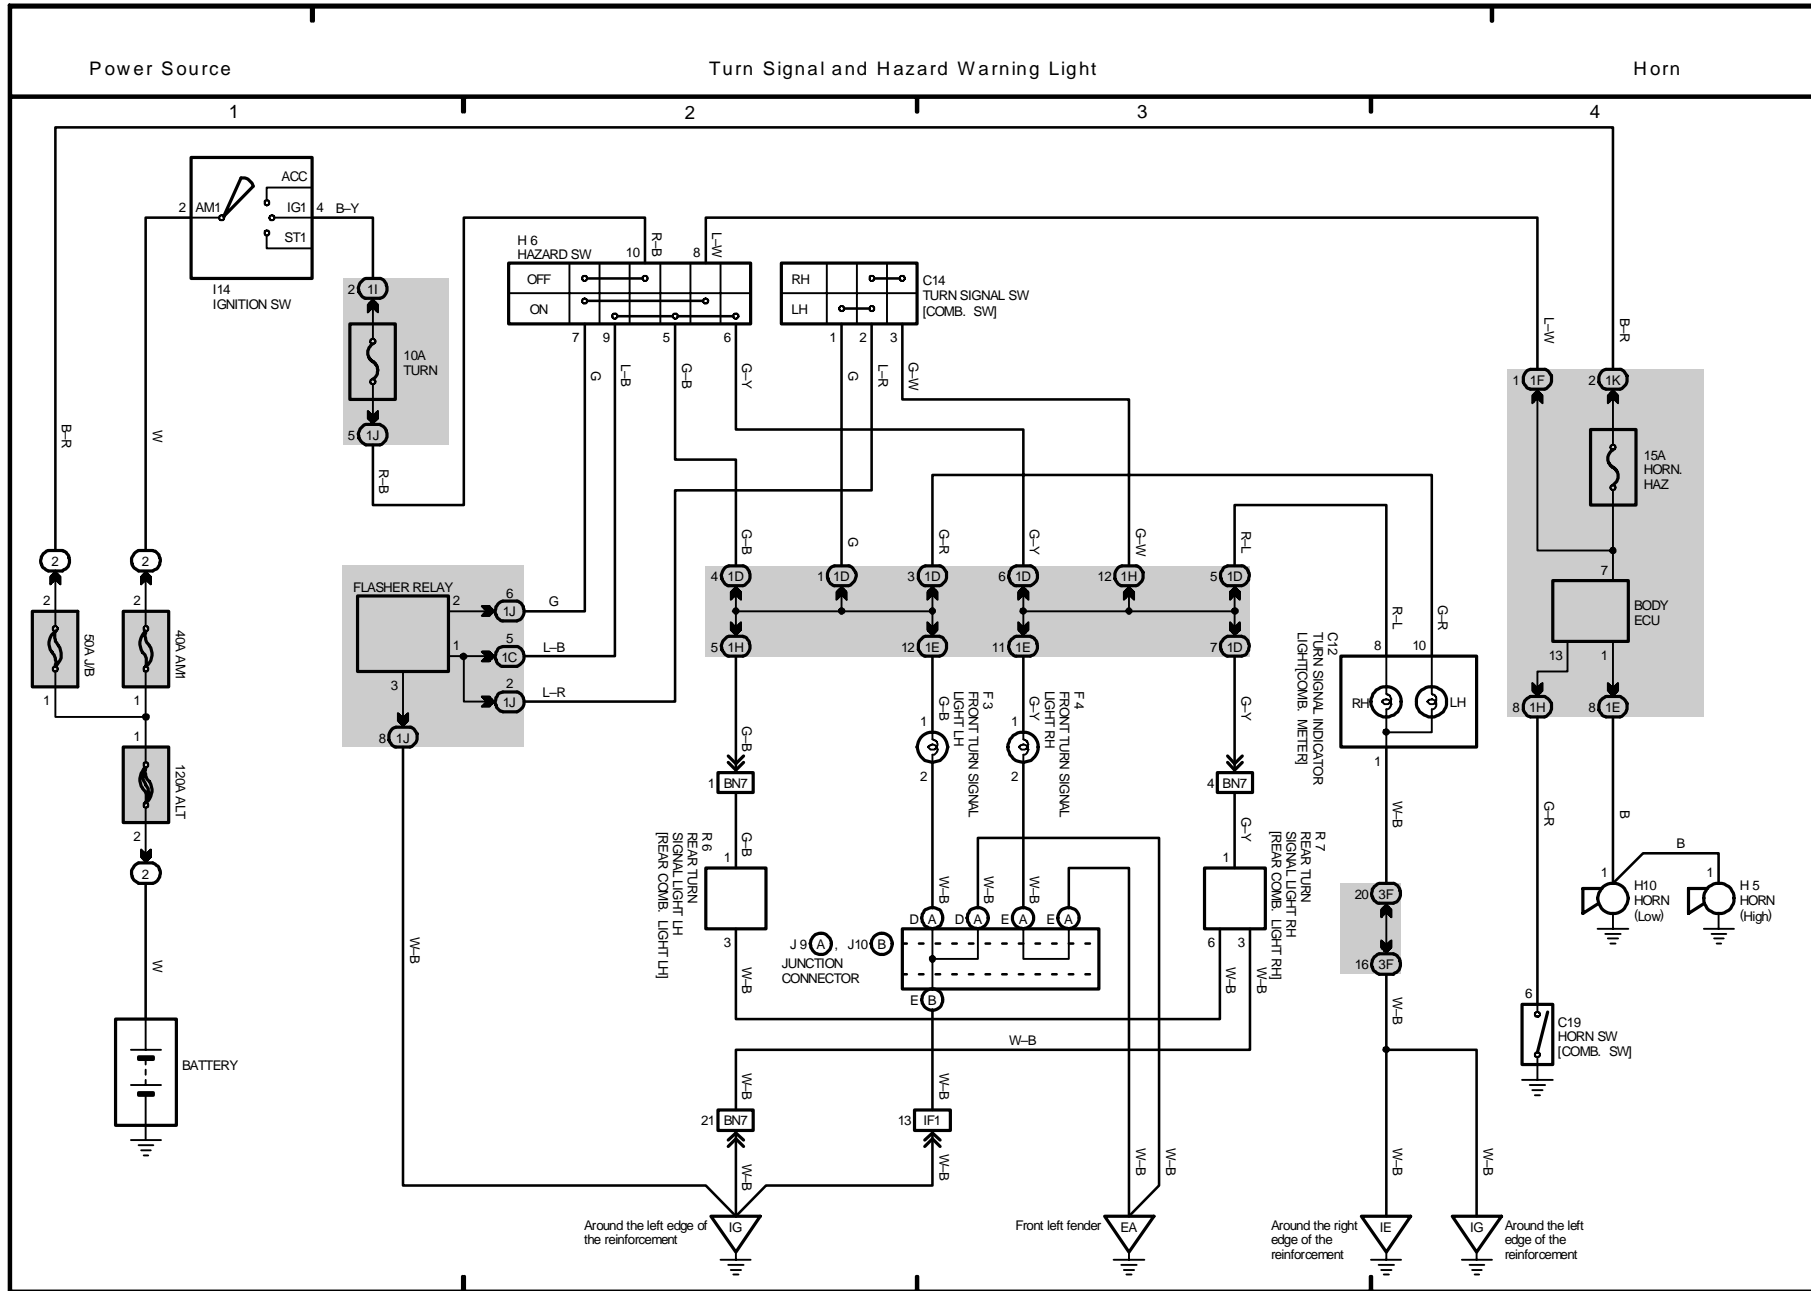

# M OVERALL ELECTRICAL WIRING DIAGRAM

---

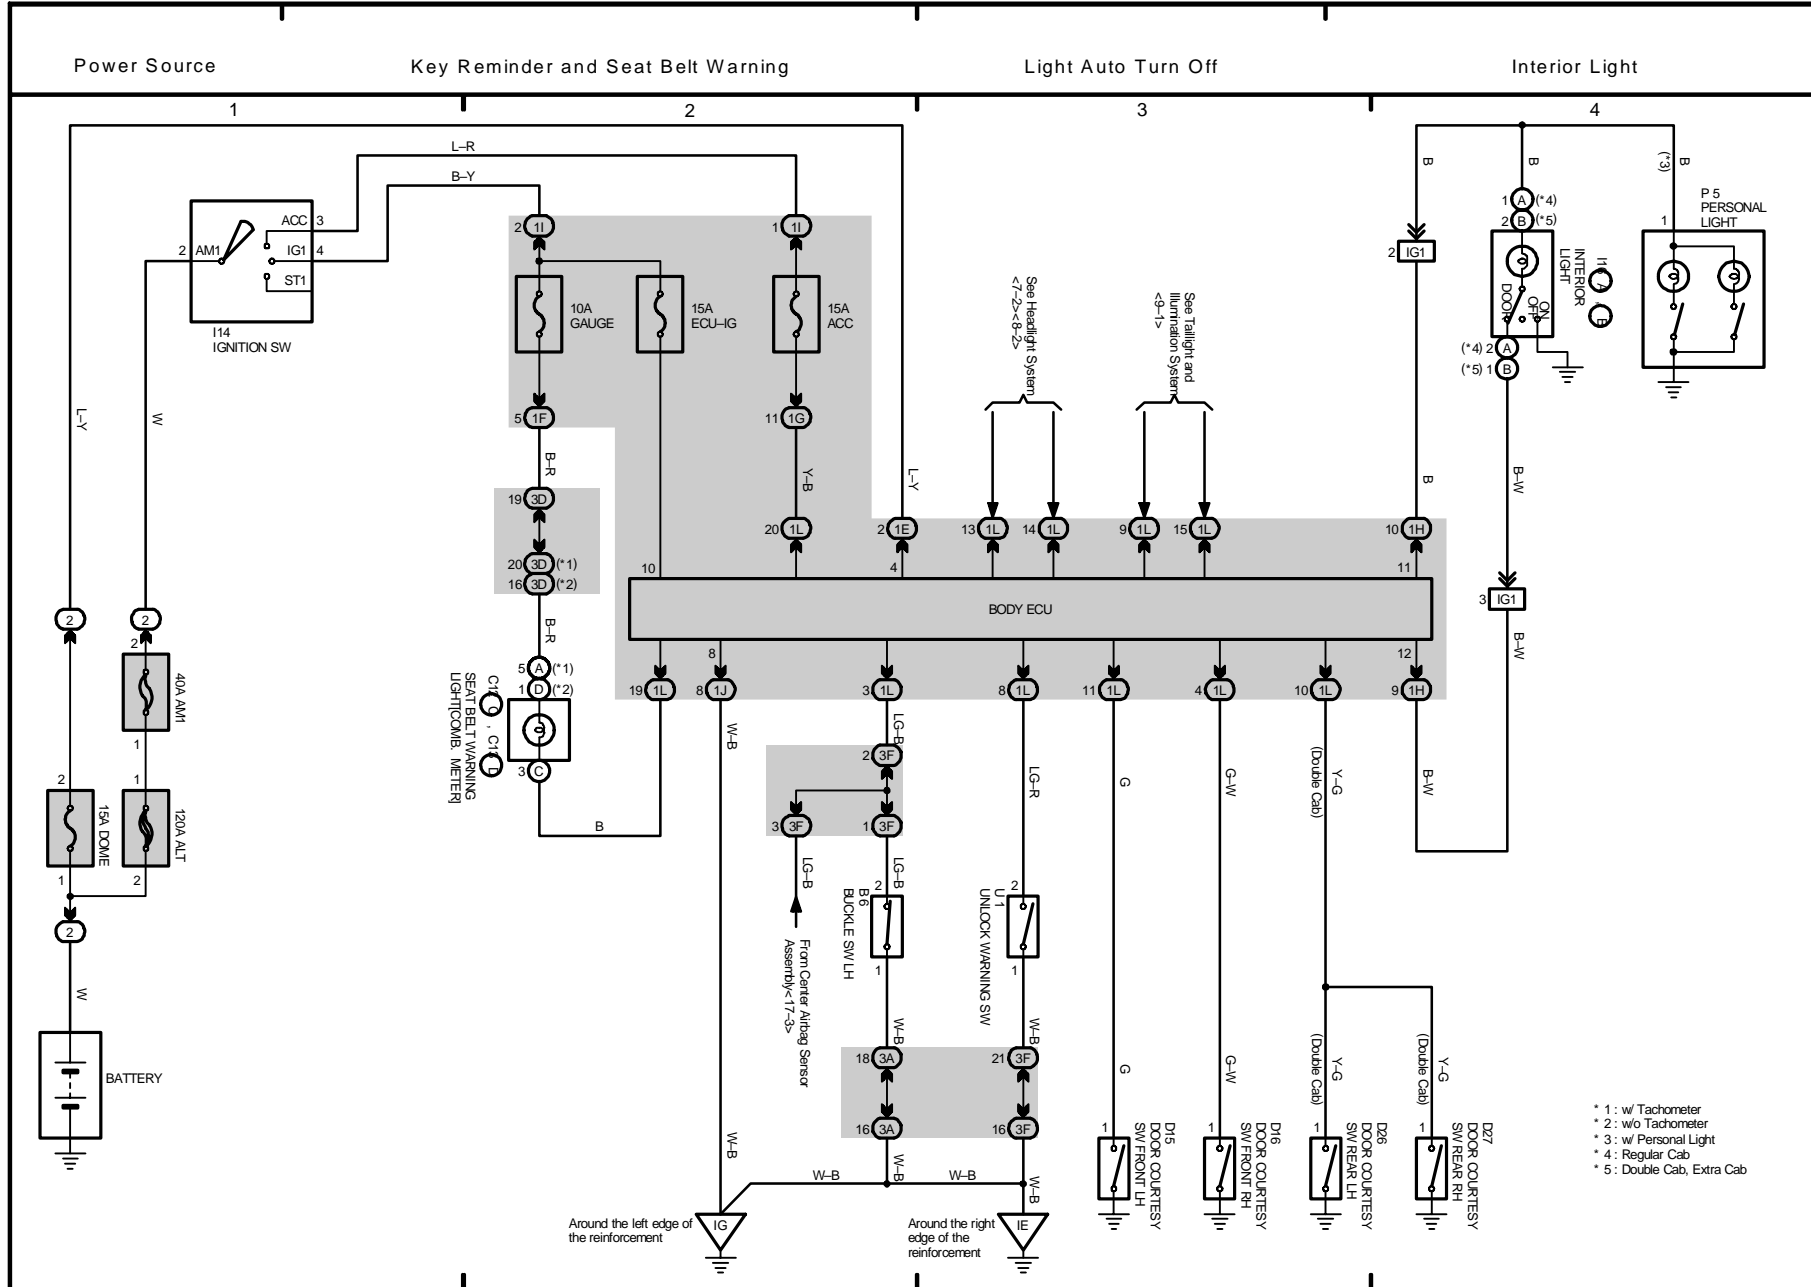


- \* 1 : w/ Tachometer
- \* 2 : w/o Tachometer
- \* 3 : w/ Personal Light
- \* 4 : Regular Cab
- \* 5 : Double Cab, Extra Cab



# **M OVERALL ELECTRICAL WIRING DIAGRAM**

---


2003 TOYOTA TACOMA (EWDS17U)

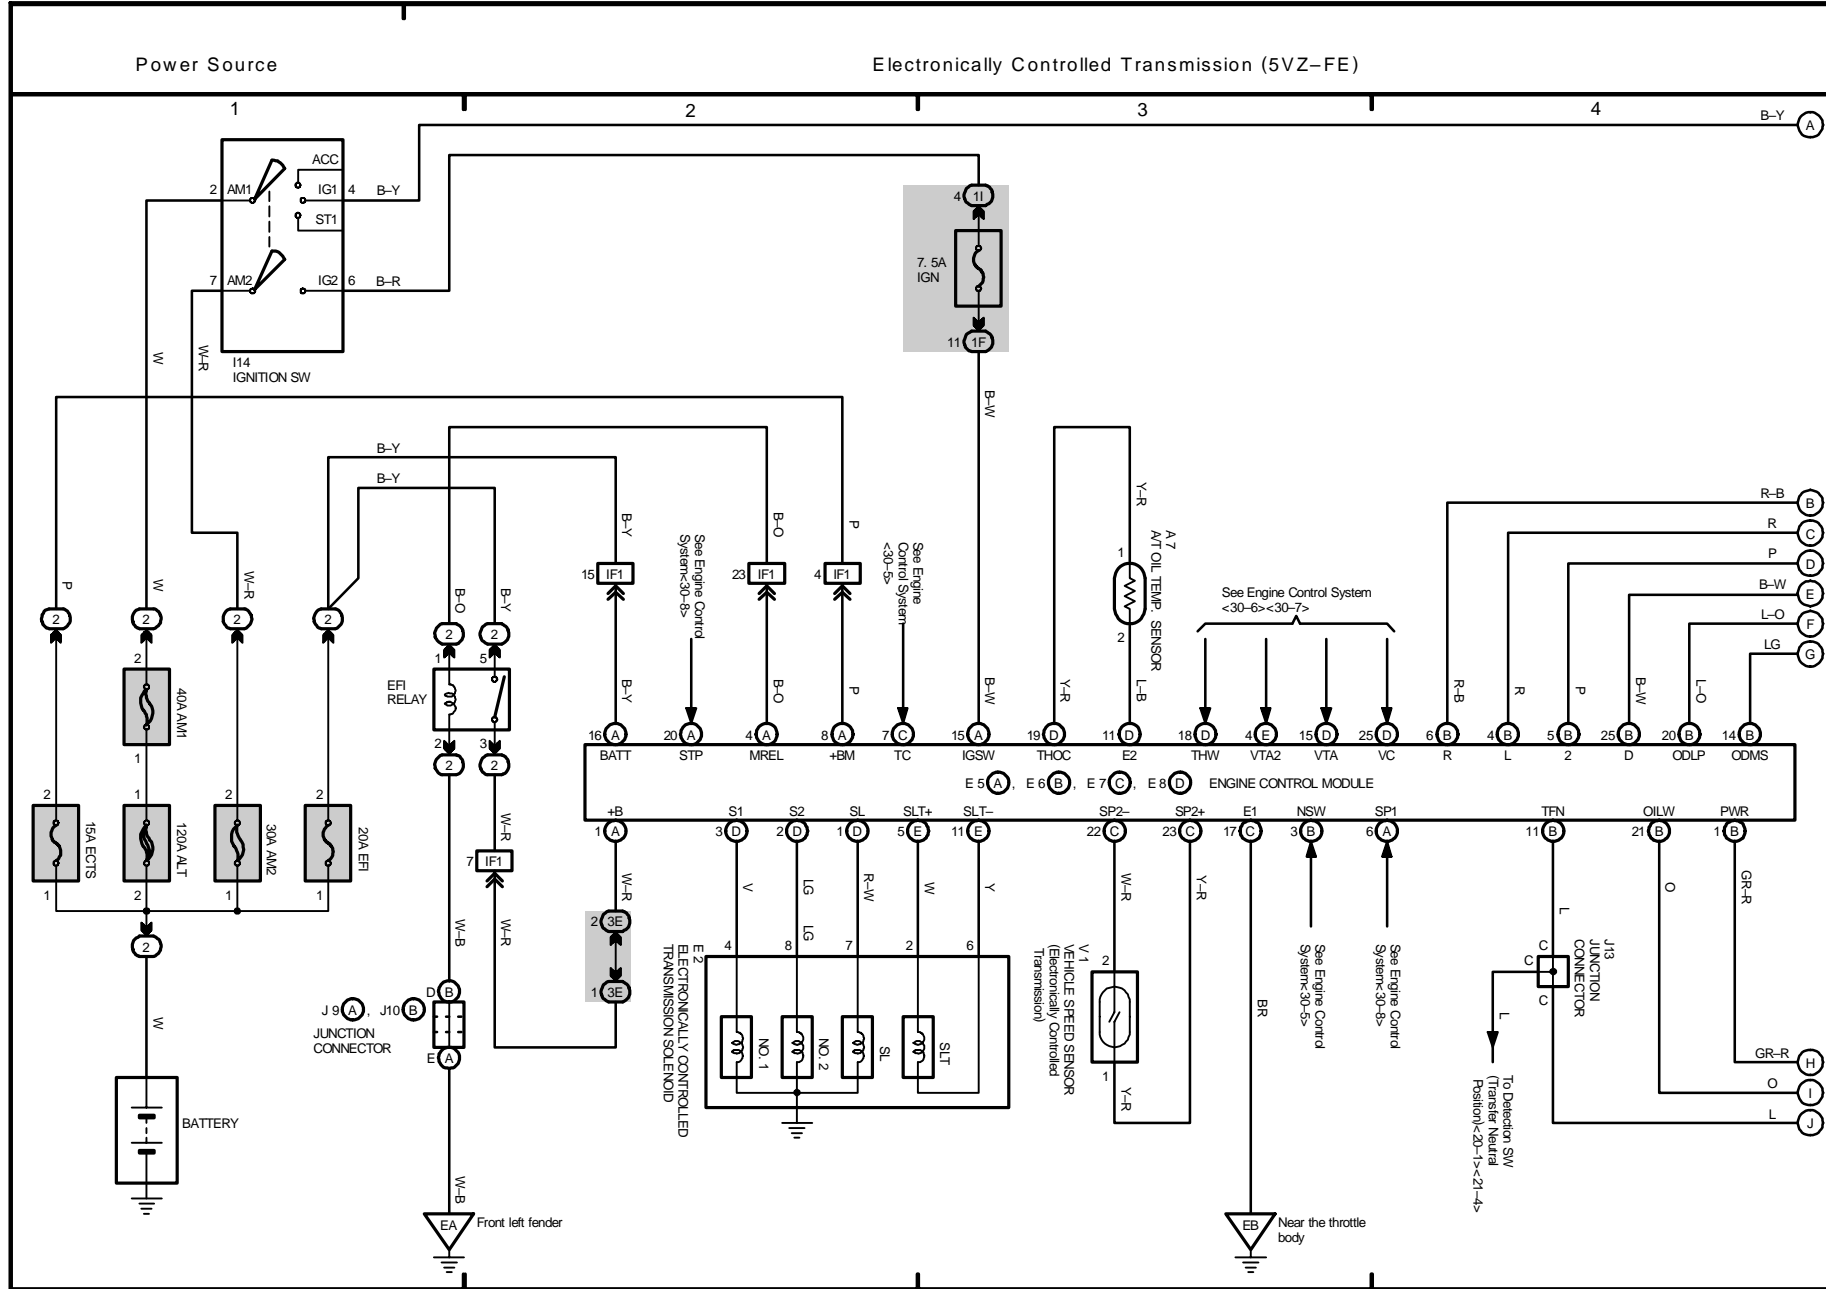






Electronically Controlled Transmission (5VZ-FE)

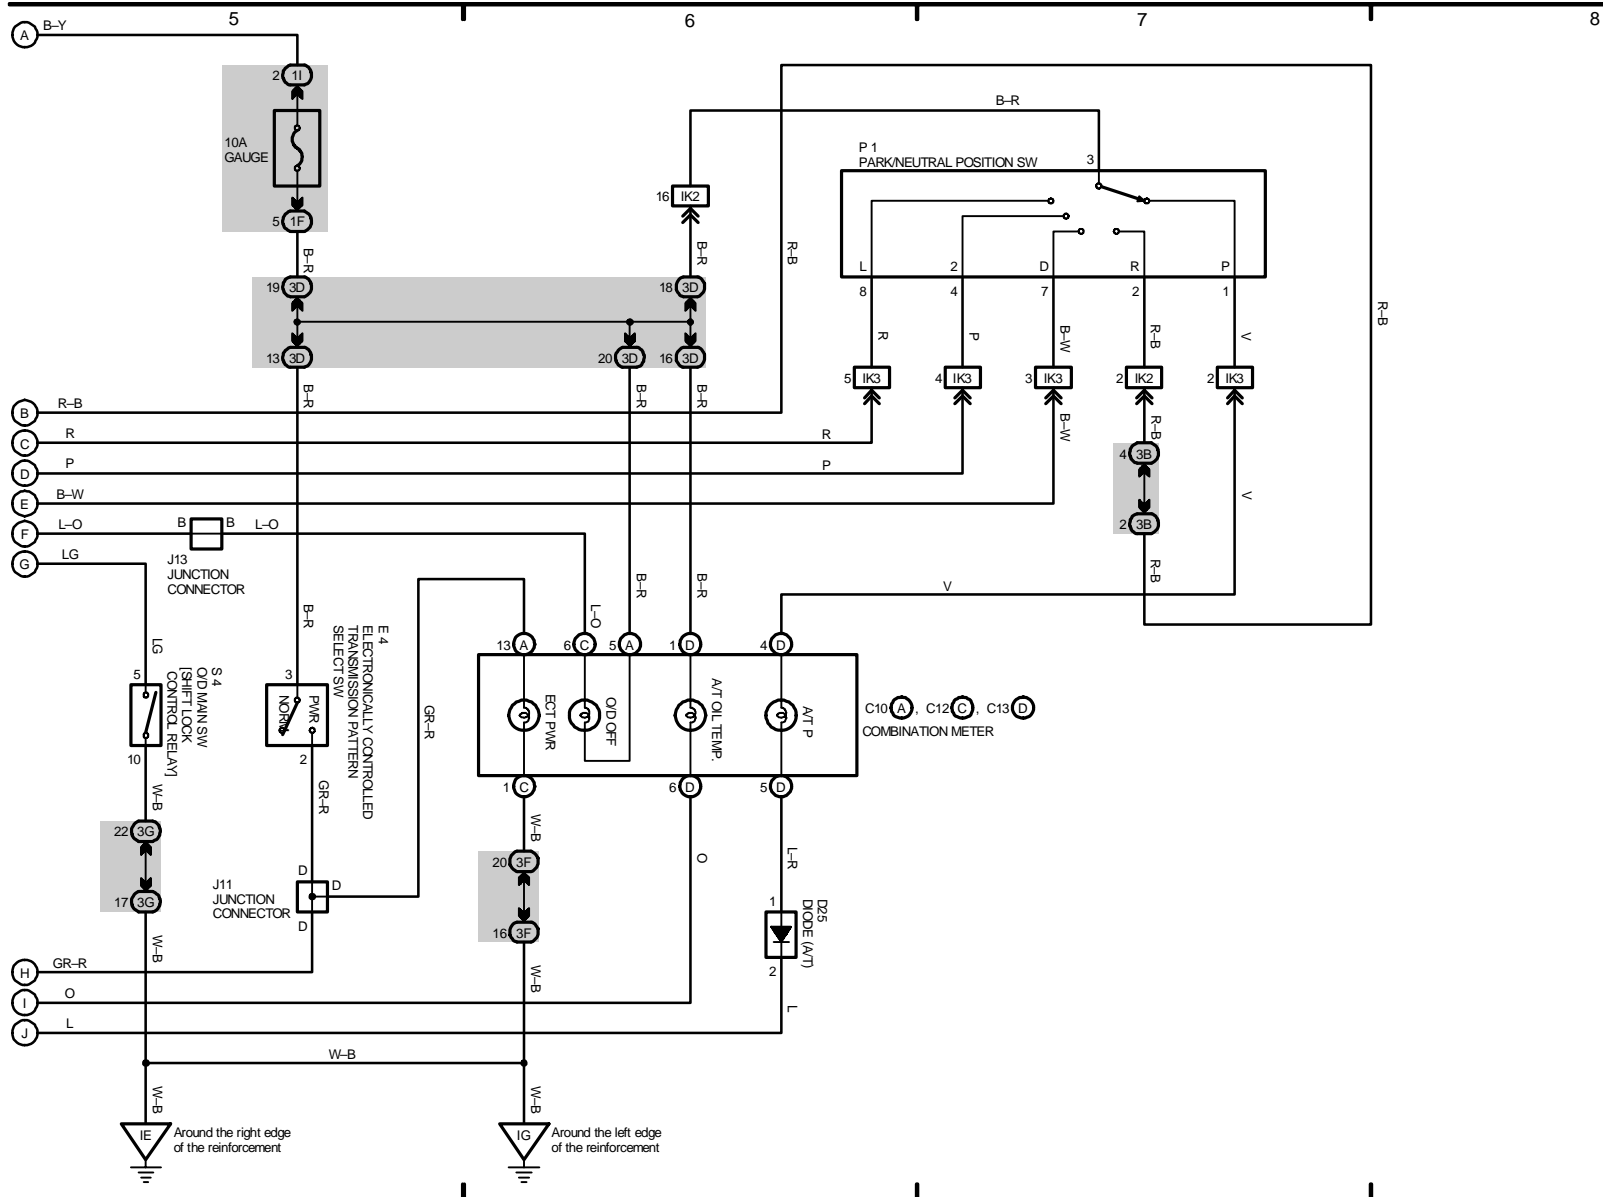

# **M OVERALL ELECTRICAL WIRING DIAGRAM**


---

2003 TOYOTA TACOMA (EWDS17U)

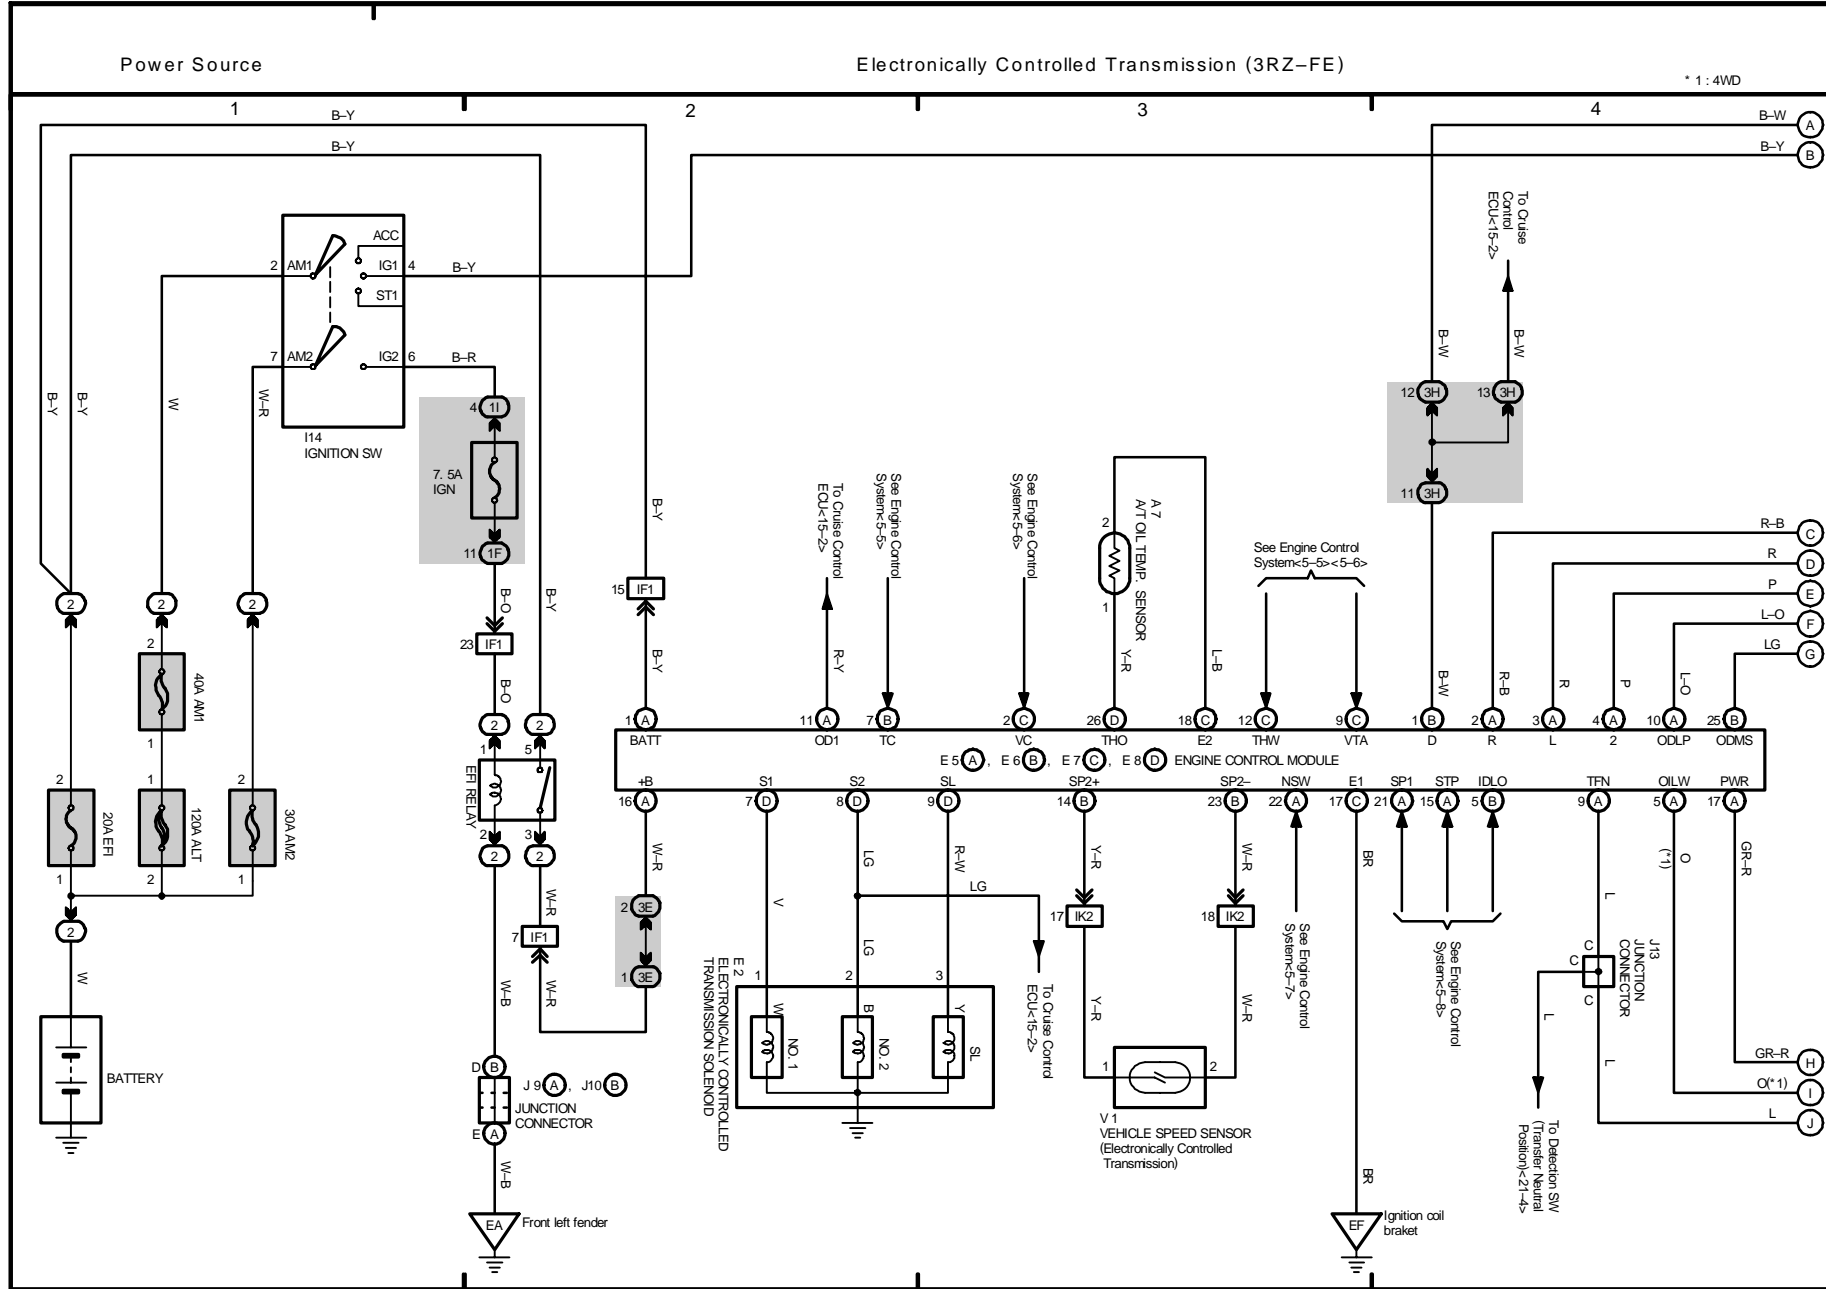



Electronically Controlled Transmission (3RZ-FE)

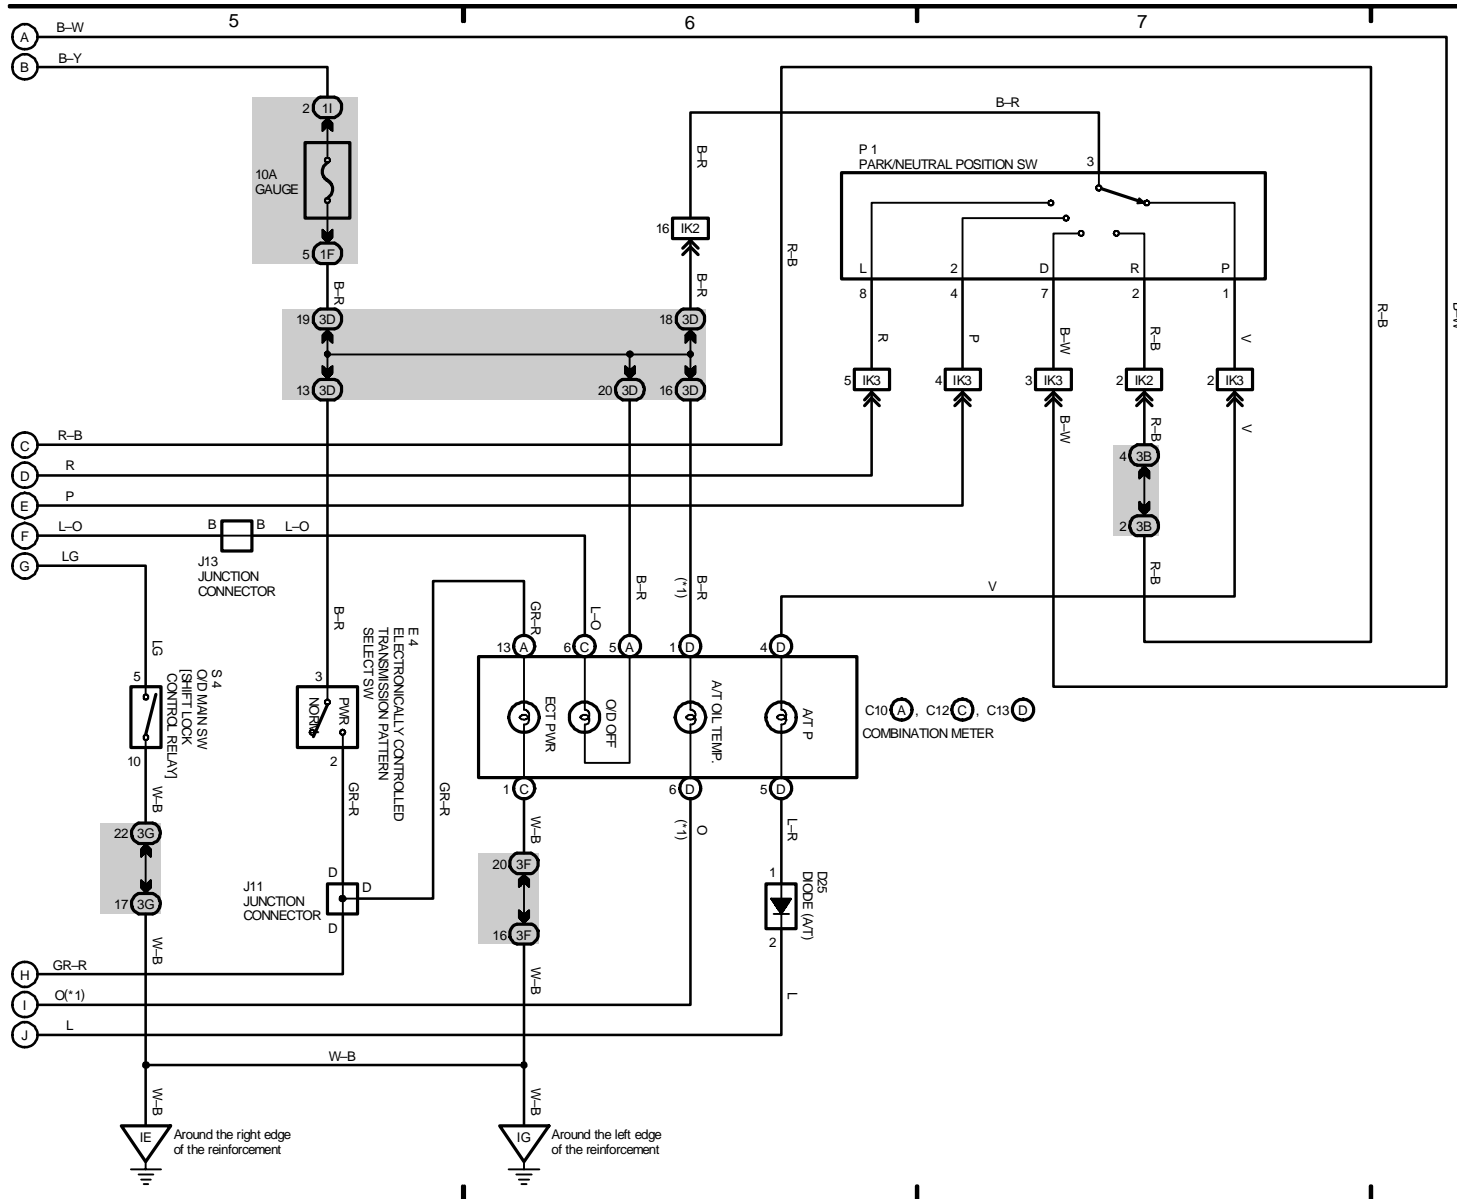


# **M OVERALL ELECTRICAL WIRING DIAGRAM**

---


14 TOYOTA TACOMA

2003 TOYOTA TACOMA (EW5617U)

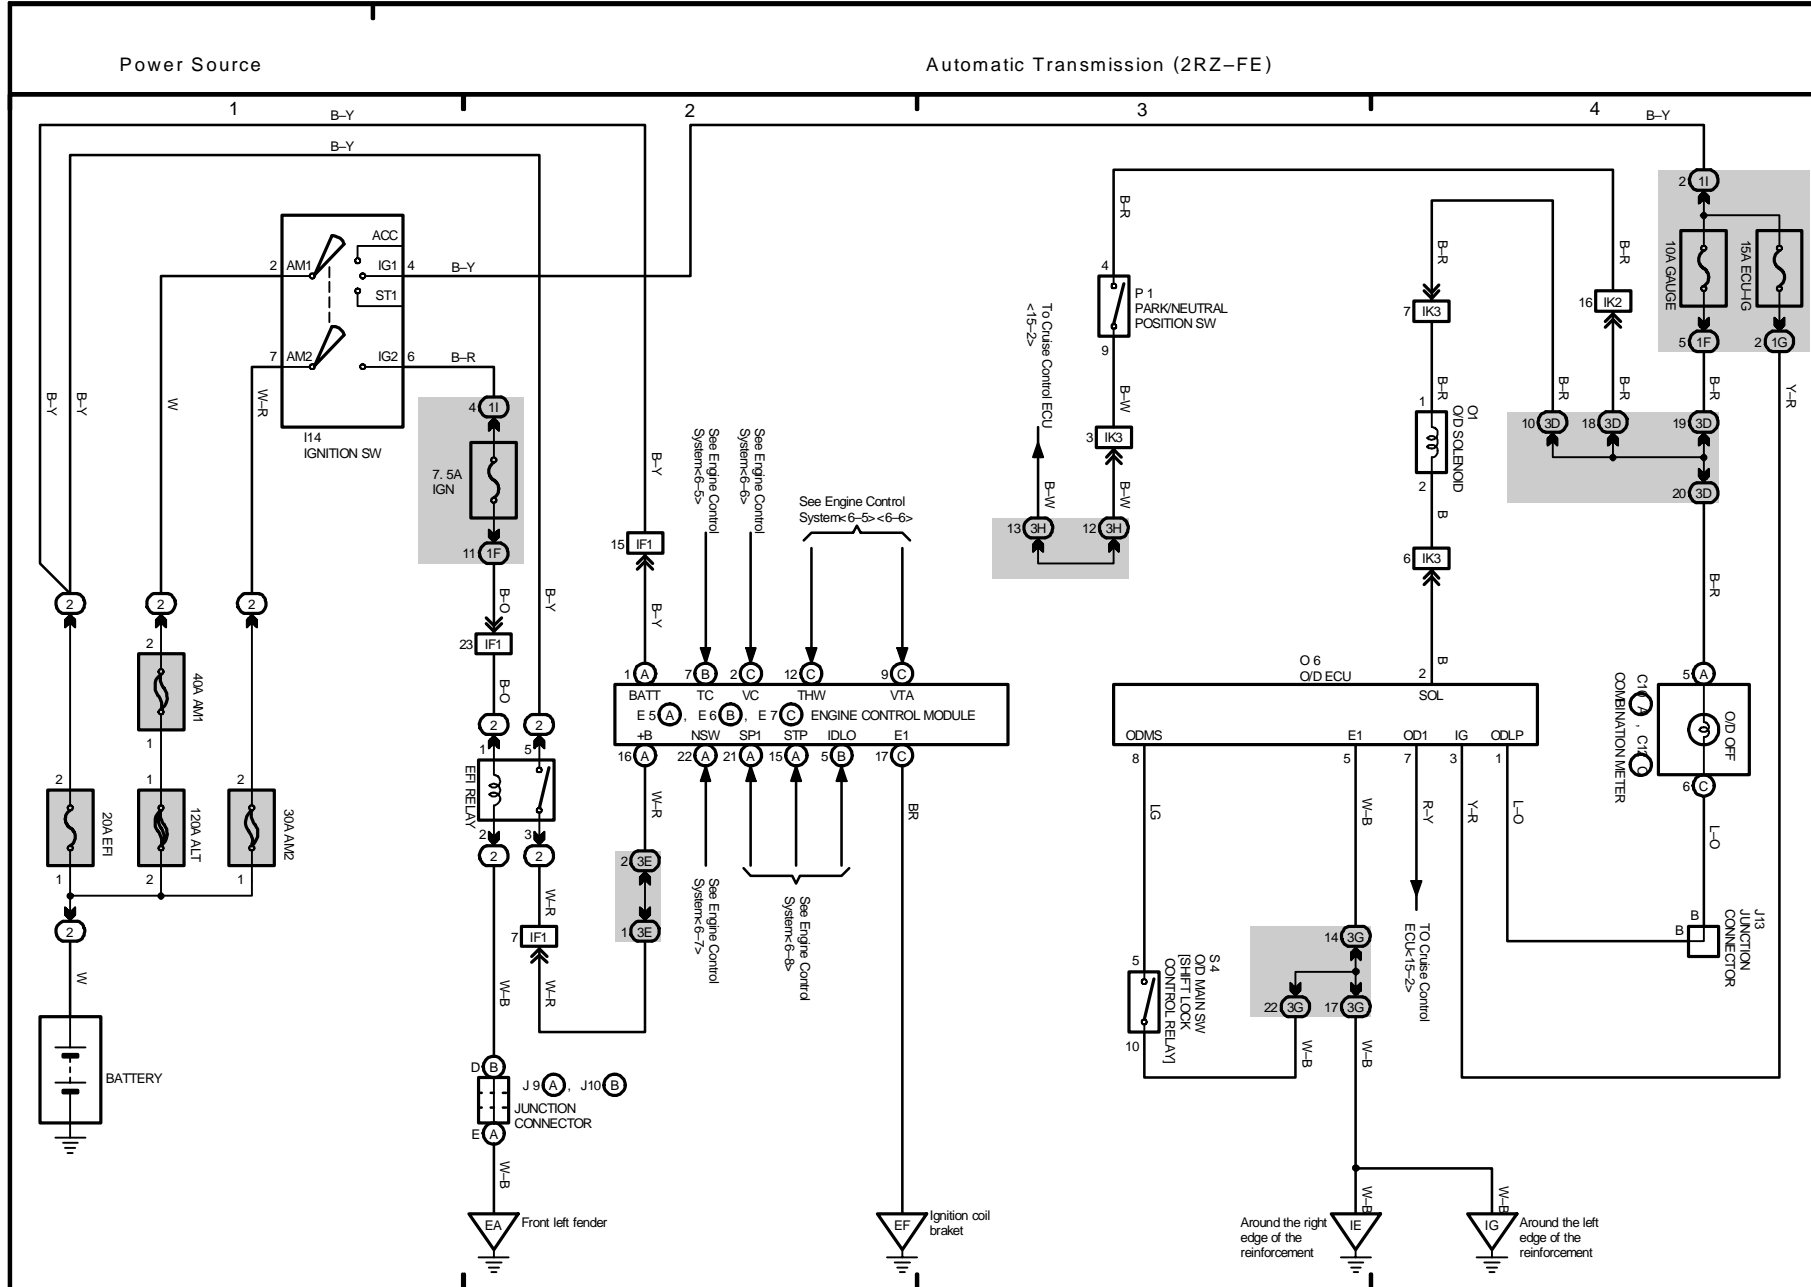






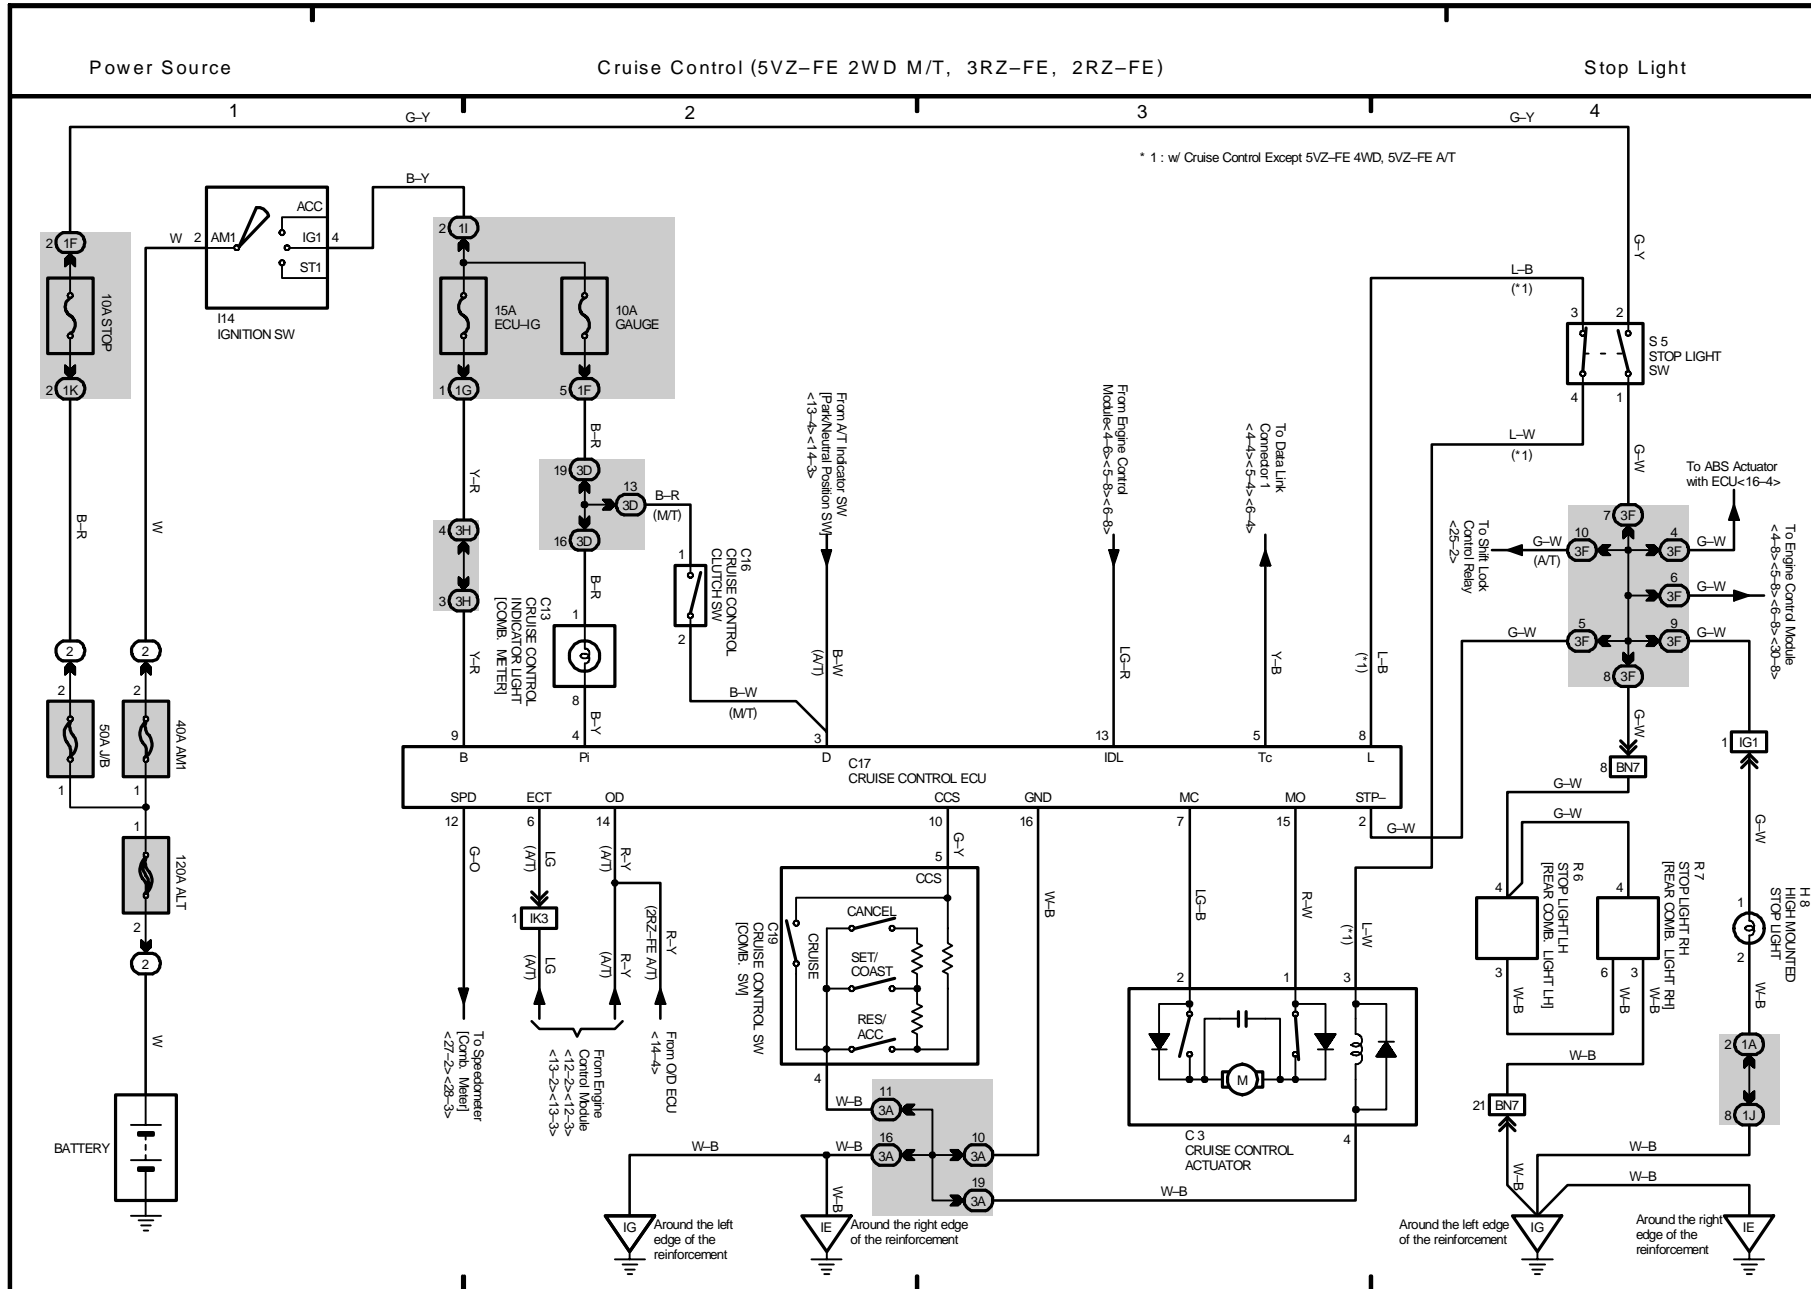

# **M OVERALL ELECTRICAL WIRING DIAGRAM**


---

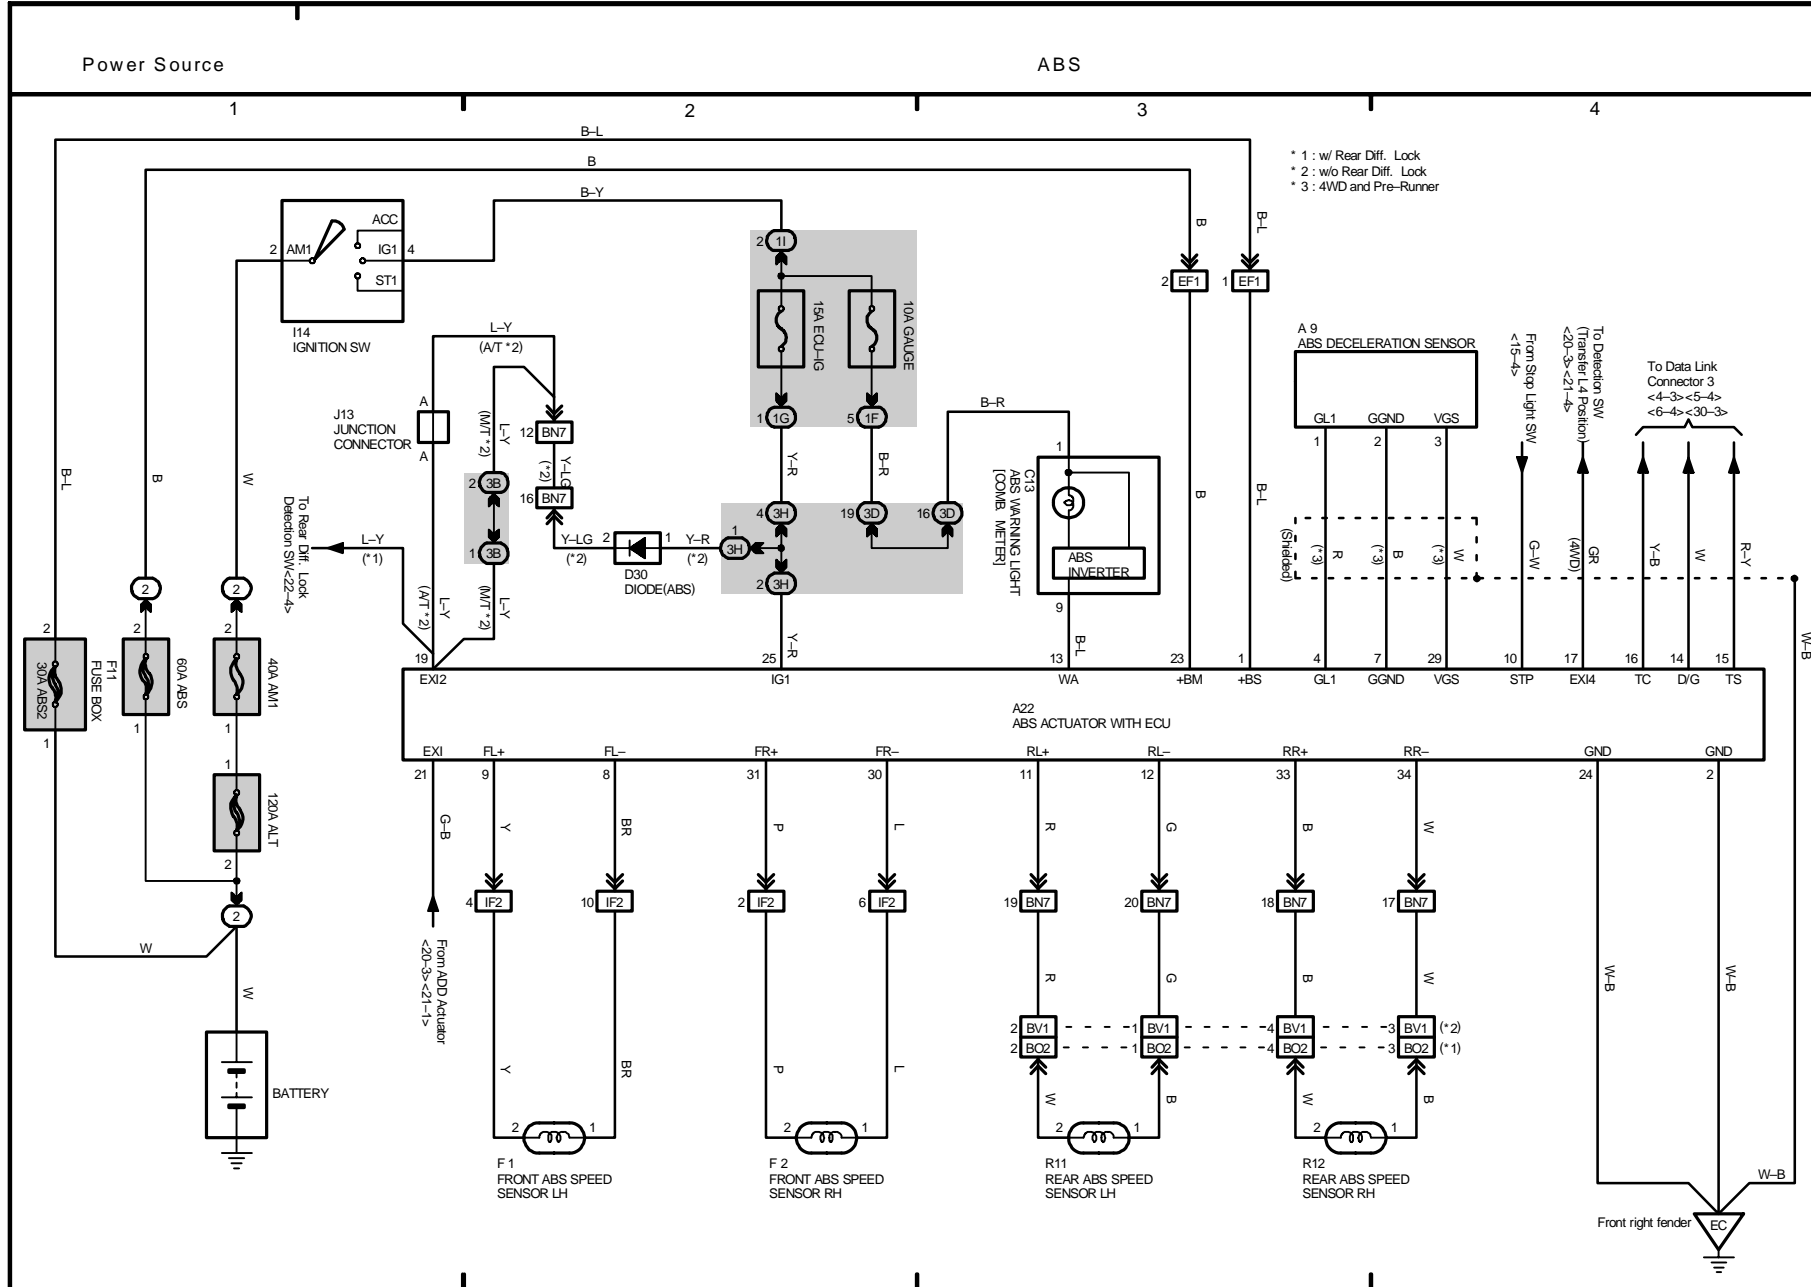




17 TOYOTA TACOMA

2003 TOYOTA TACOMA (EWDS17U)

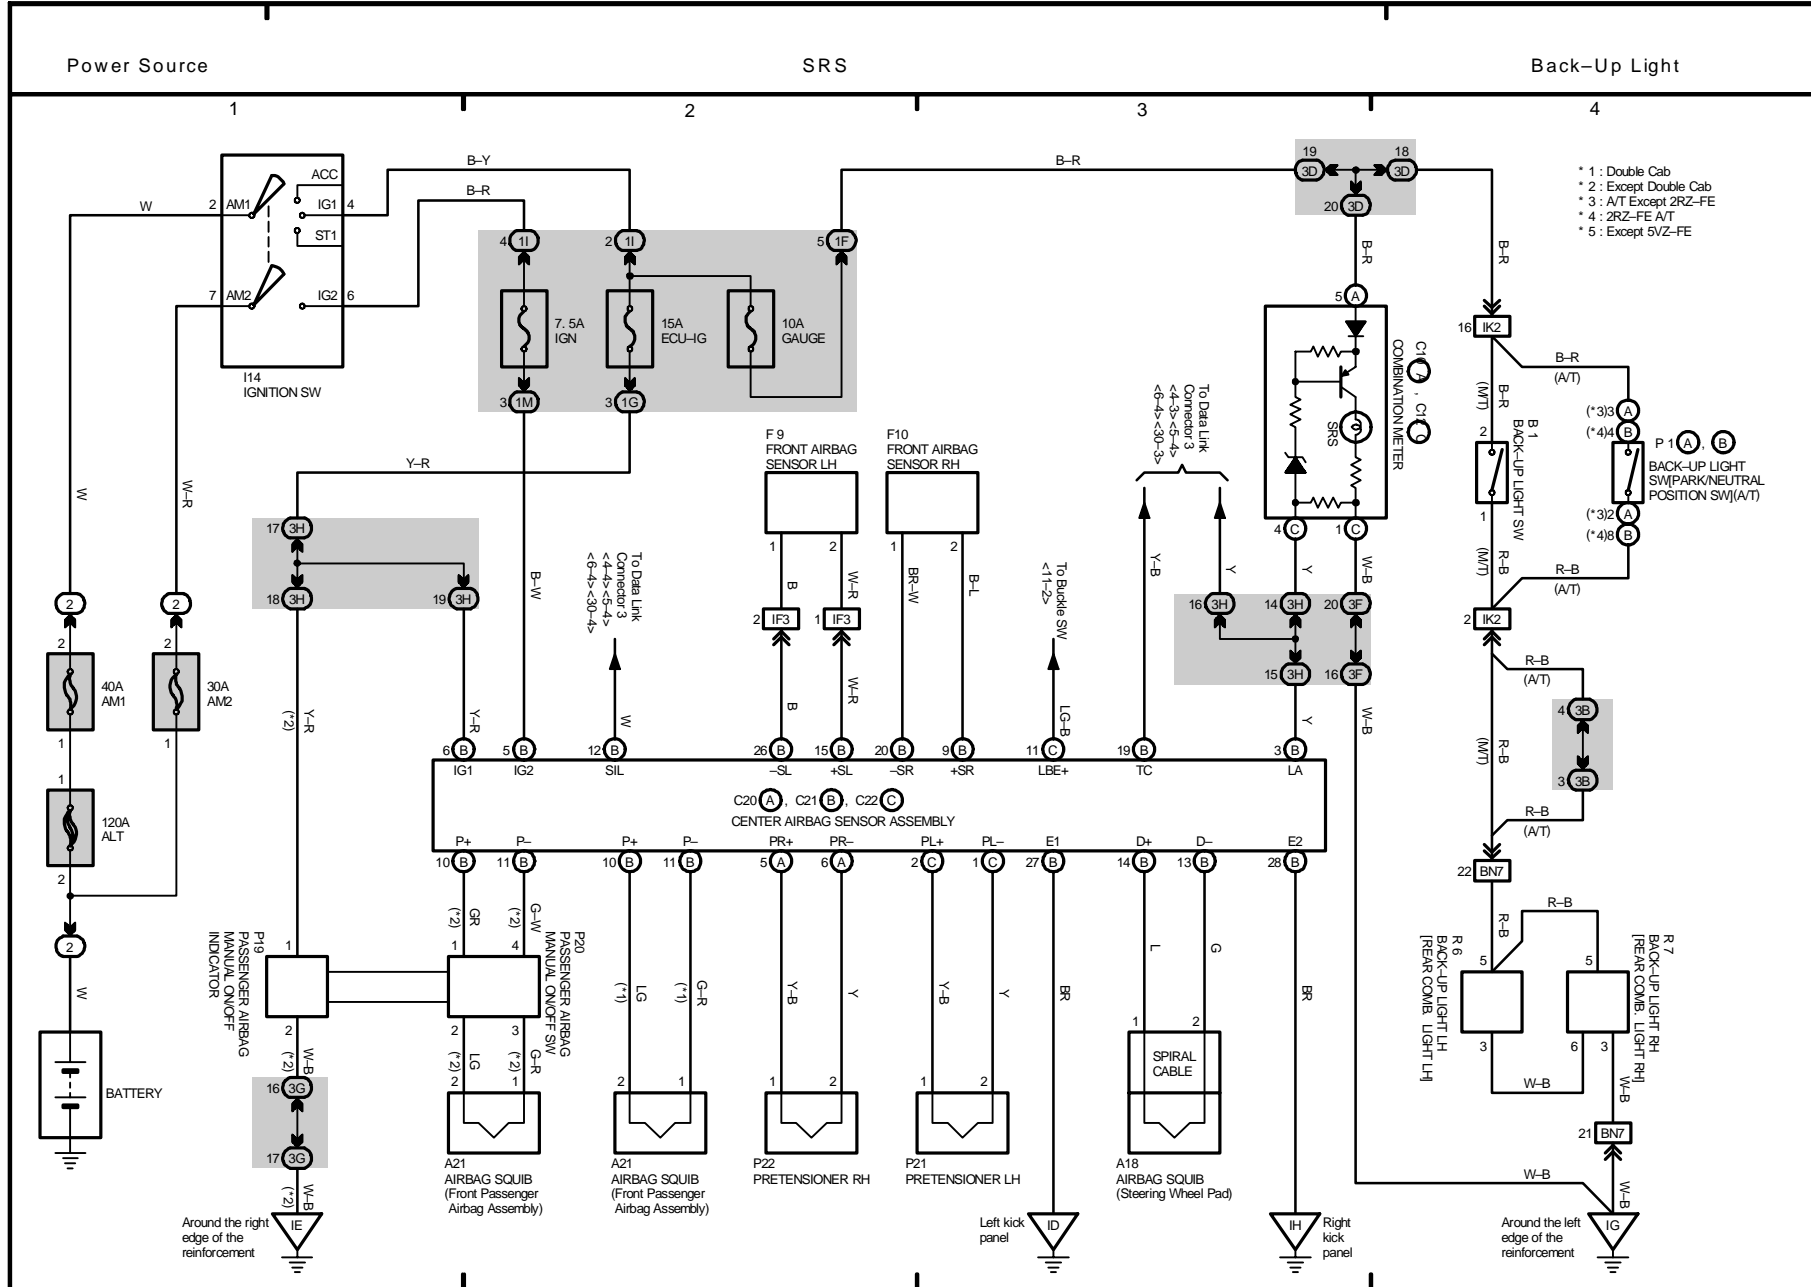


# **M OVERALL ELECTRICAL WIRING DIAGRAM**

---

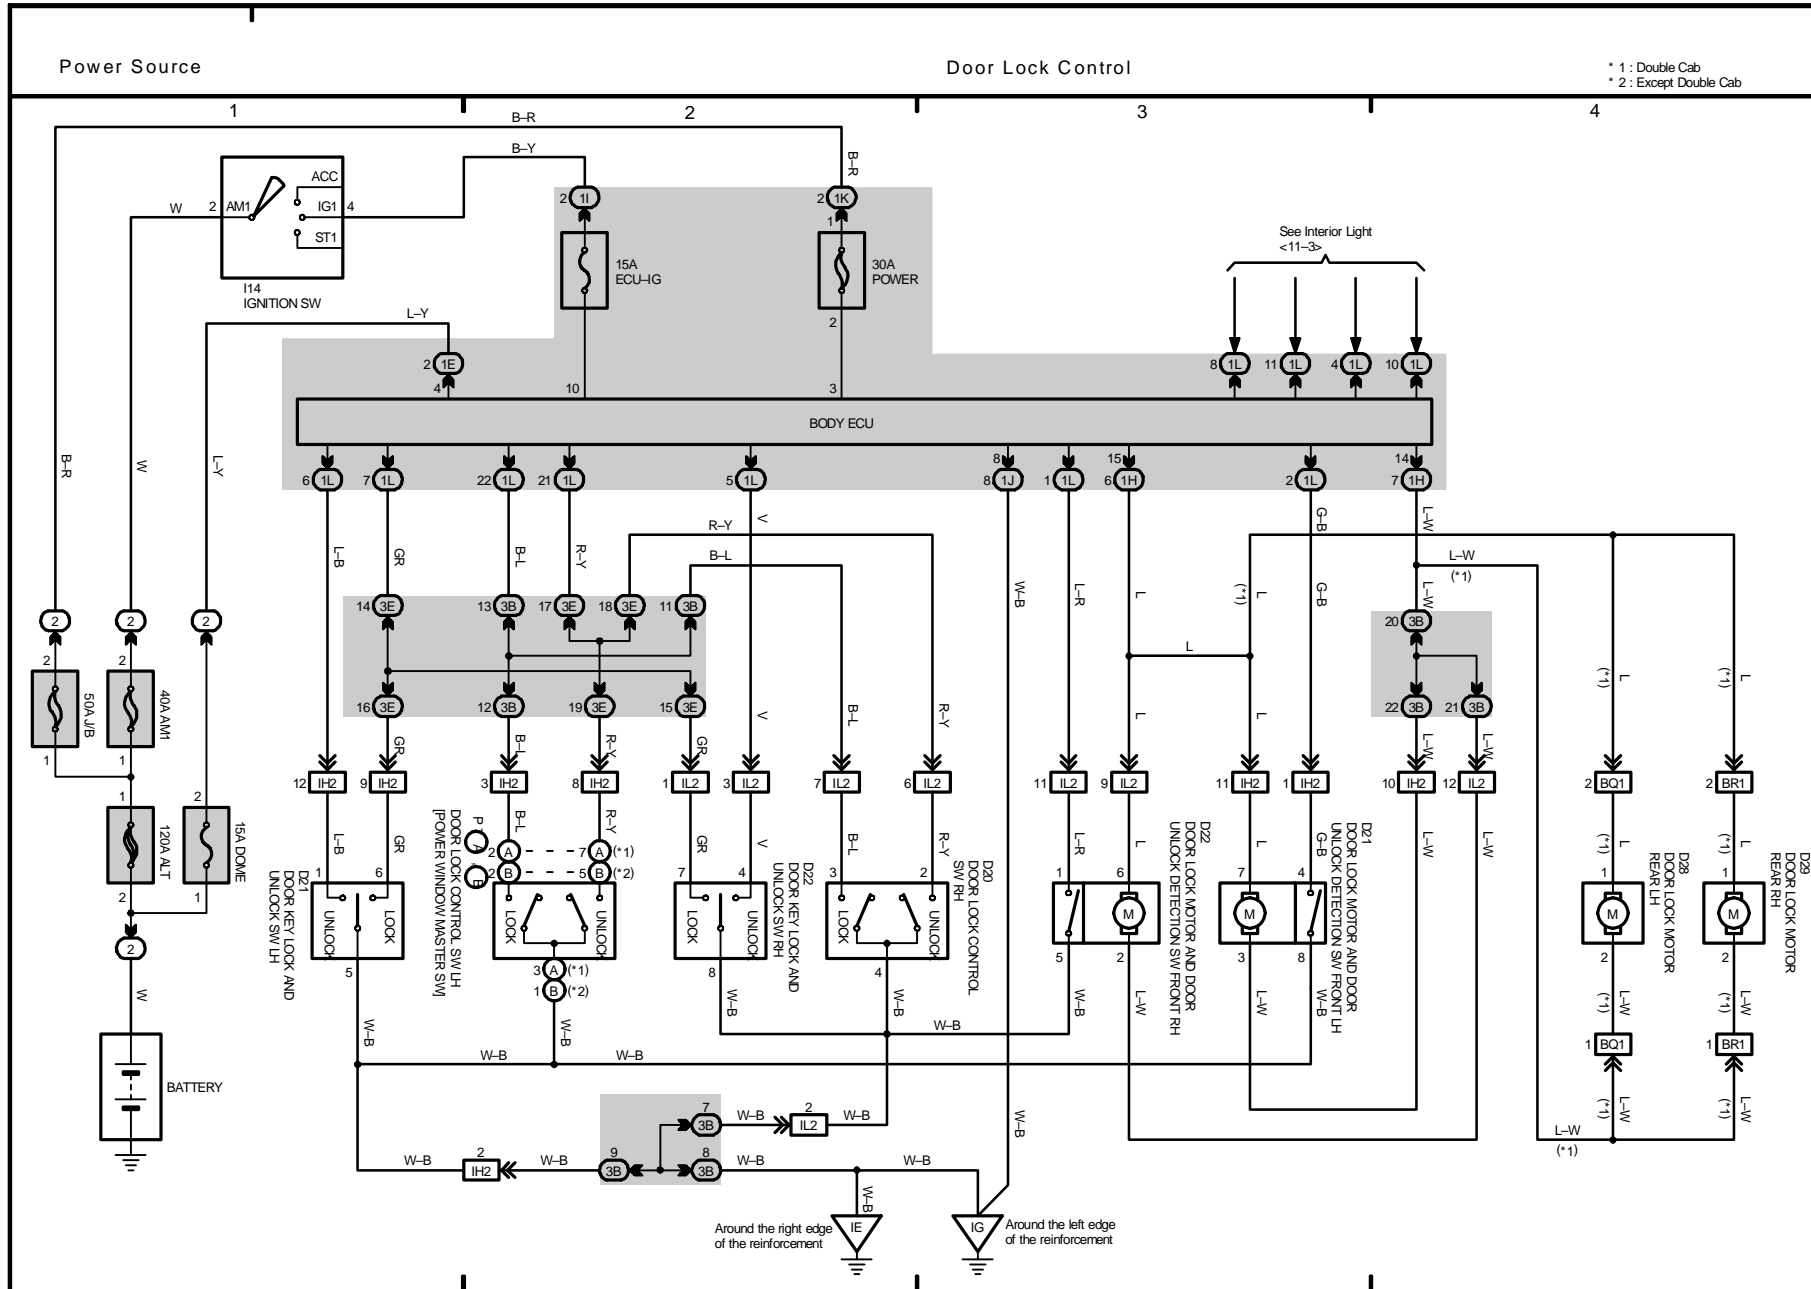






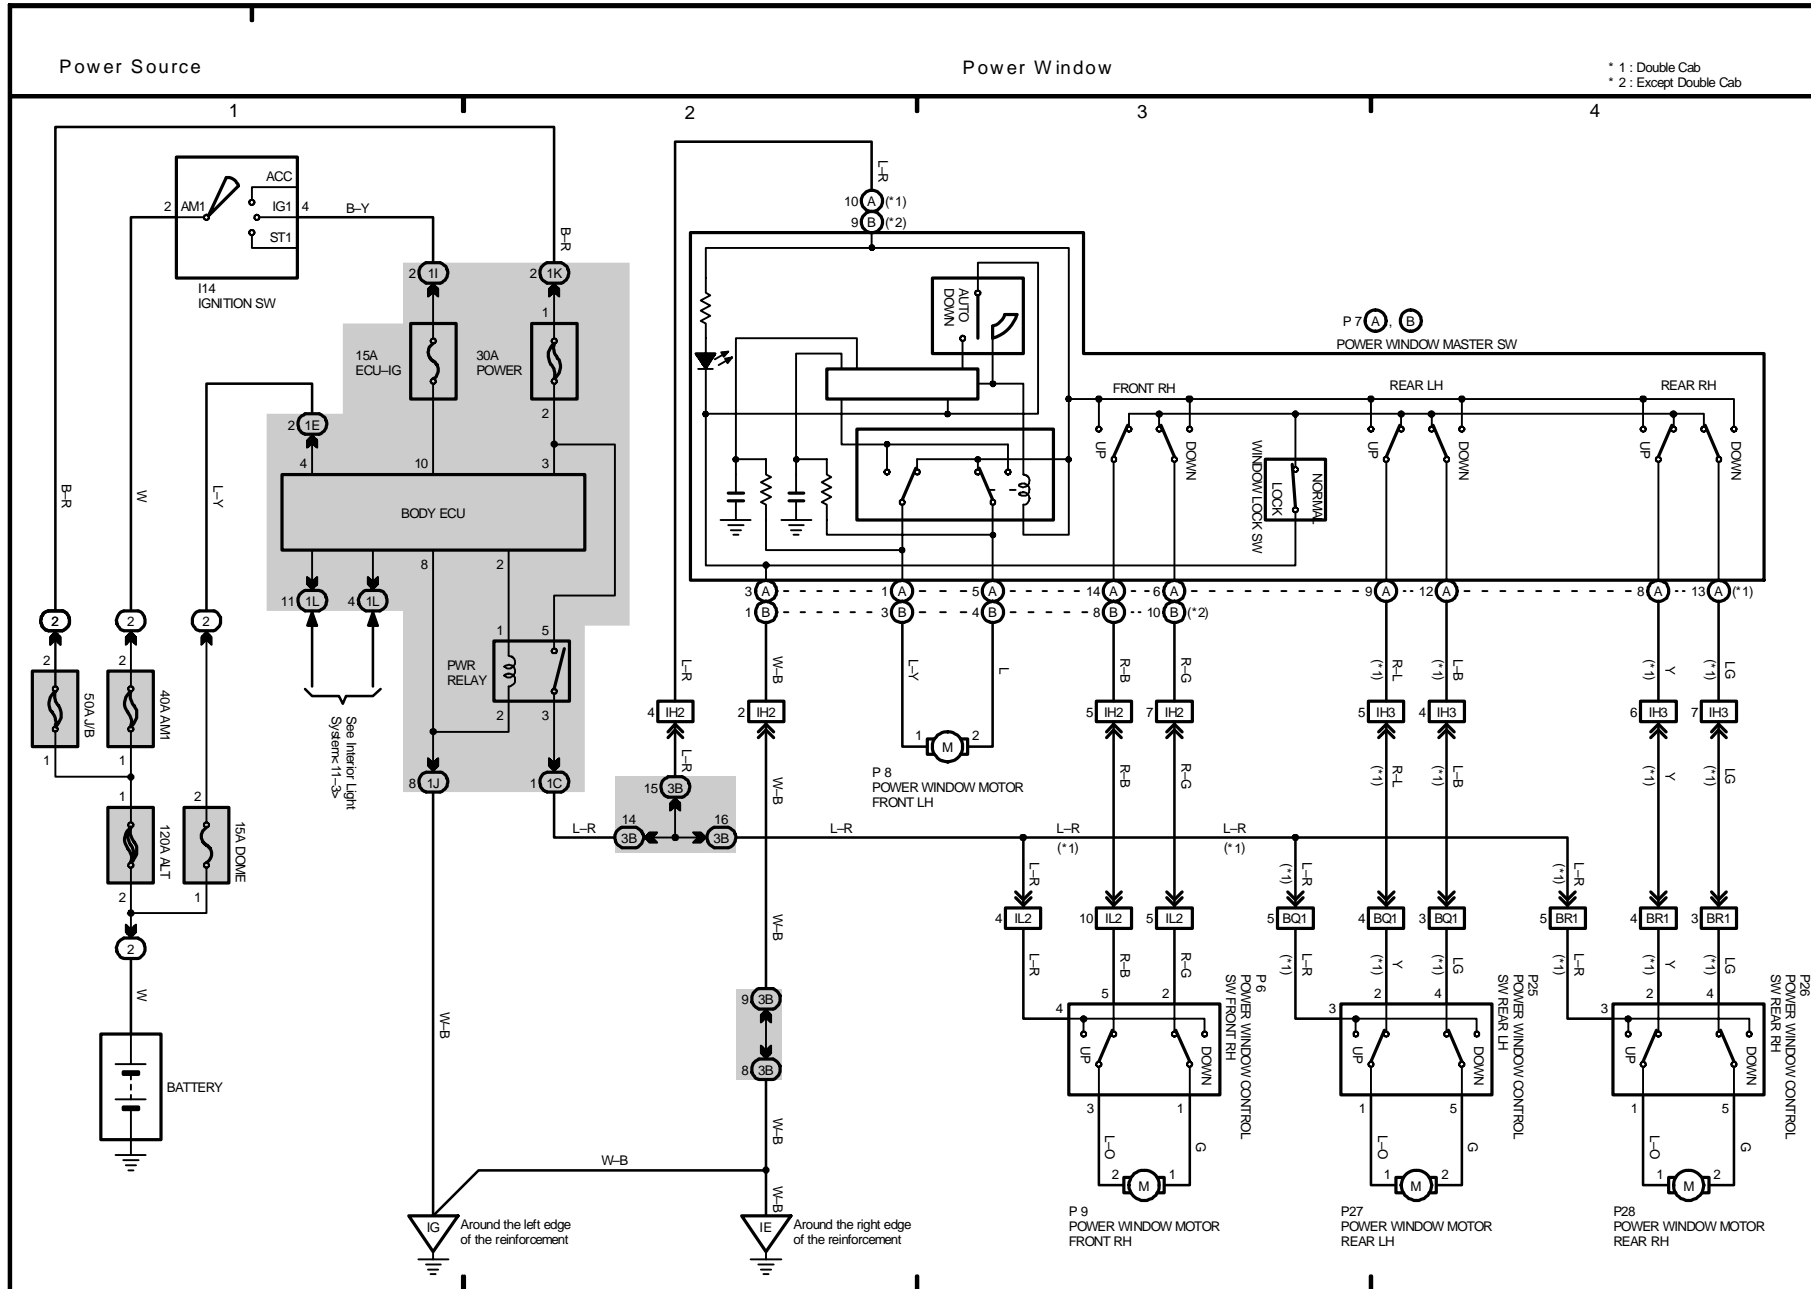


# **M OVERALL ELECTRICAL WIRING DIAGRAM**

---

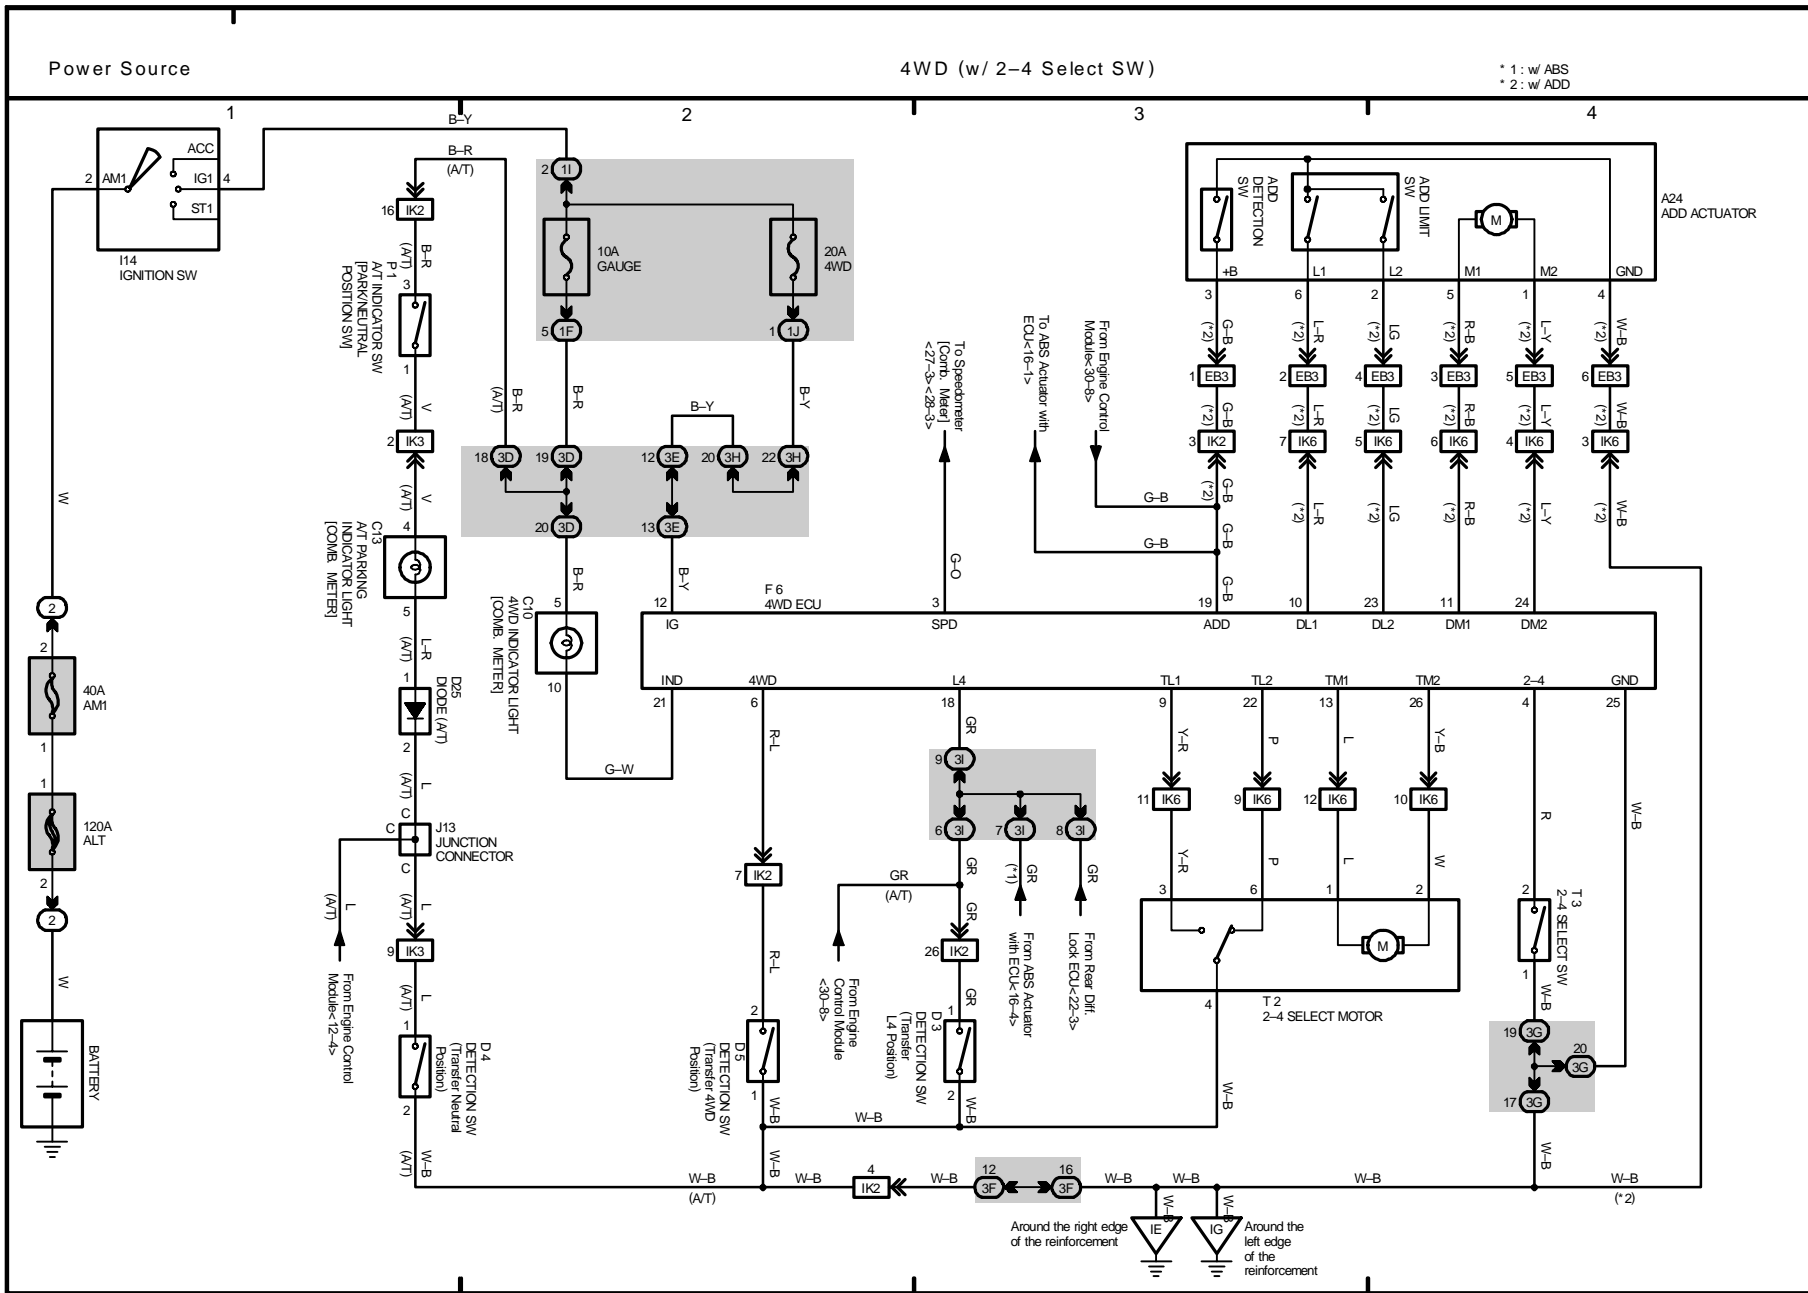




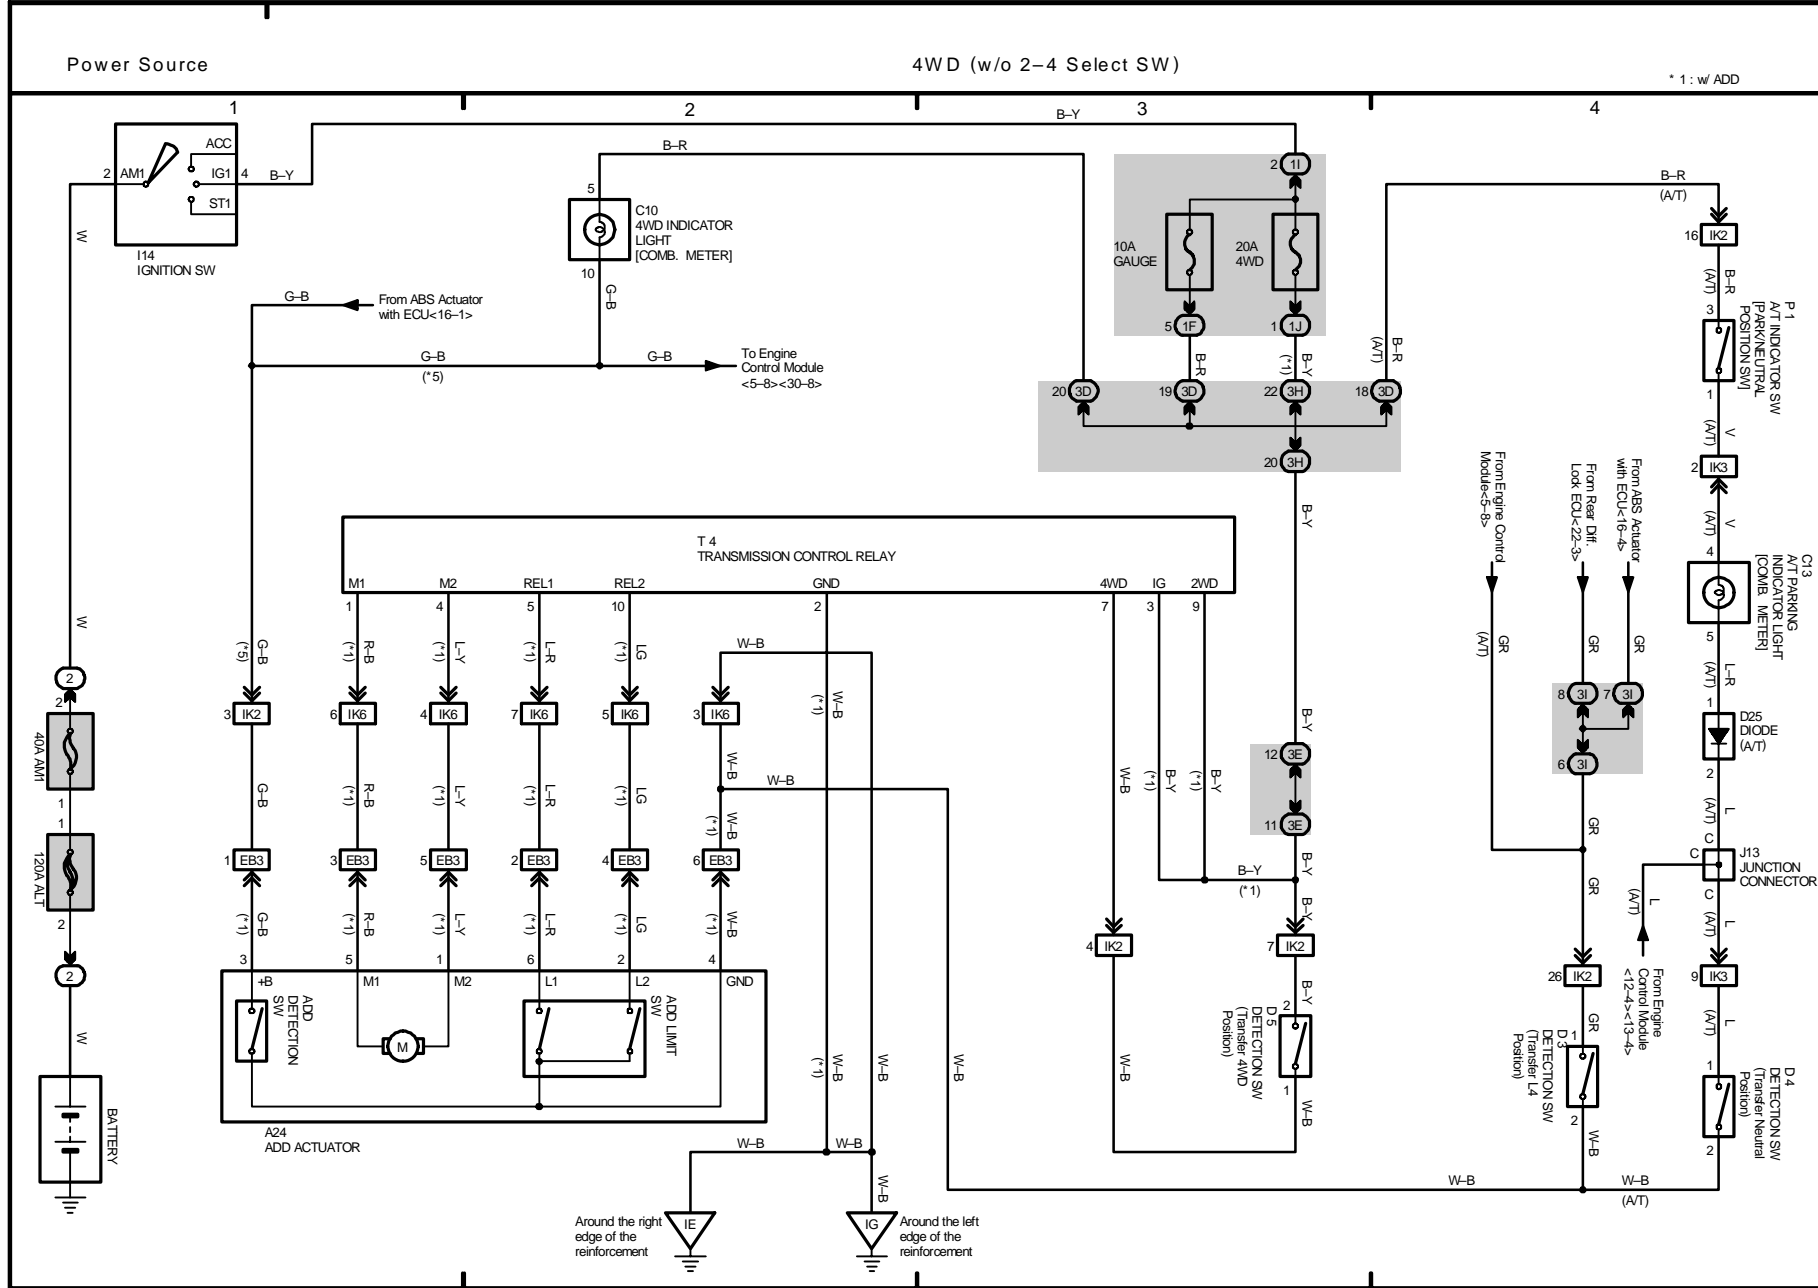

# **M OVERALL ELECTRICAL WIRING DIAGRAM**

---


22 TOYOTA TACOMA

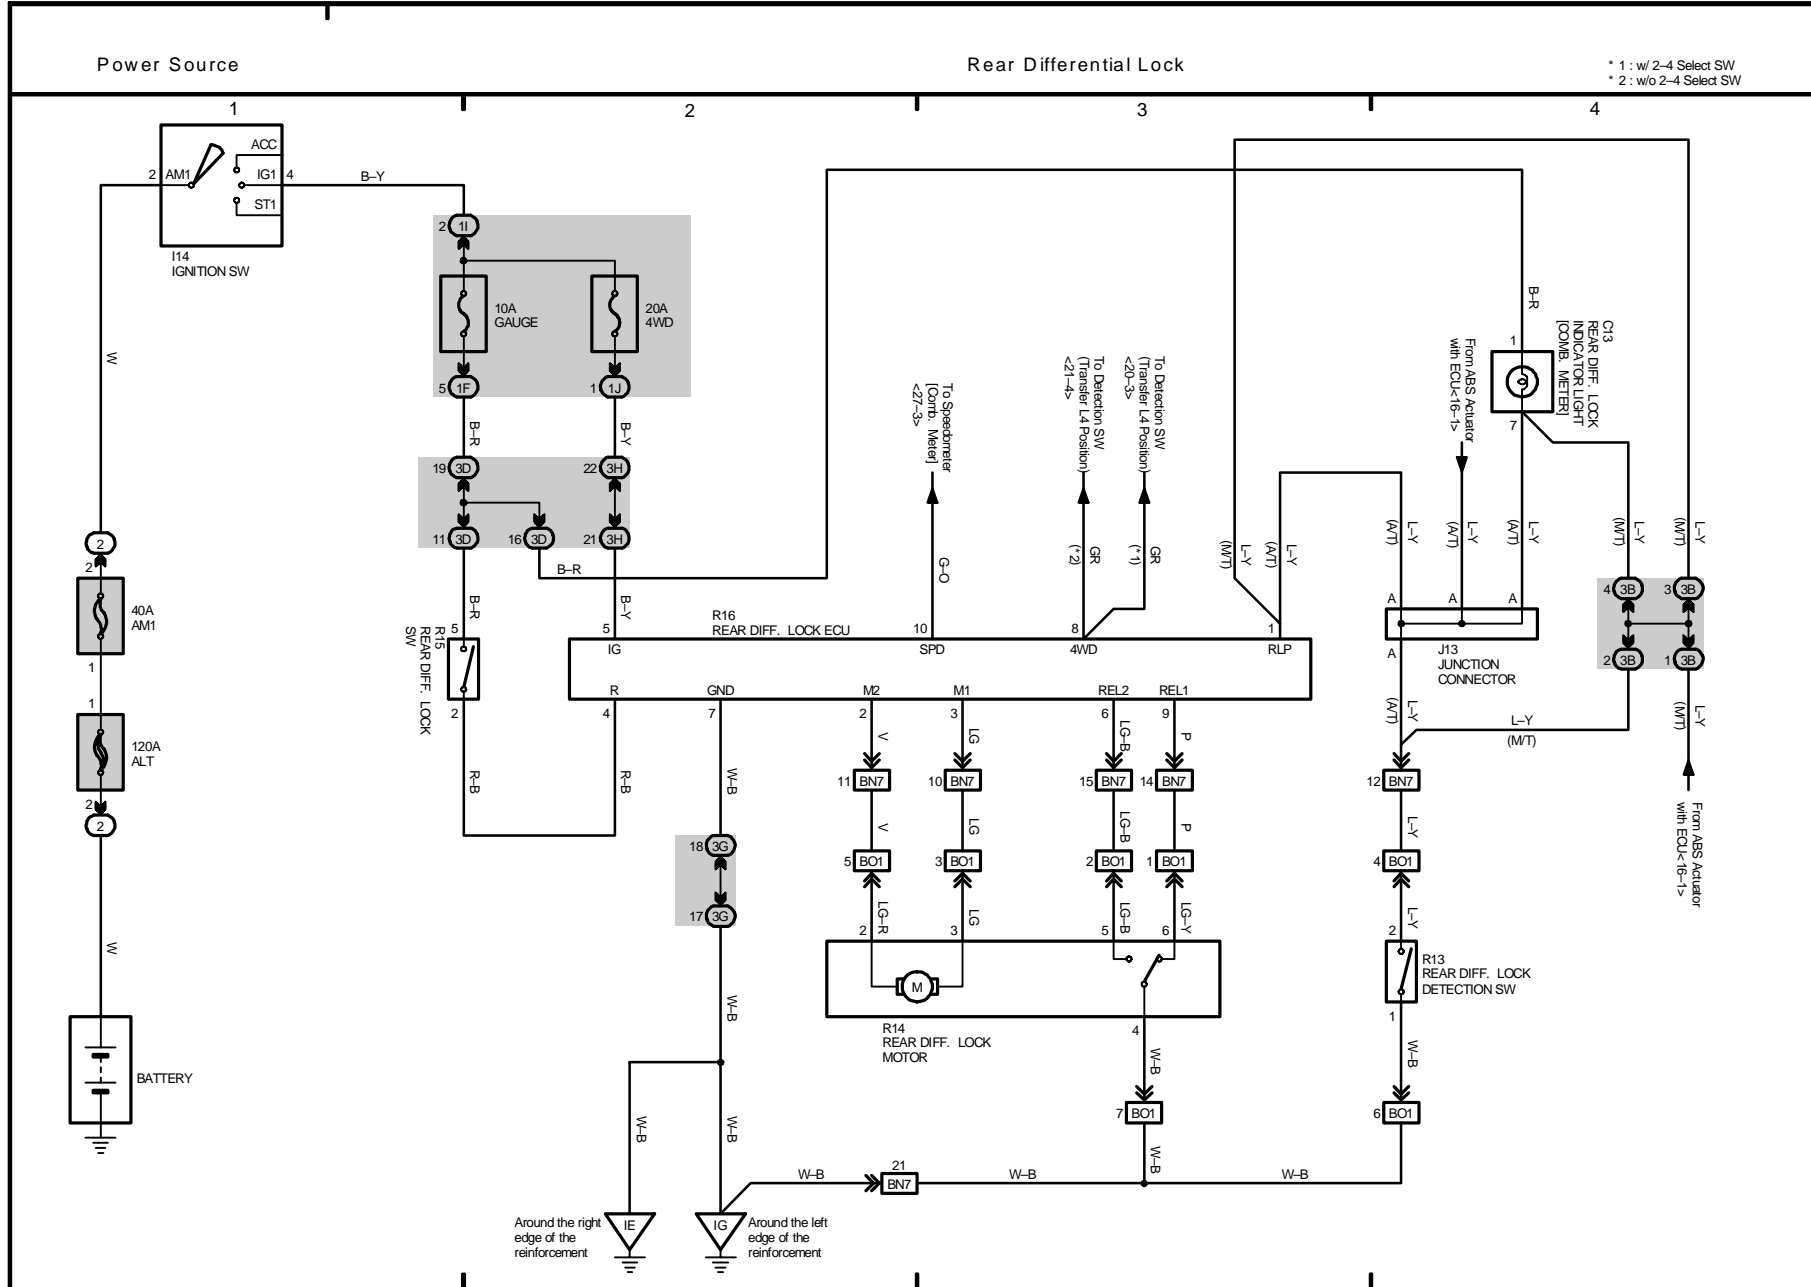

2003 TOYOTA TACOMA (EW5617U)






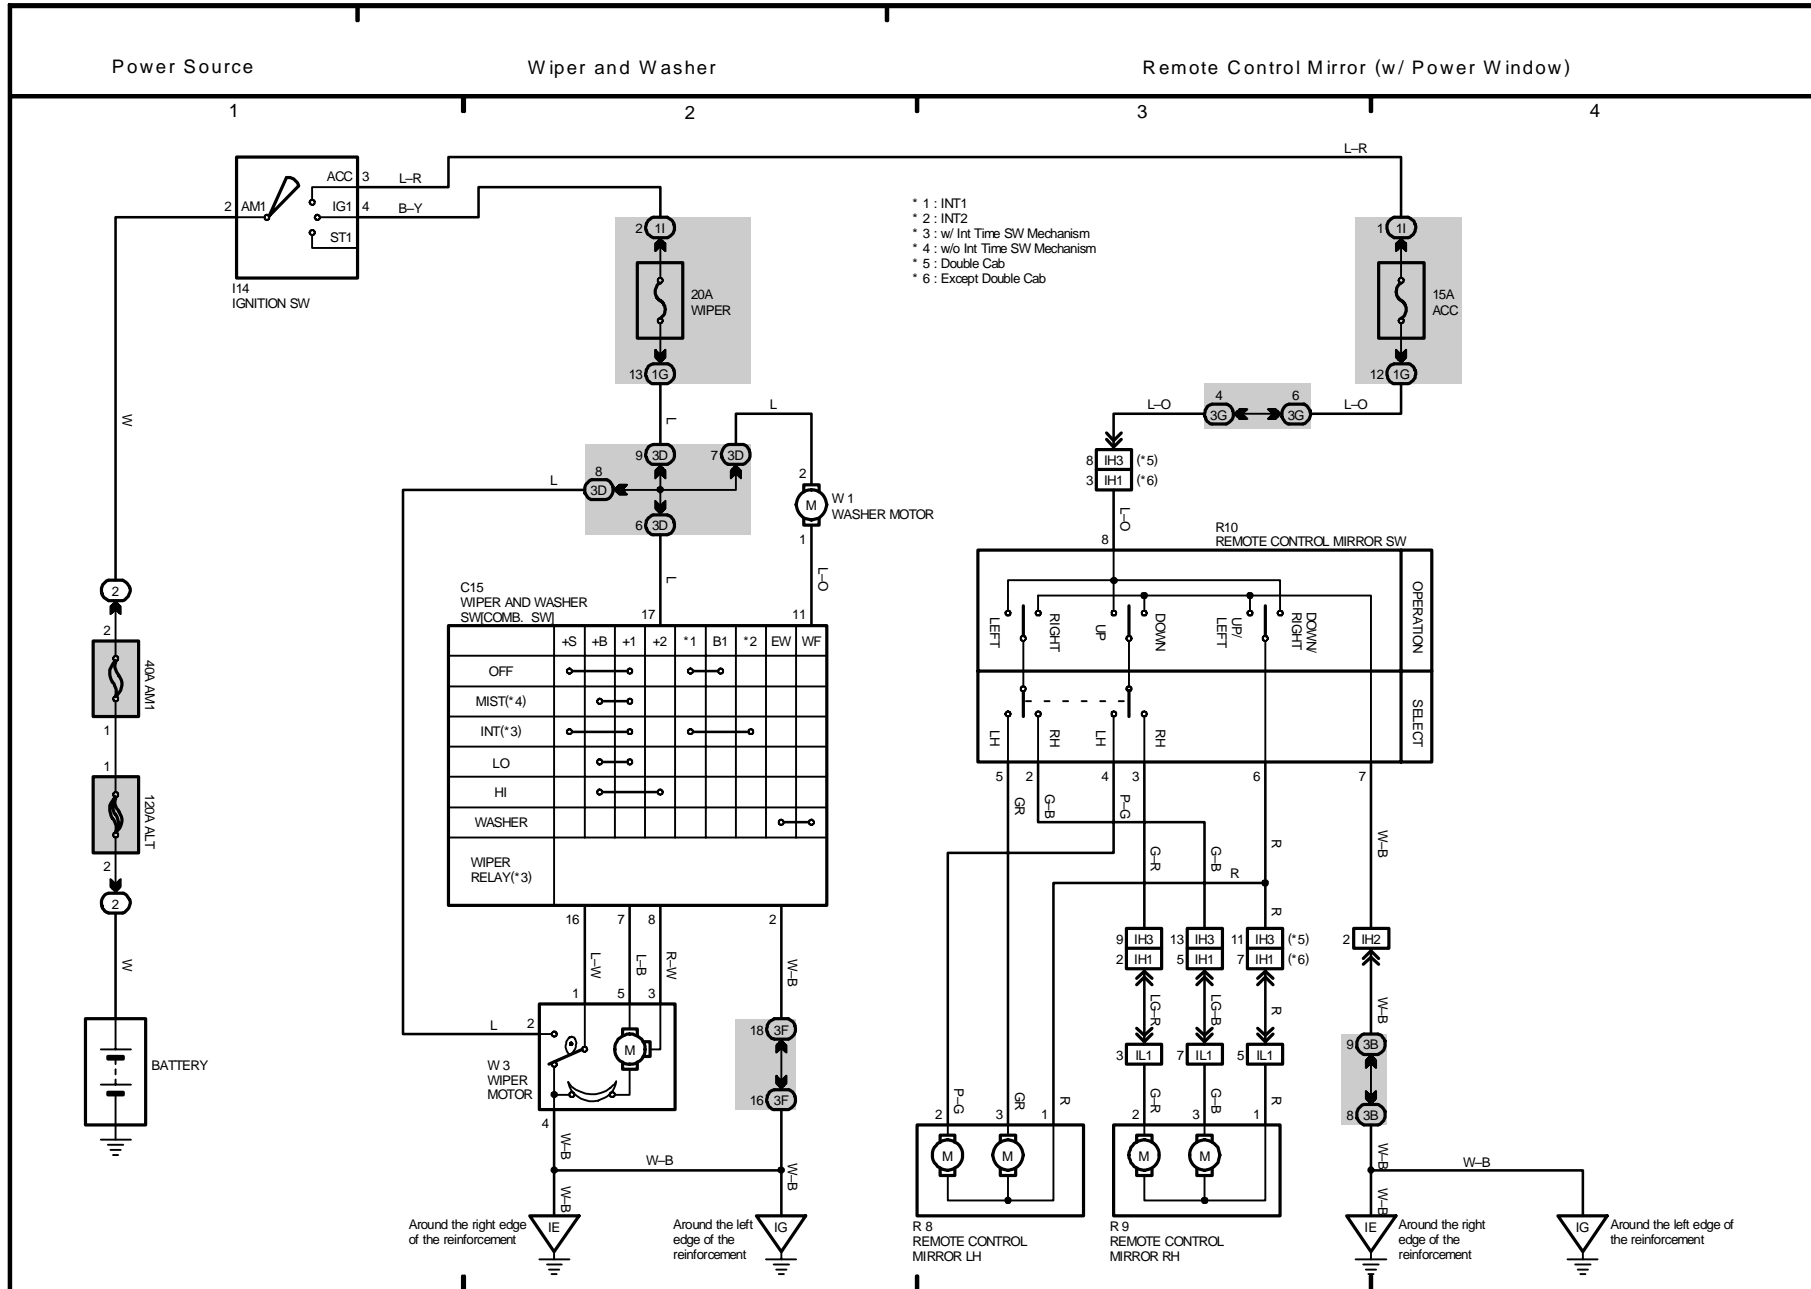

# **M OVERALL ELECTRICAL WIRING DIAGRAM**


---

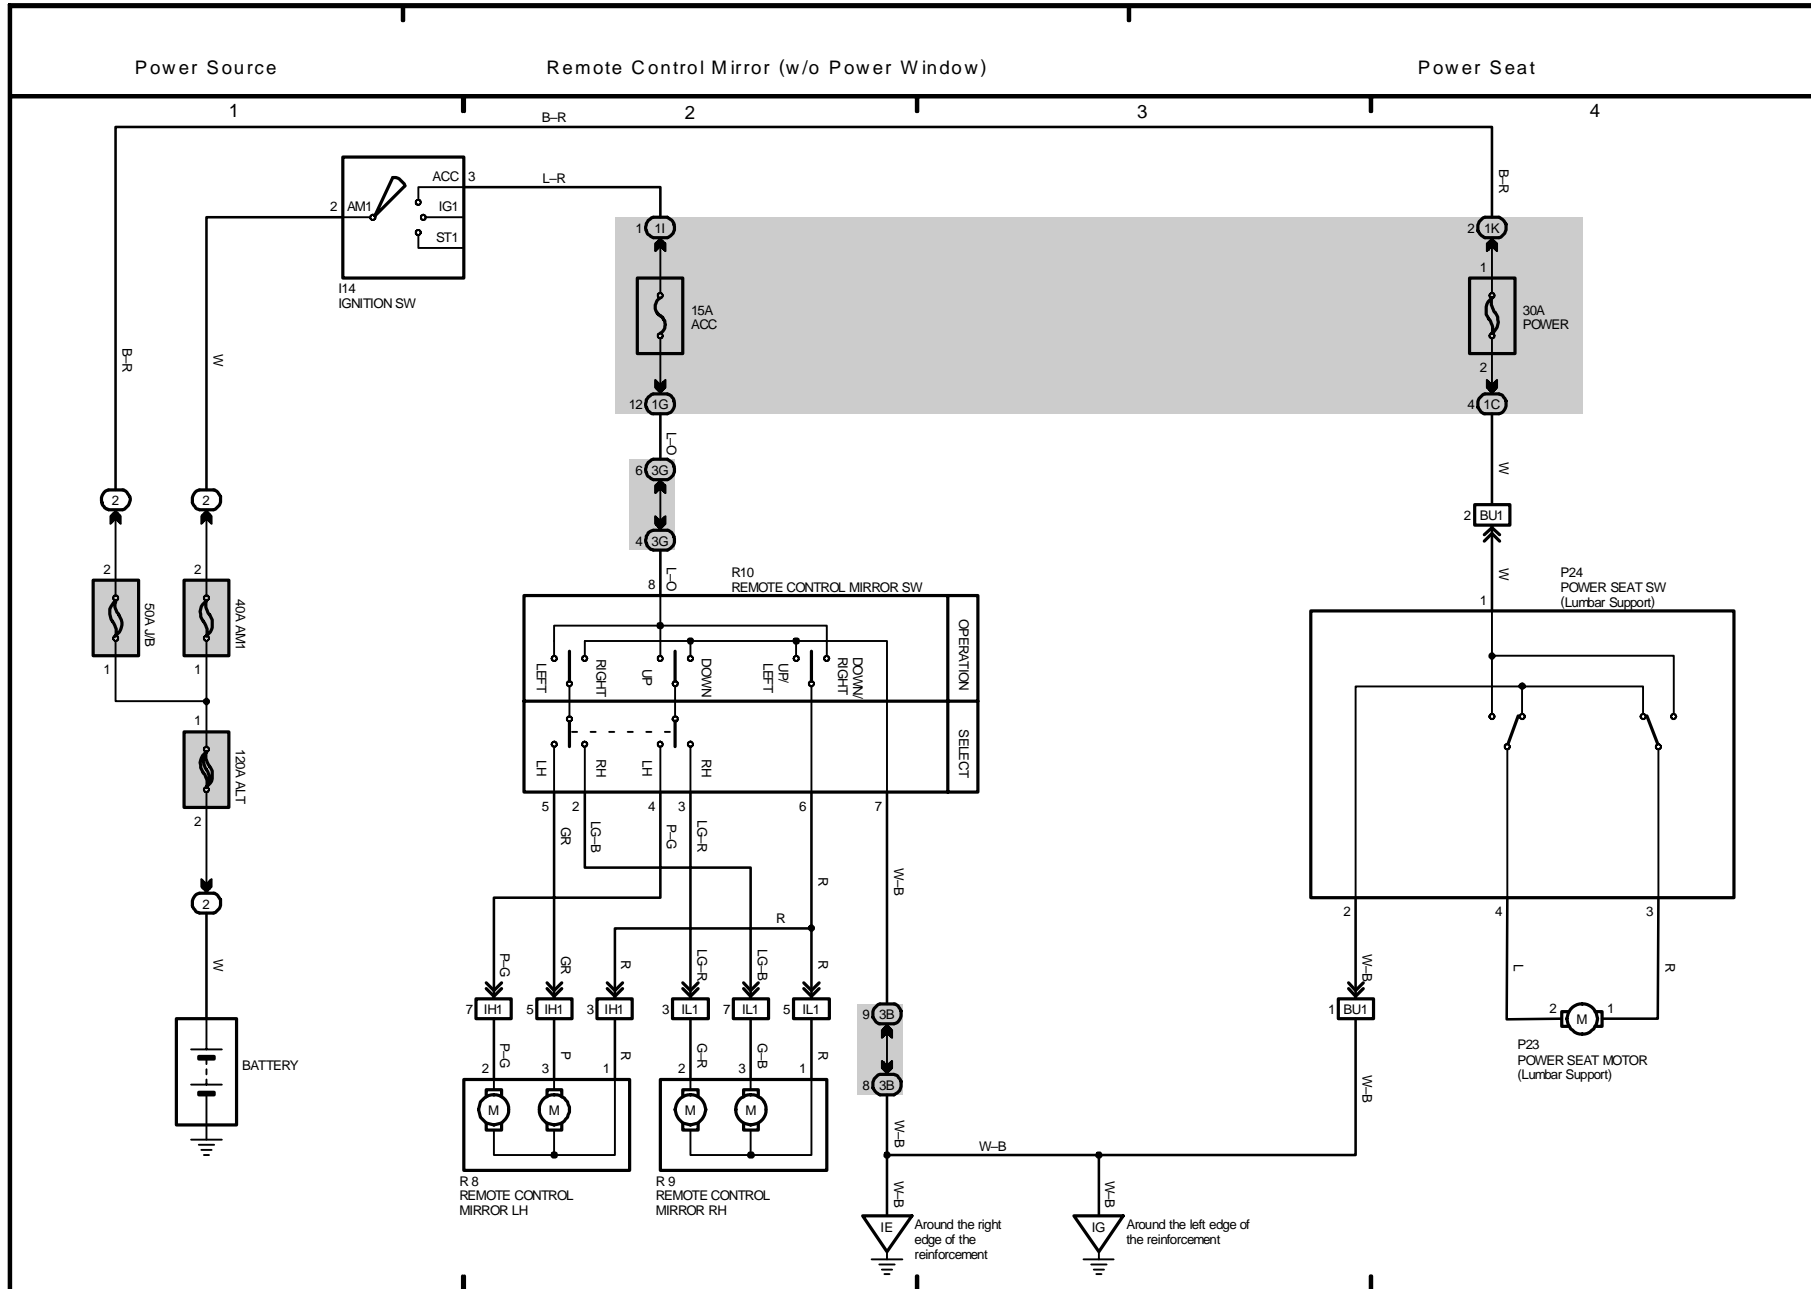



25 TOYOTA TACOMA

2003 TOYOTA TACOMA (EWDS17U)

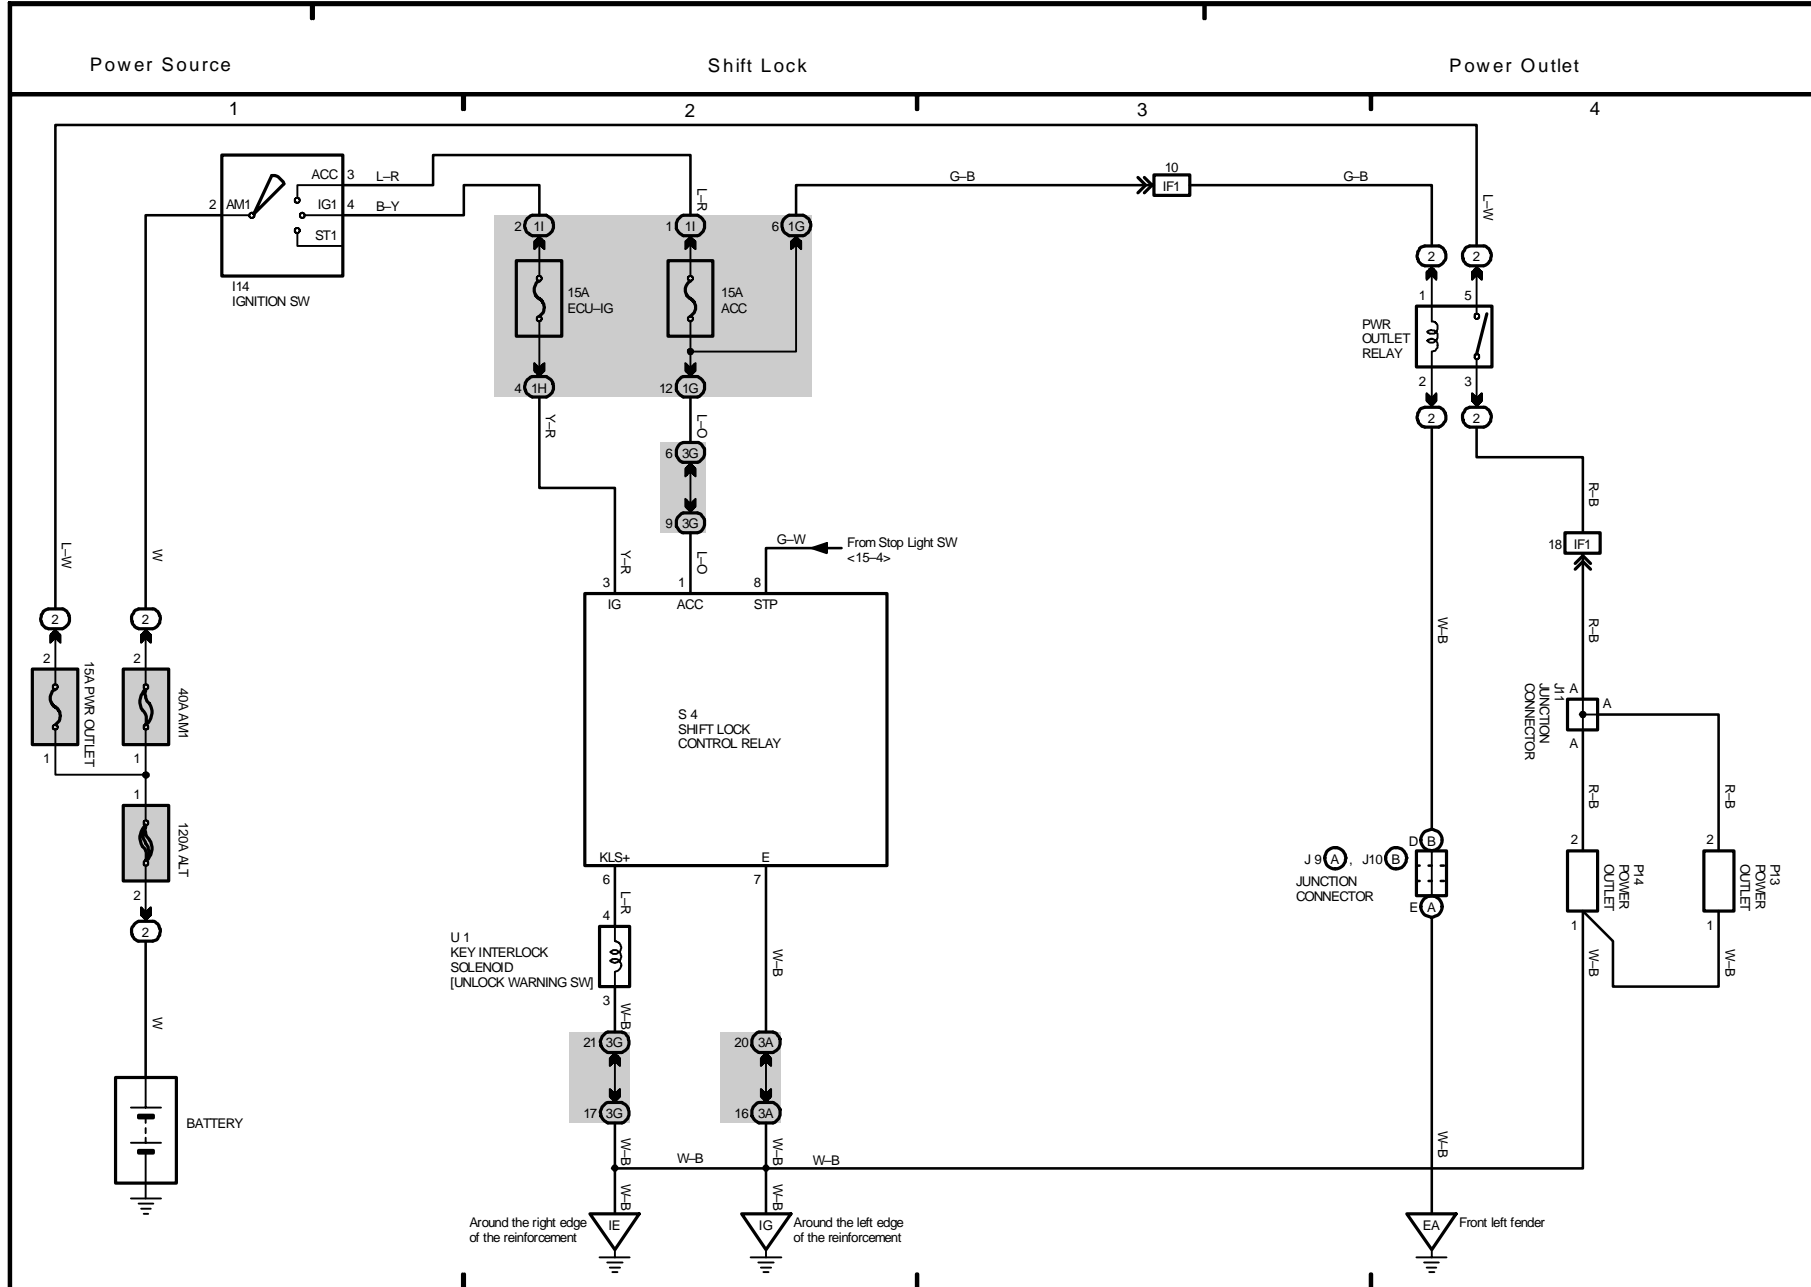

# **M OVERALL ELECTRICAL WIRING DIAGRAM**

---








# M OVERALL ELECTRICAL WIRING DIAGRAM

---


2003 TOYOTA TACOMA (EWD517U)

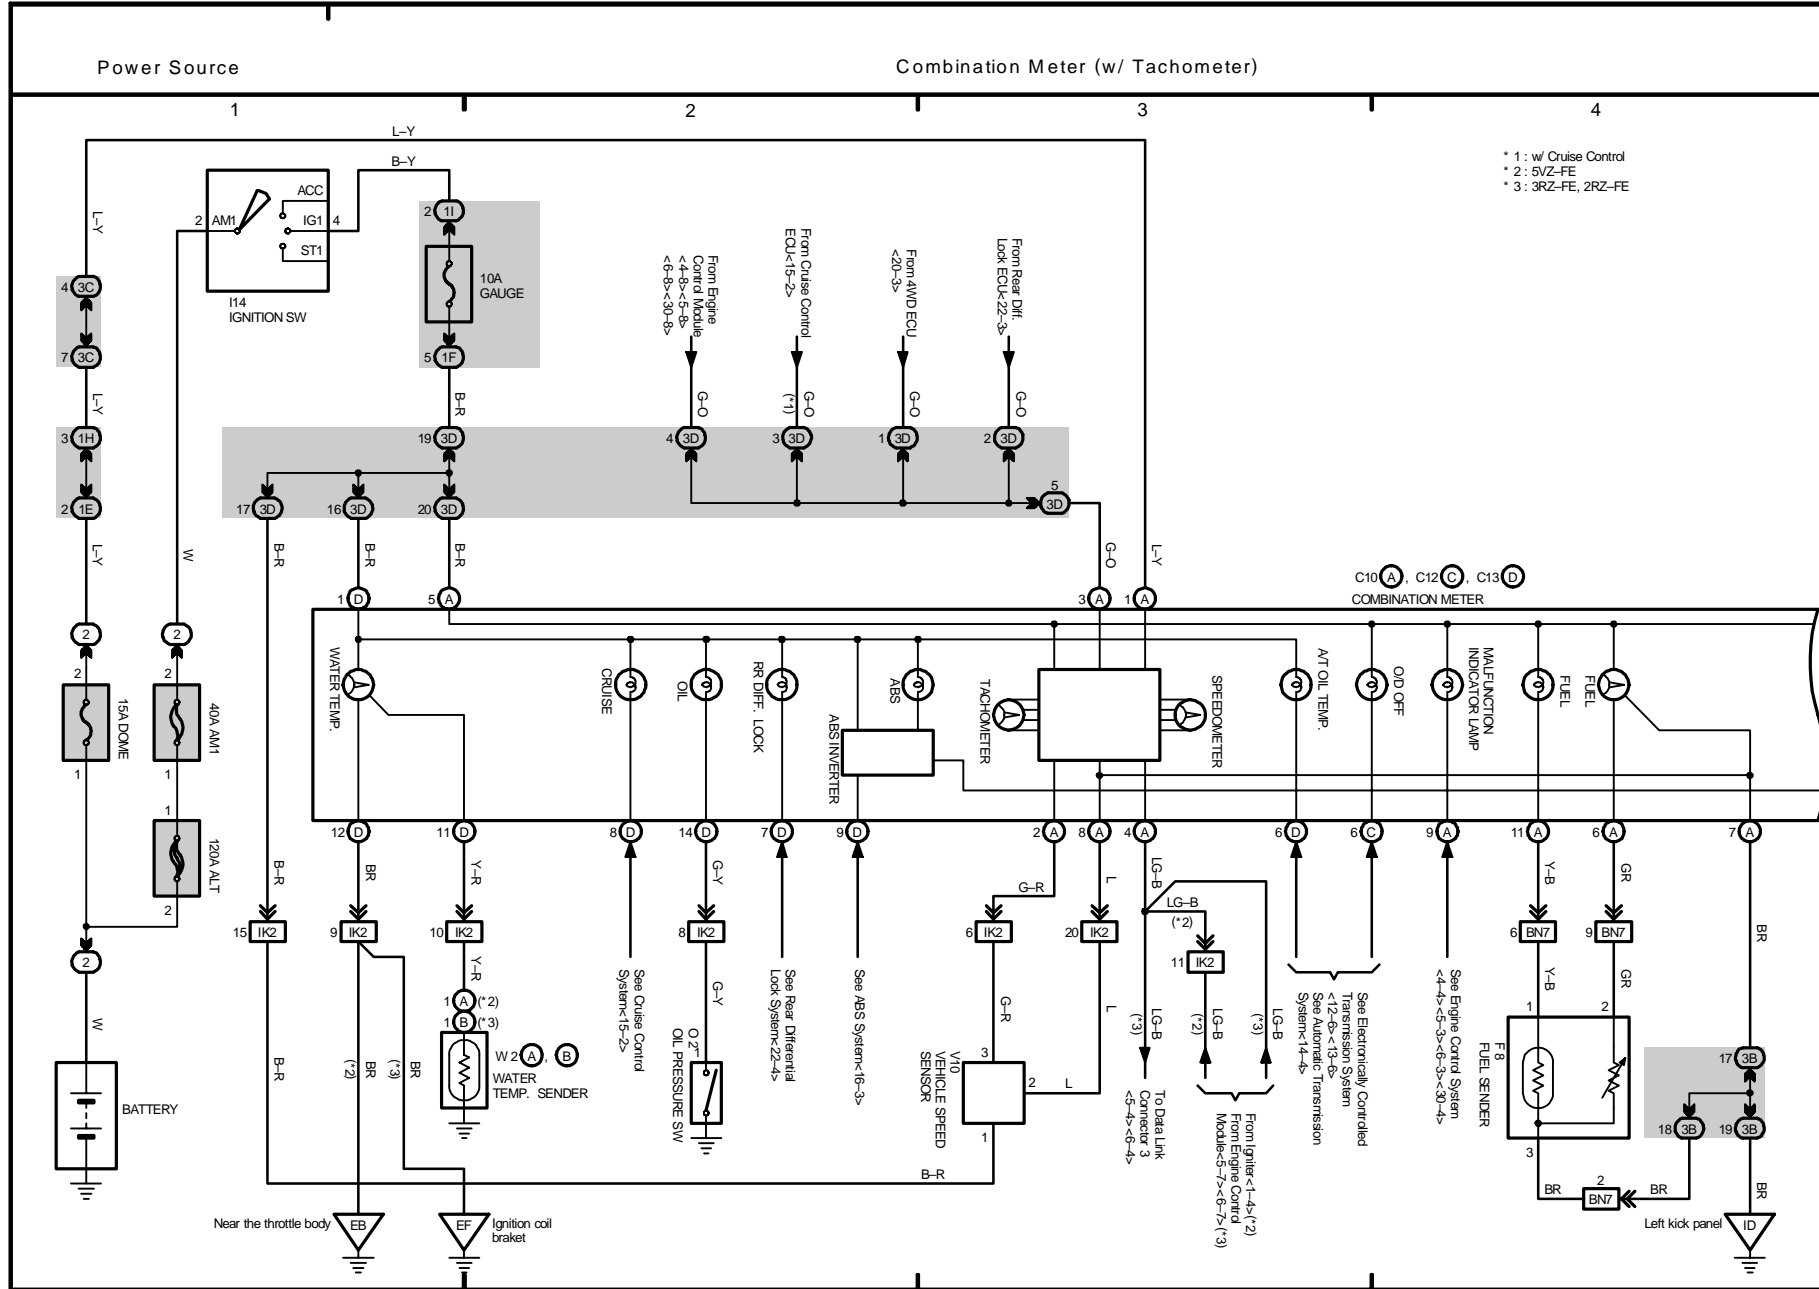



Combination Meter (w/ Tachometer)


- \* 4 : w/ Daytime Running Light
- \* 5 : w/o Daytime Running Light
- \* 6 : Cold Area Spec.

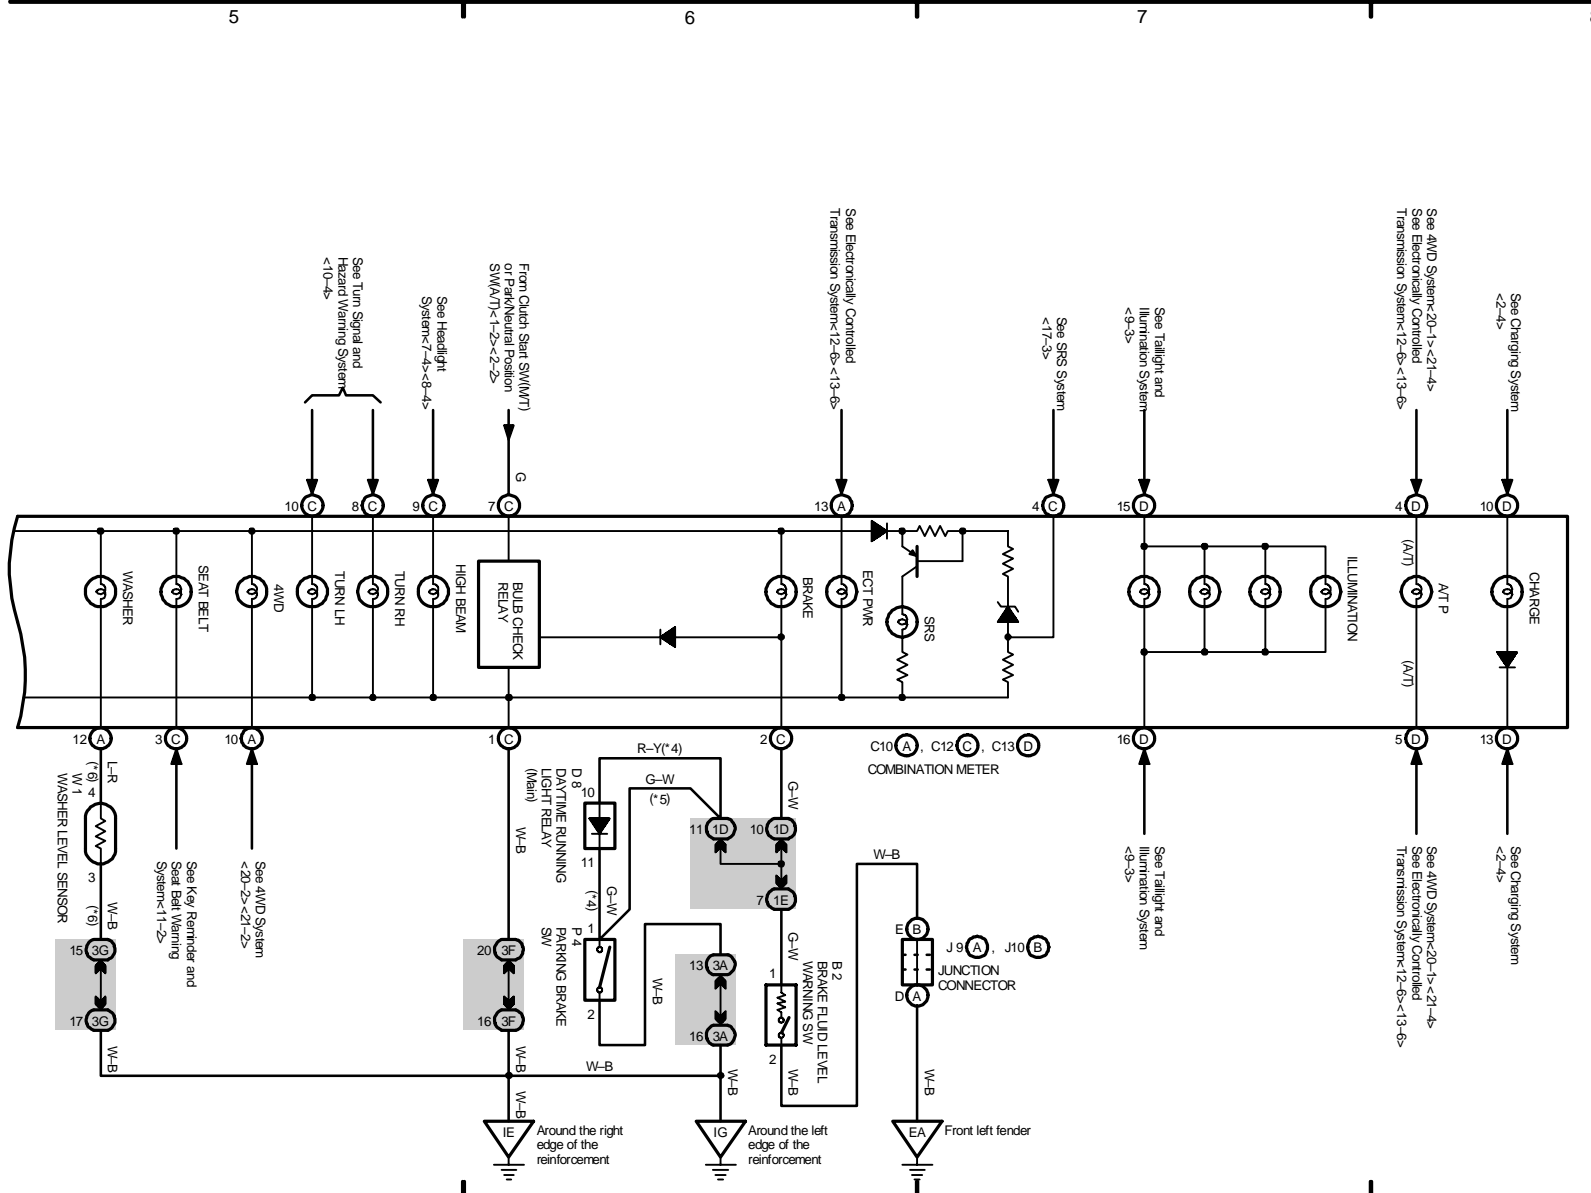

# M OVERALL ELECTRICAL WIRING DIAGRAM

---


2003 TOYOTA TACOMA (EWD517U)

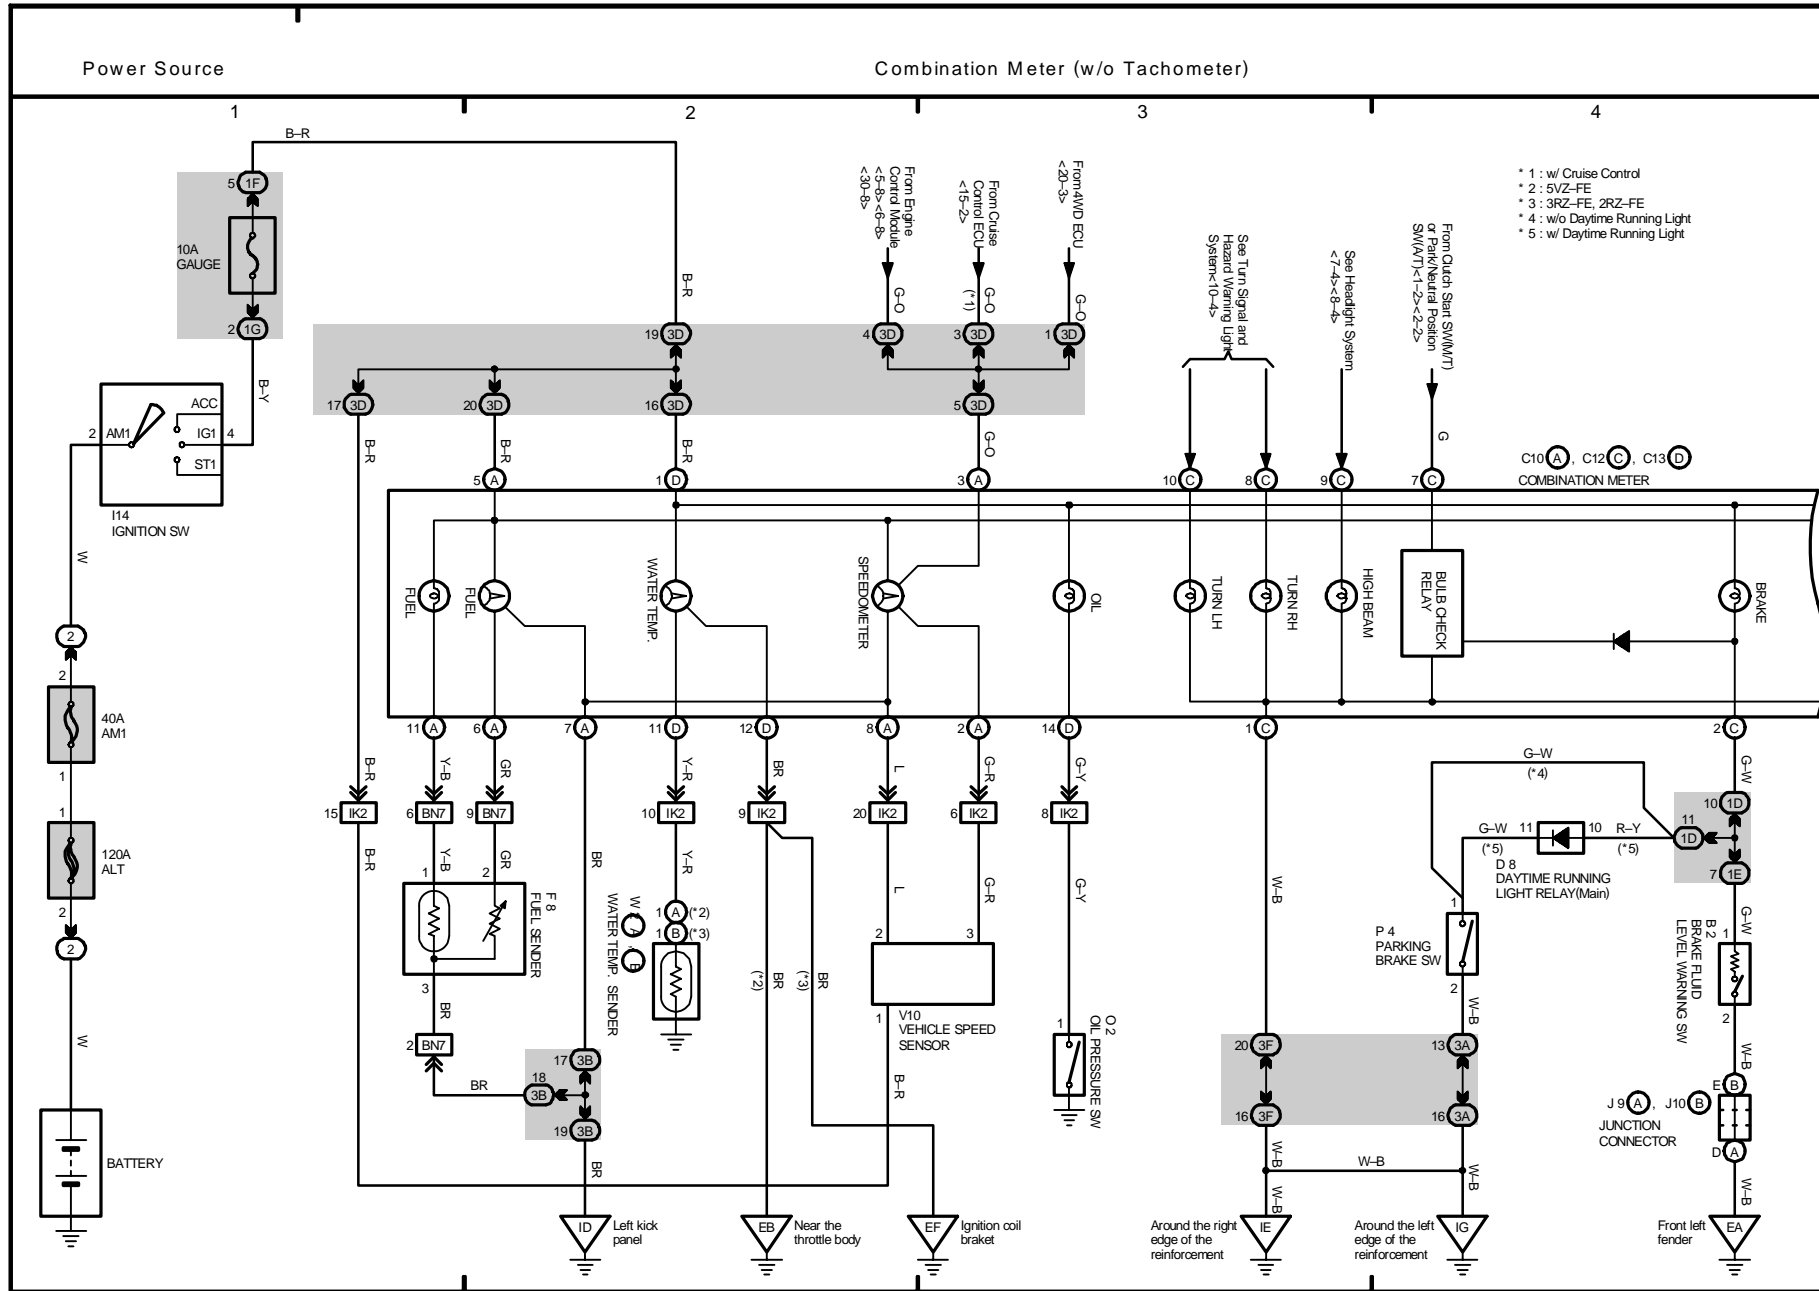



Combination Meter (w/o Tachometer)

\* 6 : Cold Area Spec.

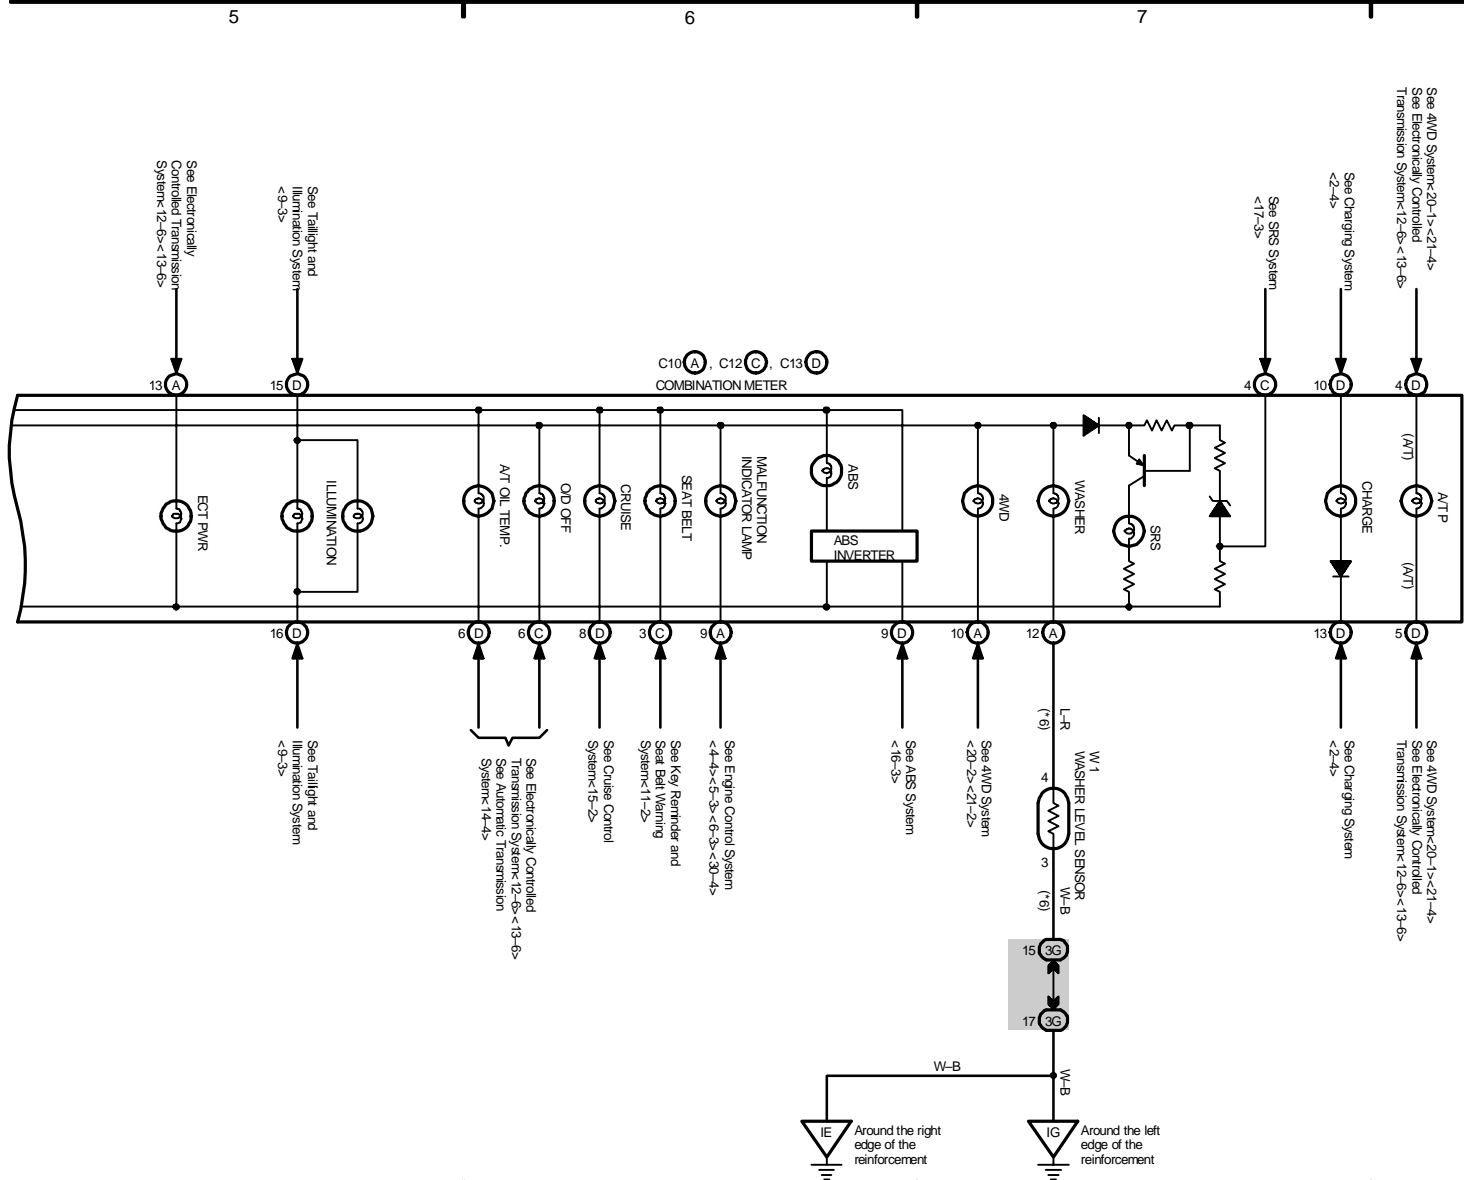




## **M OVERALL ELECTRICAL WIRING DIAGRAM**


---

2003 TOYOTA TACOMA (EWD517U)

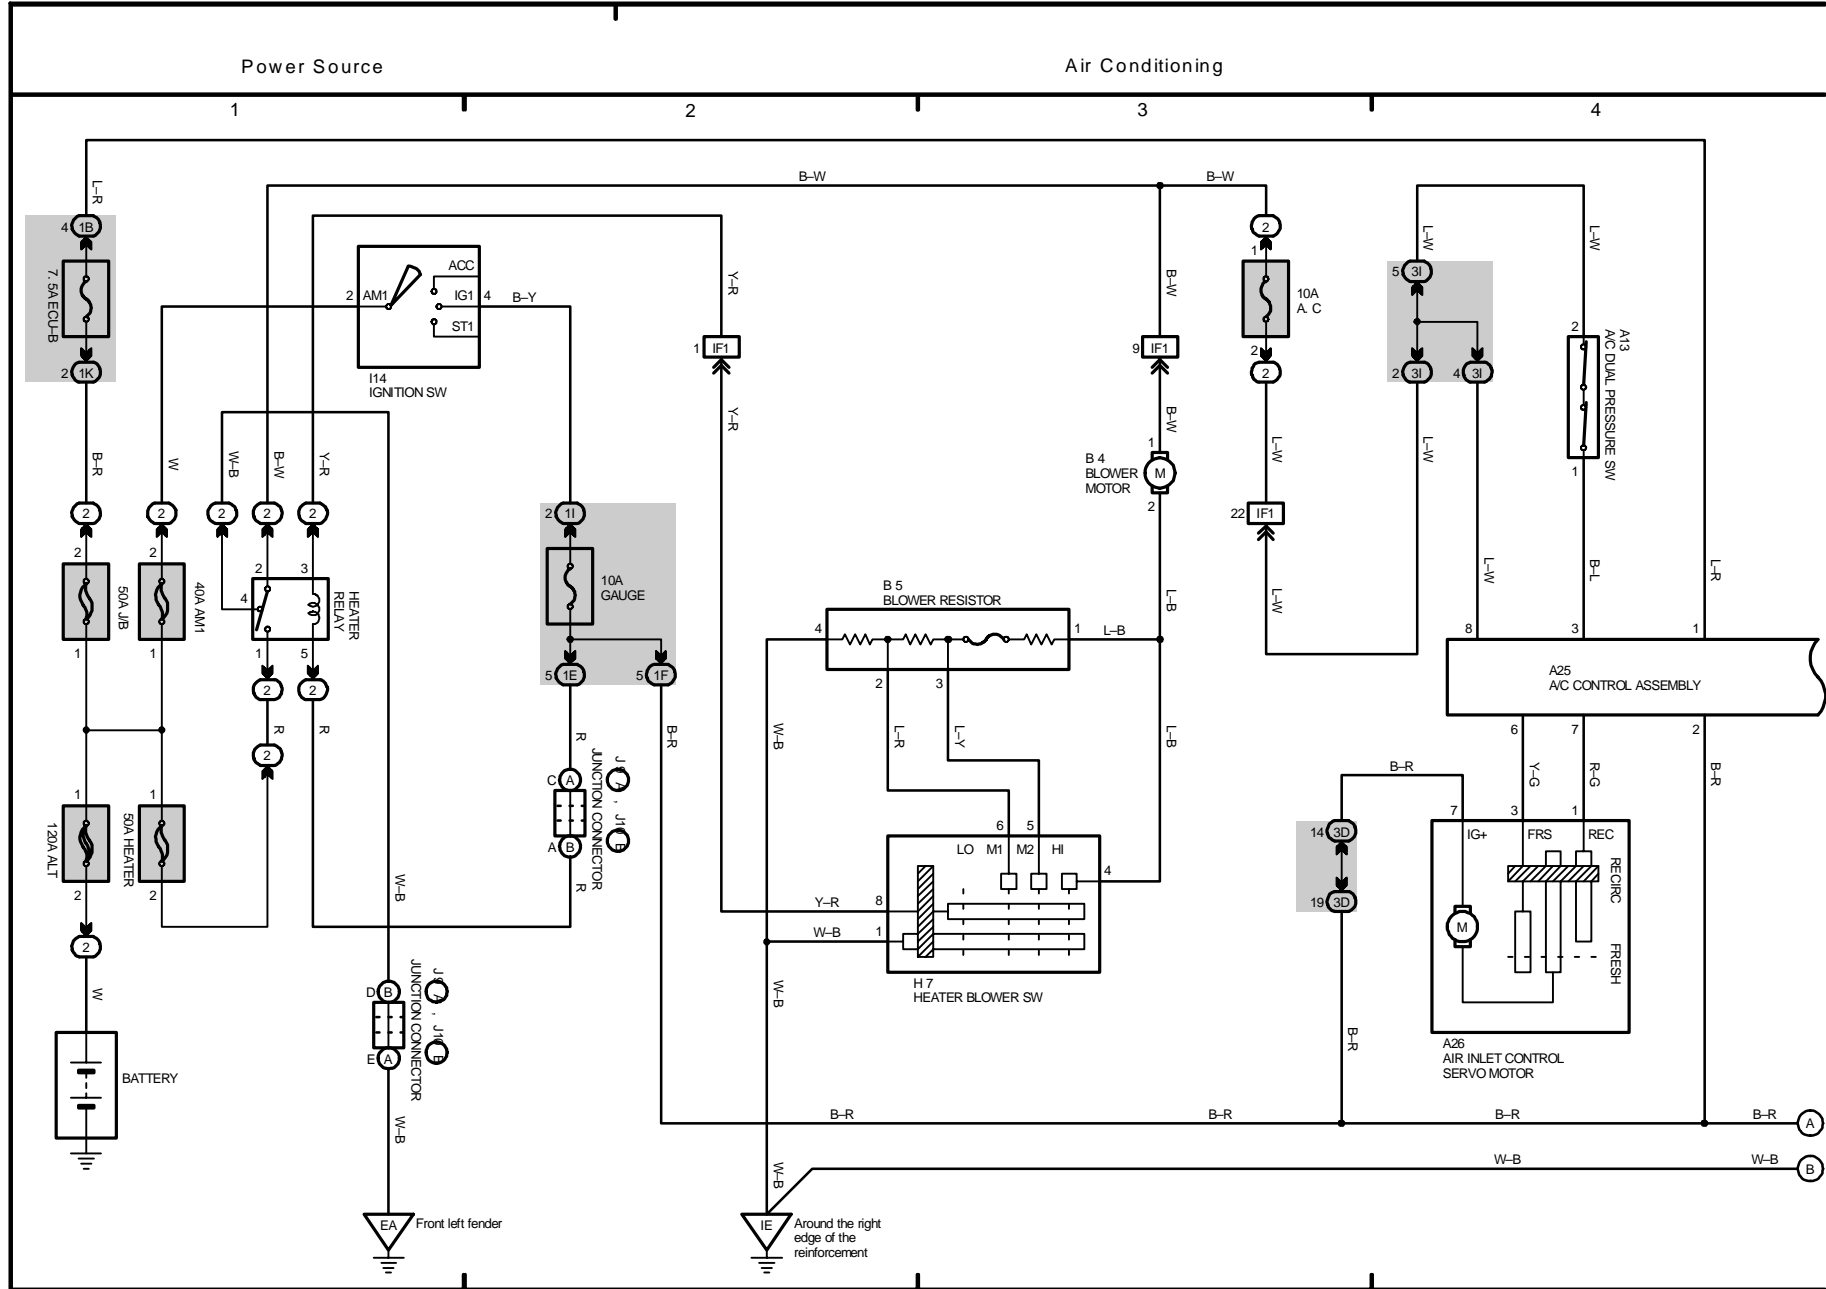



Air Conditioning

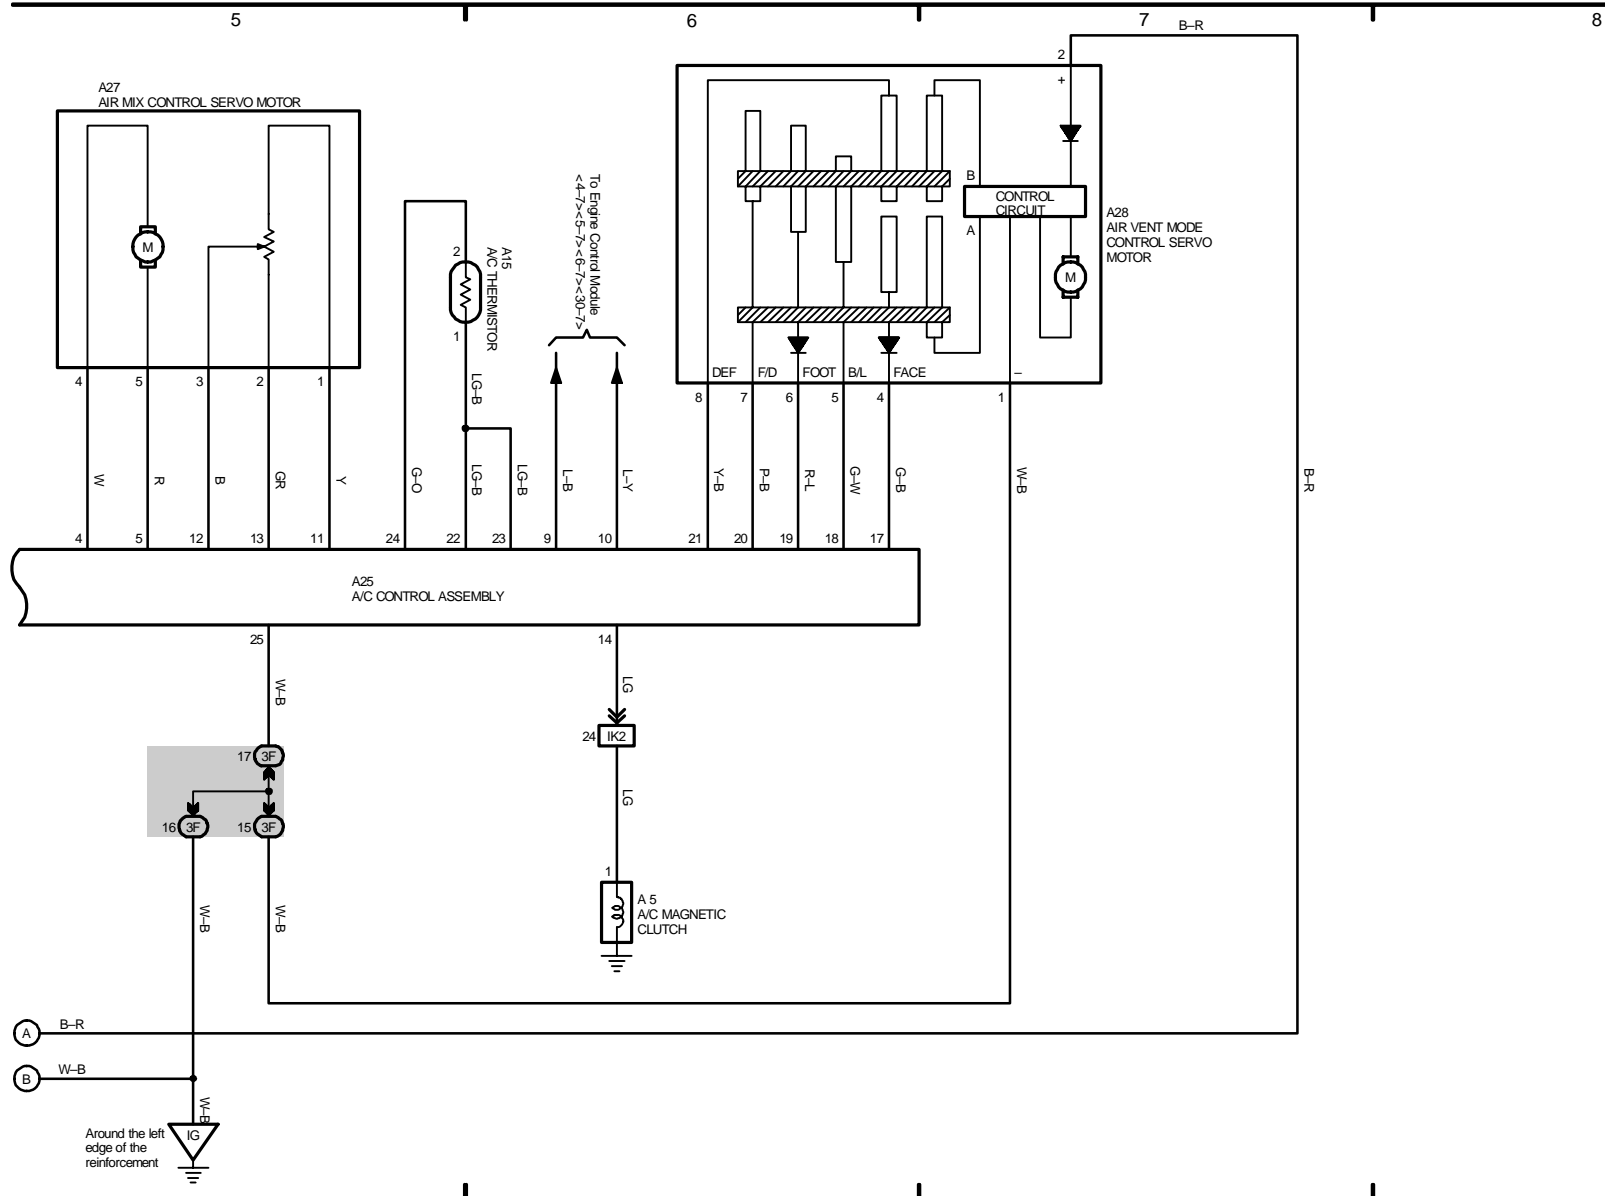

# M OVERALL ELECTRICAL WIRING DIAGRAM


---





Engine Control (5VZ-FE Except 2WD M/T)

- \* 1: 4WD
- \* 2: 4WD w/ 2-4 Select SW
- \* 3: 4WD w/o 2-4 Select SW

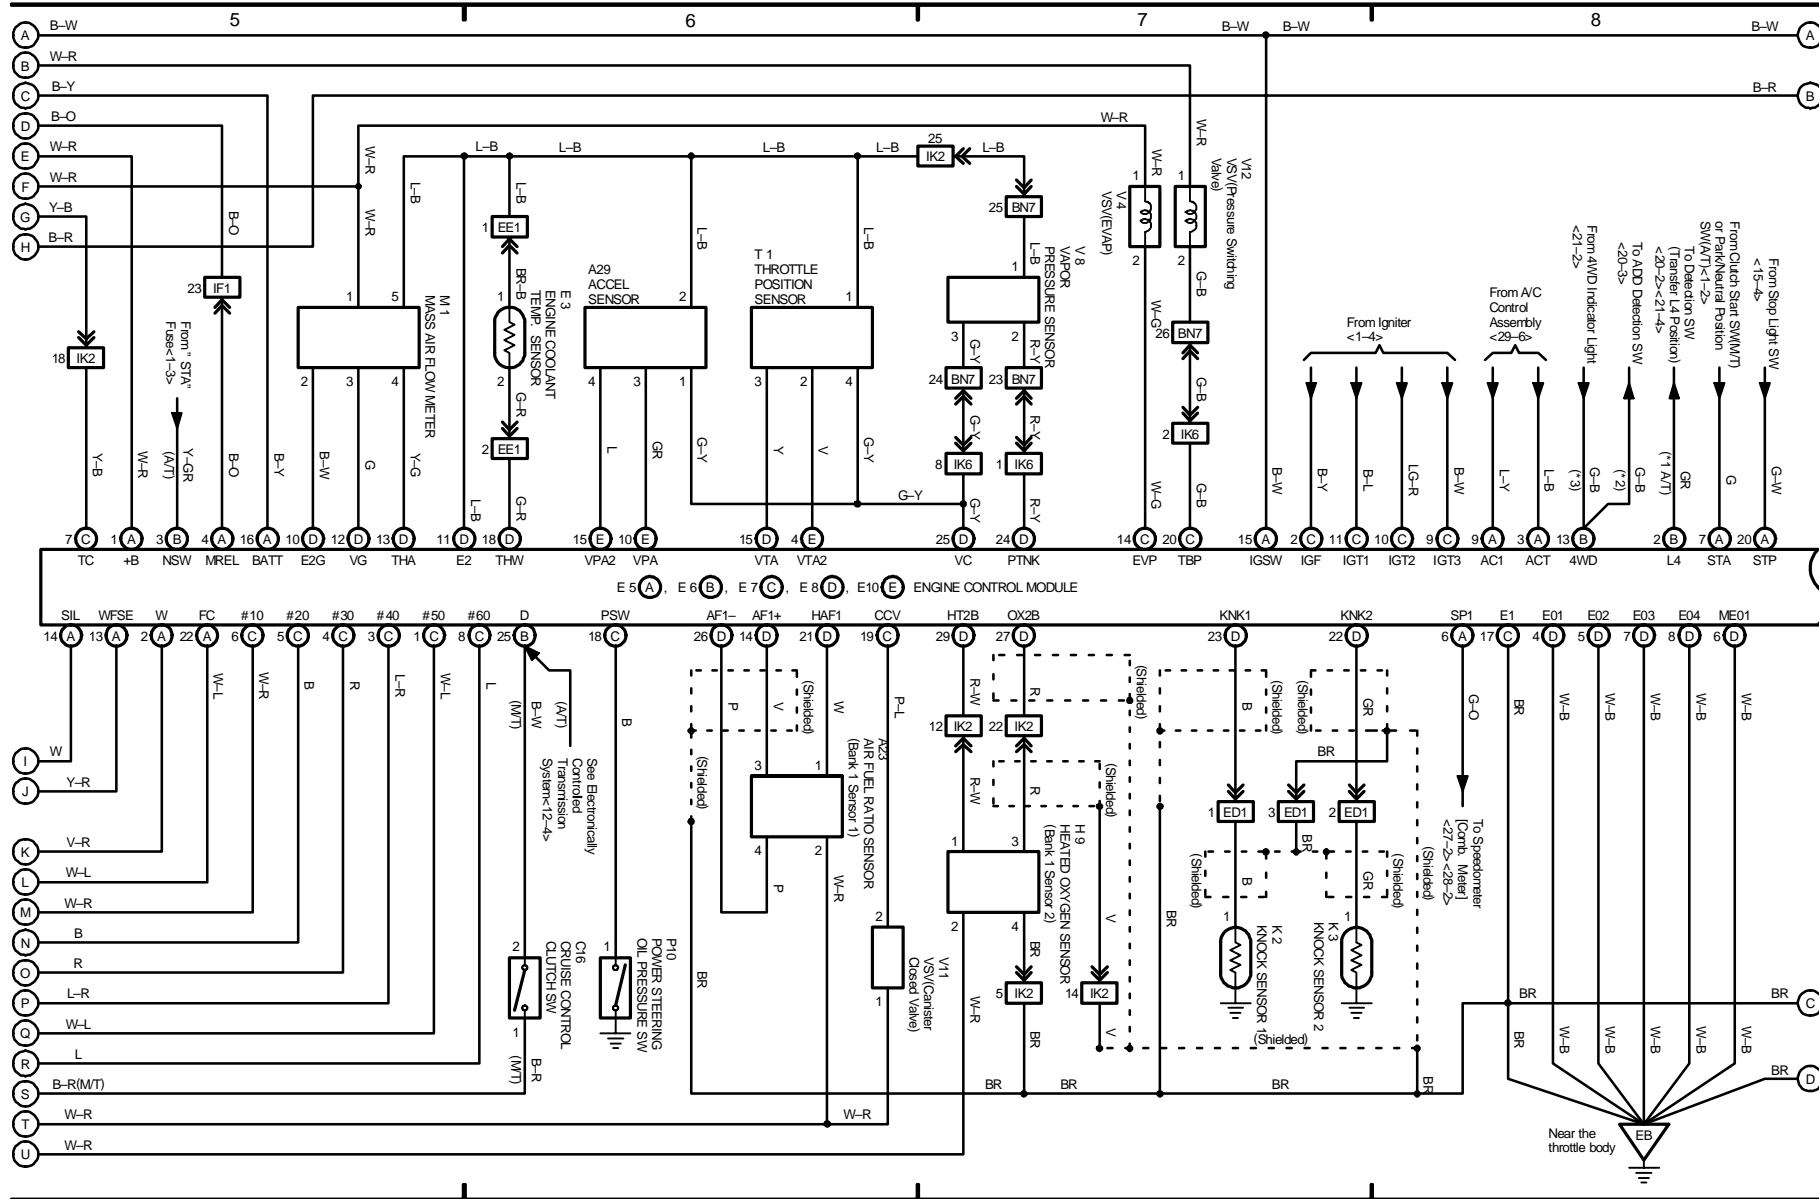

2003 TOYOTA TACOMA (EWD517U)



# M OVERALL ELECTRICAL WIRING DIAGRAM

---

Cruise Control (5VZ-FE Except 2WD M/T)

