


M OVERALL ELECTRICAL WIRING DIAGRAM

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

HOW TO READ THIS SECTION

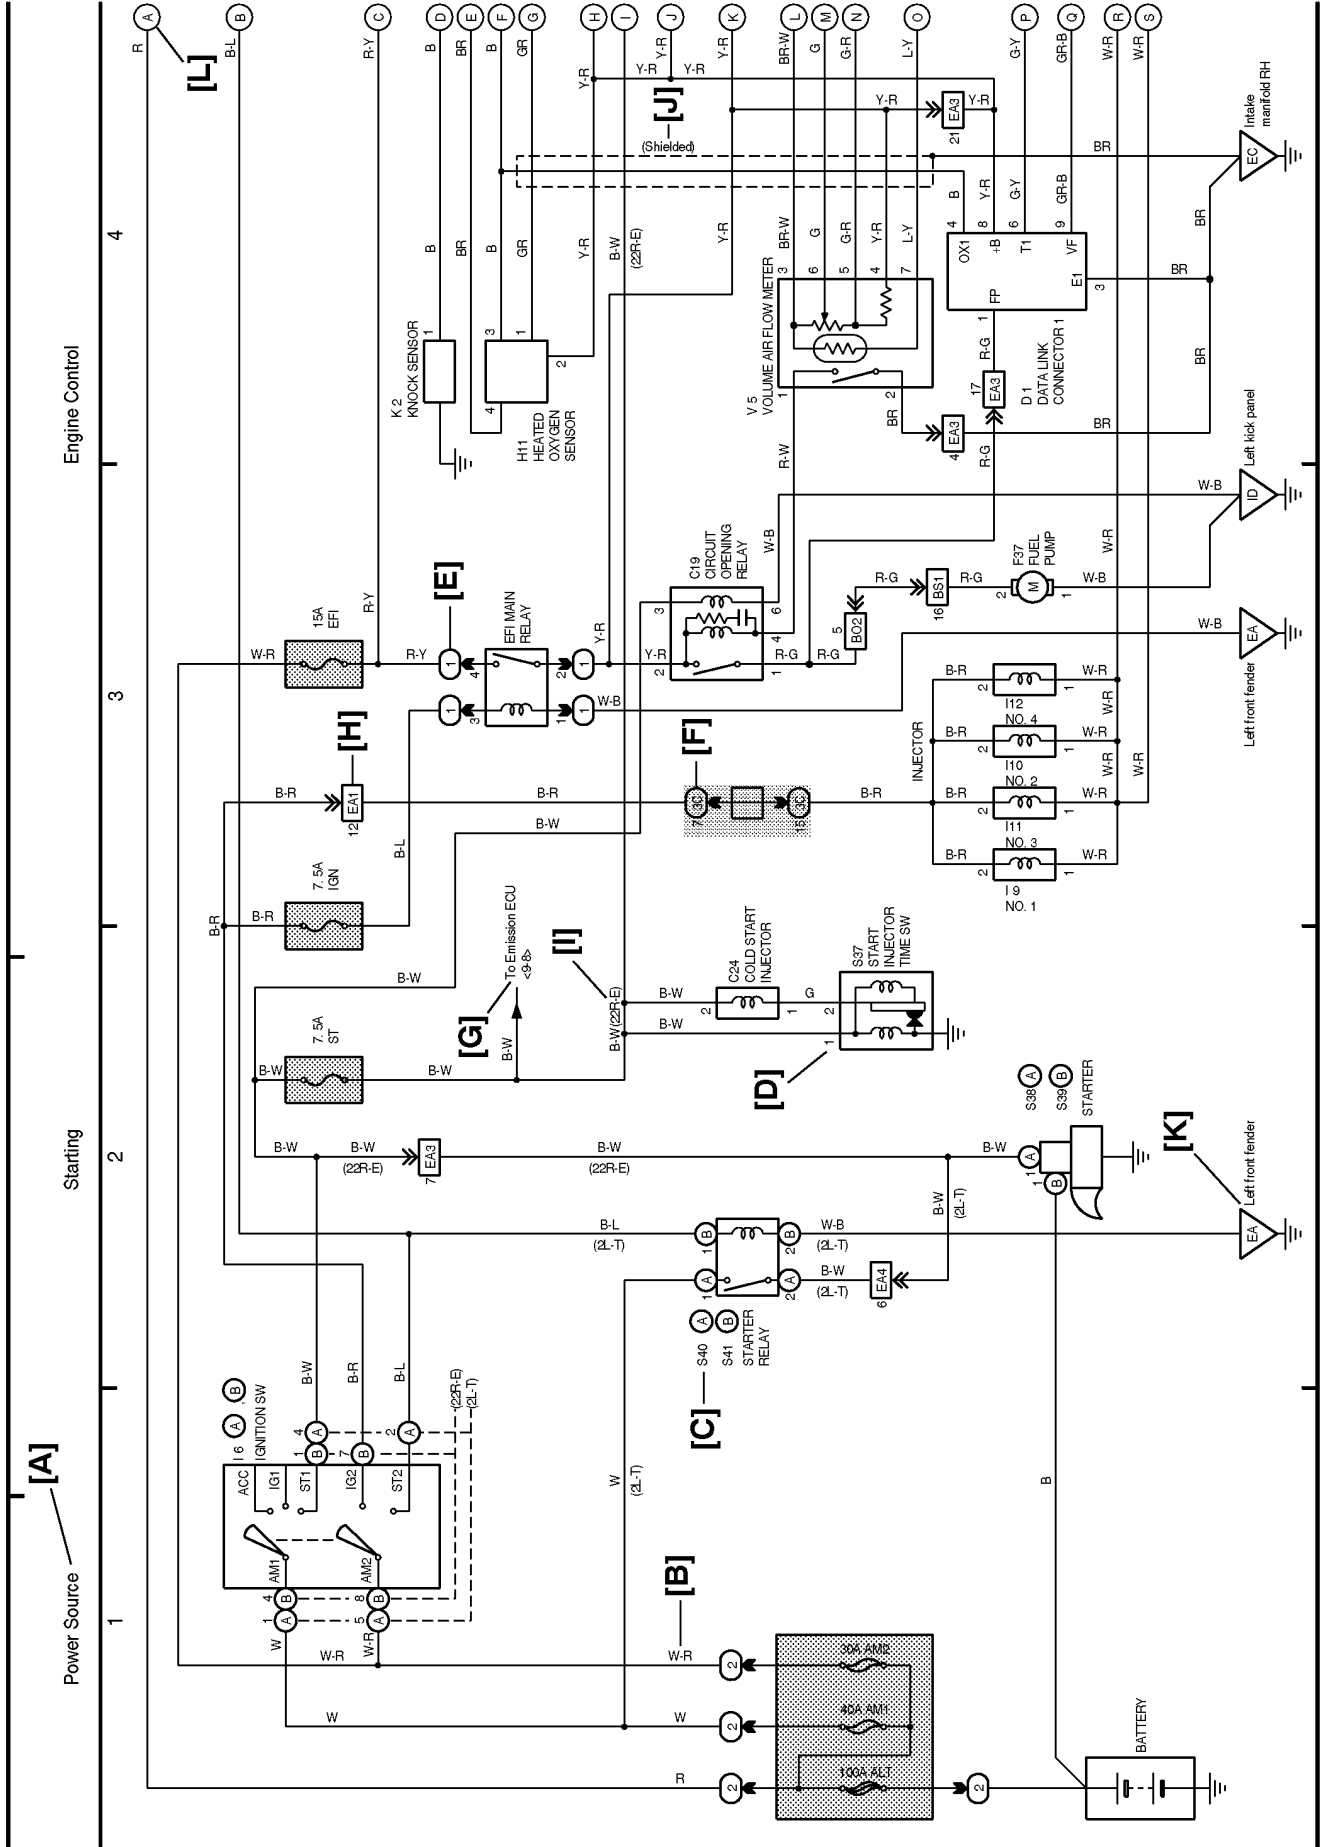

[A] : System Title


[B] : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

- B = Black W = White BR = Brown
- L = Blue V = Violet SB = Sky Blue
- R = Red O = Orange LG = Light Green
- P = Pink Y = Yellow GR = Gray
- G = Green

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L - Y

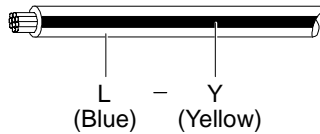


[C] : The position of the parts is the same as shown in the wiring diagram and wire routing.


[D] : Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example : Numbered in order from upper left to lower right

Numbered in order from upper right to lower left

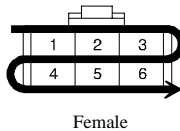

Female

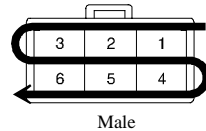

Male


The numbering system for the overall wiring diagram is the same as above

[E] : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example : Indicates Relay Block No.1


[F] : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.

Example:

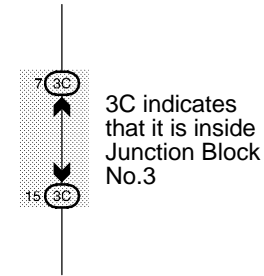

[G] : Indicates related system.

[H] : Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↘). Outside numerals are pin numbers.

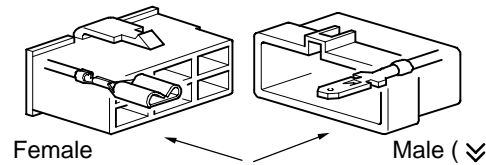

[I] : () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

[J] : Indicates a shielded cable.



[K] : Indicates and located on ground point.

[L] : The same code occurring on the next page indicates that the wire harness is continuous.

SYSTEM INDEX

SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS	16-2	Illumination	9-2
Air Conditioning	29-2	Interior Light	11-4
Automatic Transmission (2RZ-FE)	14-2	Key Reminder	11-2
Back-Up Light	17-4	Light Auto Turn Off	11-3
Charging	2-4	Power Outlet	25-4
Cigarette Lighter	26-4	Power Seat	24-4
Clock	26-4	Power Source	1~30-1
Combination Meter (w/ Tachometer)	27-2	Power Window	19-2
Combination Meter (w/o Tachometer)	28-2	Radio and Player	26-2
Cruise Control (5VZ-FE Except 2WD M/T)	30-9	Rear Differential Lock	22-2
Cruise Control (5VZ-FE 2WD M/T, 3RZ-FE, 2RZ-FE)	15-2	Remote Control Mirror (w/ Power Window)	23-3
Door Lock Control	18-2	Remote Control Mirror (w/o Power Window)	24-2
Electronically Controlled Transmission (3RZ-FE)	13-2	Seat Belt Warning	11-2
Electronically Controlled Transmission (5VZ-FE)	12-2	Shift Lock	25-2
Engine Control (2RZ-FE)	6-2	SRS	17-2
Engine Control (3RZ-FE)	5-2	Starting (3RZ-FE, 2RZ-FE)	2-2
Engine Control (5VZ-FE(Except 2WD M/T))	30-2	Starting (5VZ-FE)	1-2
Engine Control (5VZ-FE(2WD M/T))	4-2	Stop Light	15-4
Headlight (w/ Daytime Running Light)	8-2	Taillight	9-2
Headlight (w/o Daytime Running Light)	7-2	Turn Signal and Hazard Warning Light	10-2
Horn	10-4	Wiper and Washer	23-2
Ignition (3RZ-FE, 2RZ-FE)	3-2	4WD (w/ 2-4 Select SW)	20-2
Ignition (5VZ-FE)	1-4	4WD (w/o 2-4 Select SW)	21-2