

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 5	A/C Magnetic Clutch	90980-11271	D 5	Detection SW (Transfer 4WD Position) (w/ 2-4 Select SW)	90980-11250
A 7	A/T Oil Temp. Sensor	90980-10498		Detection SW (Transfer 4WD Position) (w/o 2-4 Select SW)	90980-11156
A 9	ABS Deceleration Sensor	90980-10845	D 7	Data Link Connector 3	90080-98010
A13	A/C Dual Pressure SW	90980-10825	D 8	Daytime Running Light Relay (Main)	90980-12034
A15	A/C Thermistor	90980-10860	D 9	Daytime Running Light Relay No.4	82602-35160
A18	Airbag Squib (Steering Wheel Pad)	90980-10850	D13	Diode (Daytime Running Light System)	90980-10962
A19	Ashtray Illumination	81945-33010	D15	Door Courtesy SW Front LH	90980-10433
A21	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	D16	Door Courtesy SW Front RH	
A22	ABS Actuator with ECU	90980-12020	D20	Door Lock Control SW RH	90980-11013
A23	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	D21	Door Lock Motor, Door Unlock Detection SW and Door Key Lock and Unlock SW Front LH	90980-10897
A24	ADD Actuator	90980-11858		D22	
A25	A/C Control Assembly	90980-11877	D25	Diode (A/T)	90980-10962
A26	Air Inlet Control Servo Motor	90980-11165	D26	Door Courtesy SW Rear LH	90980-10433
A27	Air Mix Control Servo Motor	90980-10789	D27	Door Courtesy SW Rear RH	
A28	Air Vent Mode Control Servo Motor	90980-11321	D28	Door Lock Motor Rear LH	90980-11019
A29	Accel Position Sensor	90980-11150	D29	Door Lock Motor Rear RH	
B 1	Back-Up Light SW	90980-11250	D30	Diode (ABS)	90980-10962
B 2	Brake Fluid Level Warning SW	90980-11207	E 1	EGR Gas Temp. Sensor	90980-10899
B 4	Blower Motor	90980-10214	E 2	Electronically Controlled Transmission Solenoid (Ex.5VZ-FE)	90980-10919
B 5	Blower Resistor	90980-10171		Electronically Controlled Transmission Solenoid (5VZ-FE)	90980-10891
B 6	Buckle SW LH	90980-10859	E 3	Engine Coolant Temp. Sensor	90980-10737
C 1	Camshaft Position Sensor	90980-10947	E 4	Electronically Controlled Transmission Pattern Select SW	90980-10601
C 2	Crankshaft Position Sensor (3RZ-FE, 2RZ-FE)	90980-11016	E 5	Engine Control Module	90980-11638
	Crankshaft Position Sensor (5VZ-FE)	90980-10947	E 6	Engine Control Module	90980-11637
C 3	Cruise Control Actuator	90980-11150	E 7	Engine Control Module	90980-11476
C 4	Cigarette Lighter	90980-10760	E 8	Engine Control Module	90980-11421
C 5	Cigarette Lighter Illumination	90980-11148	E10	Engine Control Module	90980-11586
C 6	Circuit Opening Relay	82602-35150	F 1	Front ABS Speed Sensor LH	90980-11075
C 7	Clock	90980-11013	F 2	Front ABS Speed Sensor RH	
C 8	Clutch Start Cancel SW	90980-11533	F 3	Front Turn Signal Light LH	90980-11020
C 9	Clutch Start SW	90980-10825	F 4	Front Turn Signal Light RH	
C10	Combination Meter	90980-11115	F 6	4WD ECU	90980-11423
C12	Combination Meter	90980-11114	F 8	Fuel Pump and Sender	90980-11077
C13	Combination Meter	90980-11113	F 9	Front Airbag Sensor LH	90980-11898
C14	Combination SW	90980-11672	F10	Front Airbag Sensor RH	
C15	Combination SW	90980-11594	F11	Fuse box	82610-35020
C16	Cruise Control Clutch SW	90980-10906	G 1	Generator	90980-09212
C17	Cruise Control ECU	90980-11391	G 2	Generator	90980-11349
C19	Combination SW	90980-11616	G 3	Glove Box Light	90980-11148
C20	Center Airbag Sensor Assembly	90980-11871			
C21	Center Airbag Sensor Assembly	90980-11872			
C22	Center Airbag Sensor Assembly	90980-11873			
D 3	Detection SW (Transfer L4 Position)	90980-11156			
D 4	Detection SW (Transfer Neutral Position)	90980-10923			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number		
H 1	Headlight LH	90980-11314	P 4	Parking Brake SW	90980-10825		
H 2	Headlight RH		P 5	Personal Light	90980-10935		
H 5	Horn (High)	90980-10619	P 6	Power Window Control SW Front RH	90980-10789		
H 6	Hazard SW	90980-10801	P 7	Power Window Master SW and Door Lock Control SW LH (Double Cab)	90980-10807		
H 7	Heater Blower SW	90980-10877		Power Window Master SW and Door Lock Control SW LH (Except Double Cab)	90980-10997		
H 8	High Mounted Stop Light	90980-11436	P 8	Power Window Motor Front LH	90980-11248		
H 9	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	P 9	Power Window Motor Front RH			
H10	Horn (Low)	90980-10619	P10	Power Steering Oil Pressure SW	90980-11428		
I 1	Idle Air Control Valve	90980-11145	P13	Power Outlet	90980-10760		
I 2	Igniter	90980-11653		P14		Power Outlet	
I 3	Ignition Coil No.1	90980-11246	P19	Passenger Airbag Manual On/Off Indicator	90980-11950		
I 4	Ignition Coil No.2		P20	Passenger Airbag Manual On/Off SW	90980-12017		
I 5	Ignition Coil No.3		90980-11153	P21	Pretensioner LH	90980-12253	
I 6	Injector No.1	P22		Pretensioner RH			
I 7	Injector No.2	P23		Power Seat Motor (Lumbar Support)	90980-10935		
I 8	Injector No.3	P24		Power Seat SW (Lumbar Support)	90980-10127		
I 9	Injector No.4	P25		Power Window Control SW Rear LH	90980-10631		
I10	Injector No.5	P26		Power Window Control SW Rear RH			
I11	Injector No.6	I14	Ignition SW	90980-11615	P27	Power Window Motor Rear LH	90980-10860
I16	Interior Light (Double, Extra Cab)	90980-10935	P28	Power Window Motor Rear RH			
	Interior Light (Regular Cab)	90980-10121	R 1	Radio and Player	90980-10997		
I20	Ignition Coil and Igniter No.1	90980-11885	R 2	Radio and Player	90980-10996		
I21	Ignition Coil and Igniter No.2		R 3	Rheostat	90980-10216		
I22	Ignition Coil and Igniter No.3		R 4	Rheostat	90980-10214		
I23	Ignition Coil and Igniter No.4		R 6	Rear Combination Light LH	90980-10173		
J 1	Junction Connector	90980-10803	R 7	Rear Combination Light RH			
J 9	Junction Connector	90980-11661	R 8	Remote Control Mirror LH	90980-11169		
J10	Junction Connector		R 9	Remote Control Mirror RH			
J11	Junction Connector	90980-11542	R10	Remote Control Mirror SW	90980-11657		
J13	Junction Connector	90980-10803	R11	Rear ABS Speed Sensor LH	90980-11467		
K 1	Knock Sensor	90980-11166	R12	Rear ABS Speed Sensor RH			
	Knock Sensor 1		R13	Rear Diff. Lock Detection SW	90980-11250		
	Knock Sensor 2		R14	Rear Diff. Lock Motor	90980-11194		
L 1	License Plate Light LH	90980-11162	R15	Rear Diff. Lock SW	90980-10631		
L 2	License Plate Light RH		R16	Rear Diff. Lock ECU	90980-10801		
M 1	Mass Air Flow Meter	90980-11317	S 1	Starter	90980-11400		
N 1	Noise Filter (Ignition System)	90980-10843	S 2	Starter (3RZ-FE, 2RZ-FE)	90980-09506		
O 1	O/D Solenoid	90980-11156		Starter (5VZ-FE)	90980-09584		
O 2	Oil Pressure SW	90980-11363	S 4	Shift Lock Control Relay and O/D Main SW	90980-11614		
O 6	O/D ECU	90980-10799	S 5	Stop Light SW	90980-11118		
P 1	Park/Neutral Position SW (Except 2RZ-FE)	90980-11784	S 6	Speaker (Front Door LH)	90980-10916		
	Park/Neutral Position SW (2RZ-FE)	90980-11332		S 7		Speaker (Front Door RH)	
P 2	Parking Light LH	90980-11149					
P 3	Parking Light RH						

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
S 8	Speaker (Rear LH) (Double Cab, Regular Cab)	90980-10825			
	Speaker (Rear LH) (Extra Cab)	90980-11299			
S 9	Speaker (Rear RH) (Double Cab, Regular Cab)	90980-10825			
	Speaker (Rear RH) (Extra Cab)	90980-11299			
T 1	Throttle Position Sensor (3RZ-FE, 2RZ-FE,5VZ-FE Ex.M/T 2WD)	90980-11261			
	Throttle Position Sensor (5VZ-FE Ex.M/T 2WD)	90980-10711			
T 2	2-4 Select Motor	90980-11858			
T 3	2-4 Select SW	90980-10355			
T 4	Transmission Control Relay	90980-10801			
T 5	Tweeter LH	90980-10906			
T 6	Tweeter RH				
T 7	Throttle Control Motor	90980-10942			
T 8	TVIP Warning Buzzer	90980-11051			
T 9	TVIP ECU	90980-11326			
U 1	Unlock Warning SW (A/T)	90980-10795			
	Unlock Warning SW (M/T)	90980-10860			
V 1	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156			
V 3	VSV (EGR)	90980-11162			
V 4	VSV (EVAP)	90980-11156			
V 8	Vapor Pressure Sensor	90980-11143			
V10	Vehicle Speed Sensor				
V11	VSV (Canister Closed Valve)	90980-11162			
V12	VSV (Pressure Switching Valve)	90980-11156			
W 1	Washer Motor and Washer Level Sensor (Cold Area Spec.) or Washer Motor (Except Cold Area Spec.)	90980-10942			
W 2	Water Temp. Sender (3RZ-FE, 2RZ-FE)	90980-11428			
	Water Temp. Sender (5VZ-FE)	90980-10359			
W 3	Wiper Motor	90980-11599			

Note: Not all of the above part numbers of the connector are established for the supply.

