



RADIO AND PLAYER

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

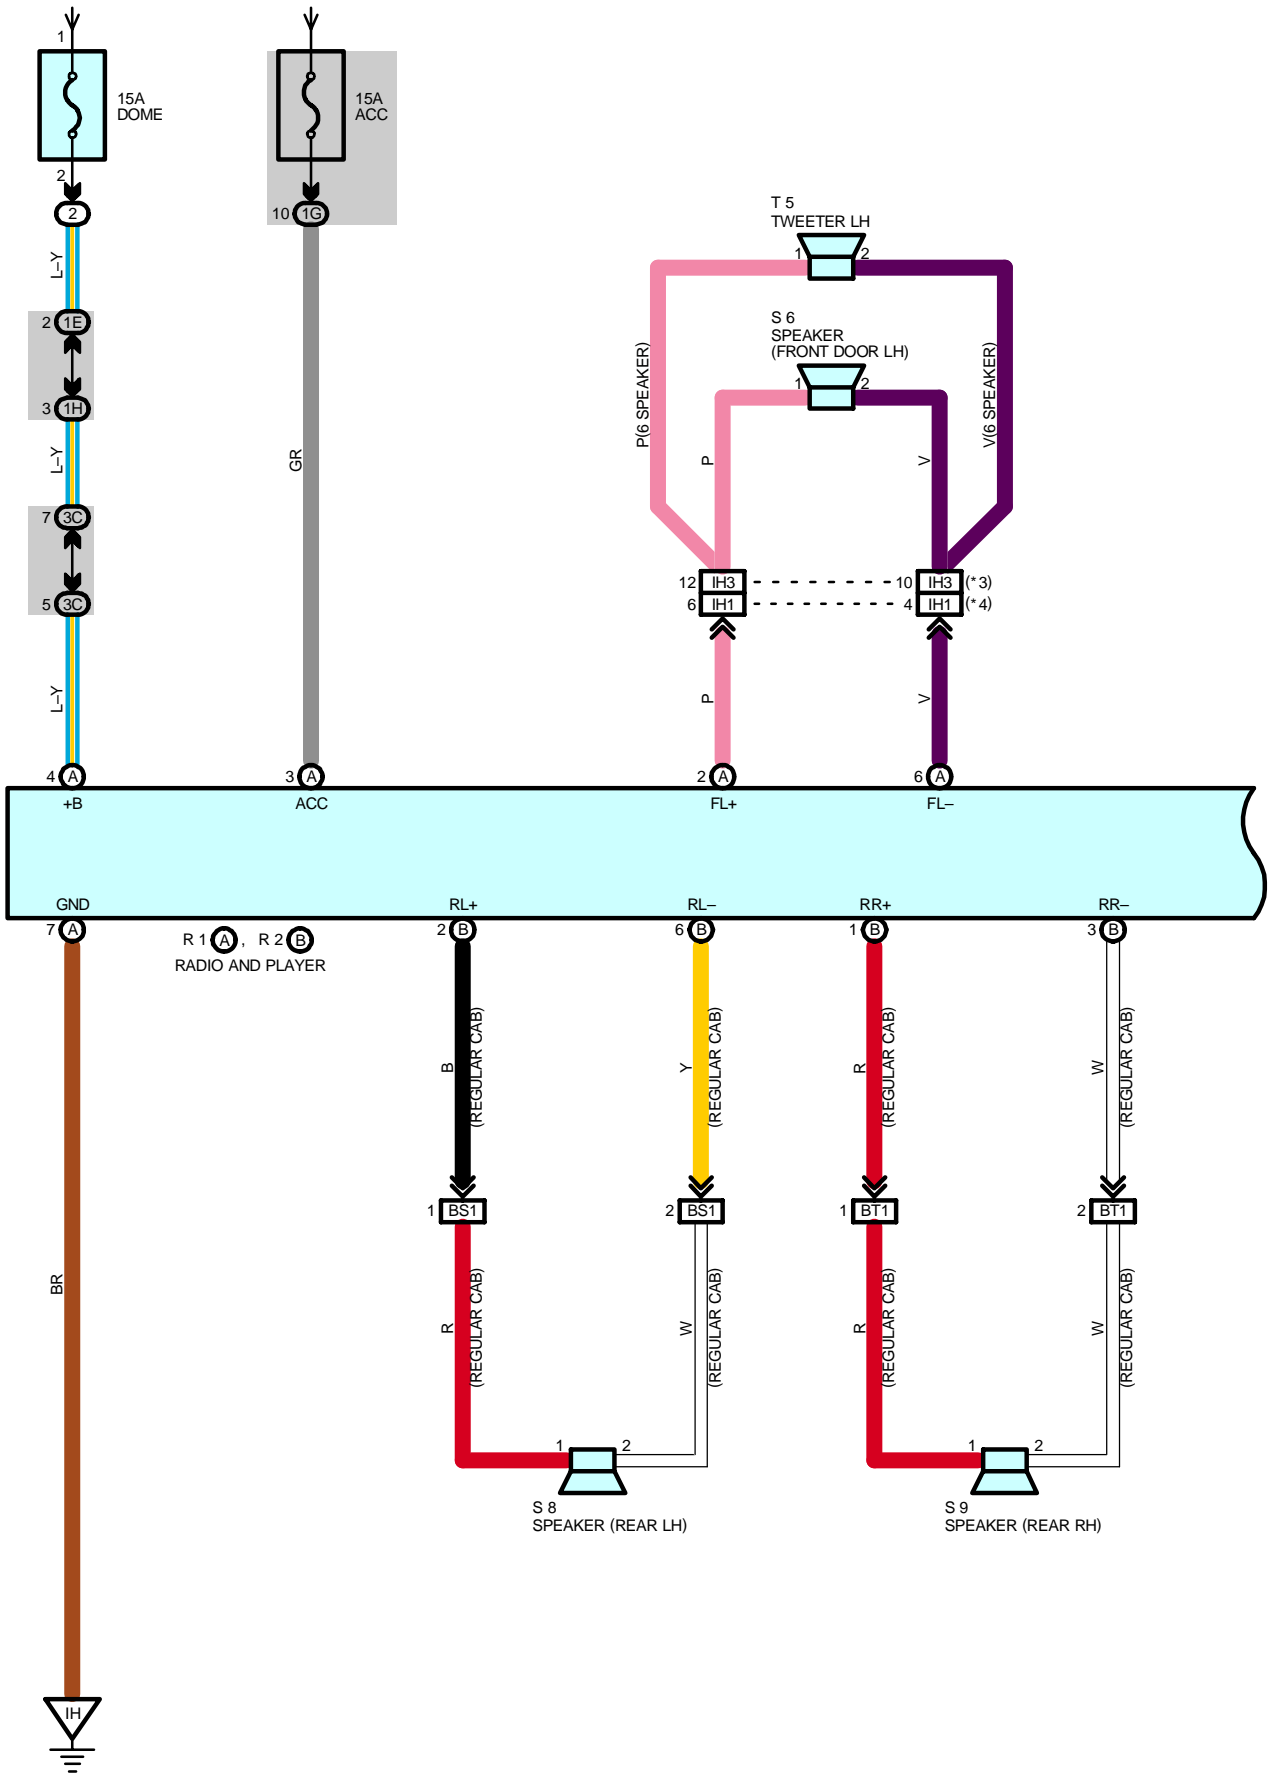

- * 1 : W/ POWER WINDOW
- * 2 : W/O POWER WINDOW
- * 3 : DOUBLE CAB
- * 4 : EXCEPT DOUBLE CAB

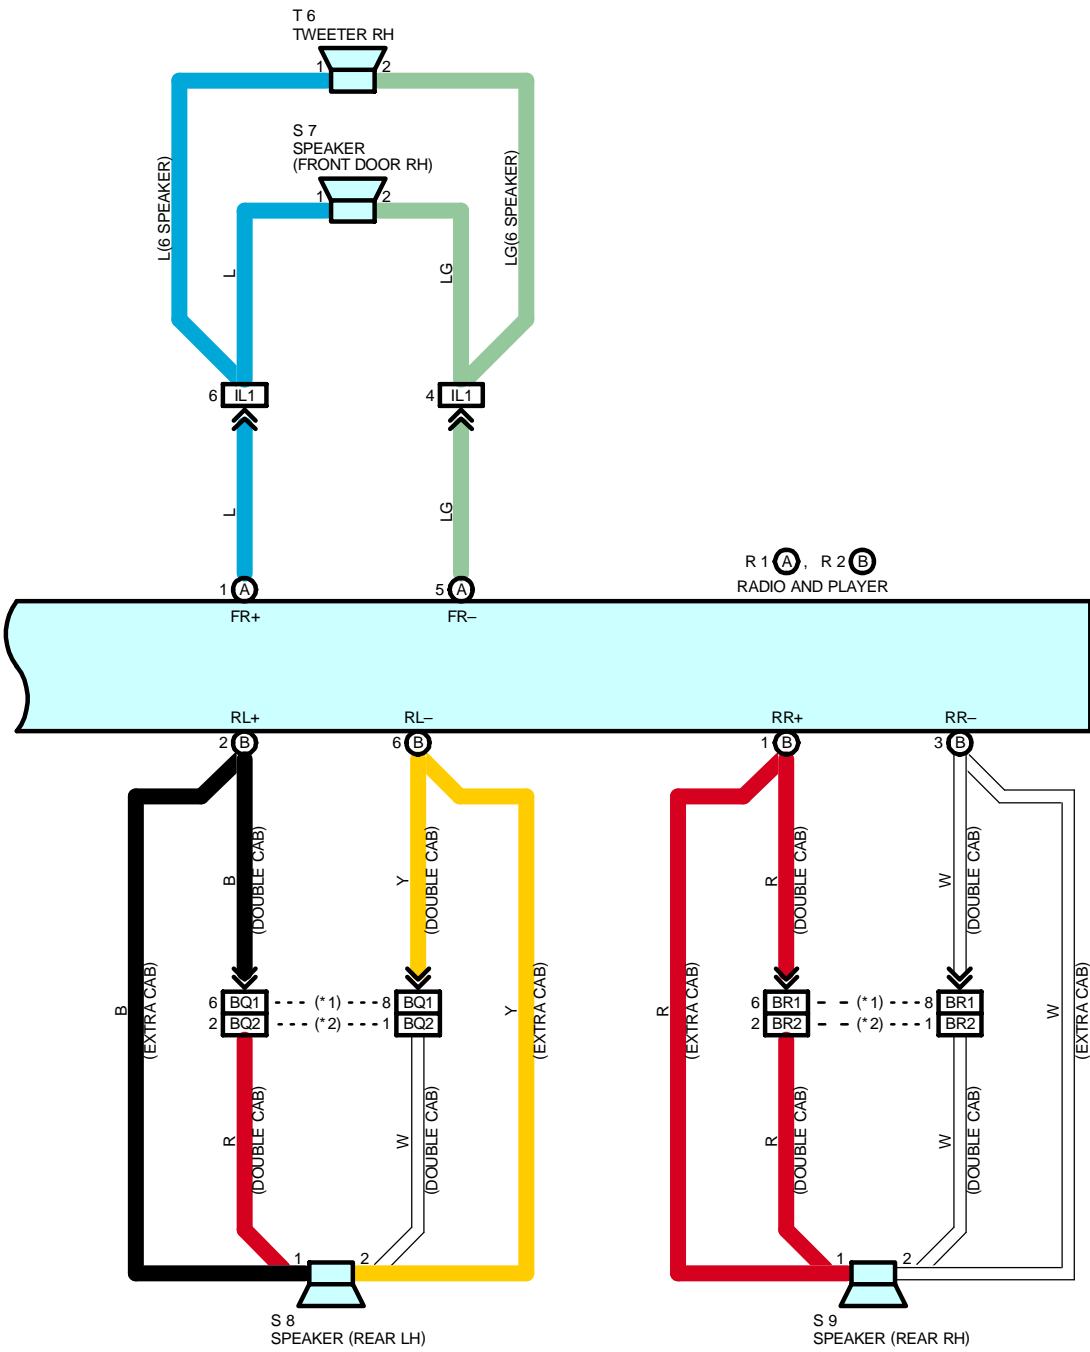

RADIO AND PLAYER

SERVICE HINTS

R1 (A) RADIO AND PLAYER

- (A) 3-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
- (A) 4-GROUND : Always approx. 12 volts
- (A) 7-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
R1	A	35	S7	37 (Except Double Cab)	T5	36 (Double Cab)
R2	B	35	S8	36 (Double Cab)		37 (Except Double Cab)
S6		36 (Double Cab)		37 (Except Double Cab)	T6	36 (Double Cab)
		37 (Except Double Cab)	36 (Double Cab)	37 (Except Double Cab)		
S7		36 (Double Cab)	S9	37 (Except Double Cab)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	21	R/B No.2 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	23	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)
1G	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
1H		
3C	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	44	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IH3		
IL1	44	Front Door RH Wire and Cowl Wire (Right Kick Panel)
BQ1	46 (Double Cab)	Rear Door No.2 Wire and Cowl Wire (Under the Left Center Pillar)
BQ2		
BR1	46 (Double Cab)	Rear Door No.1 Wire and Cowl Wire (Under the Right Center Pillar)
BR2		
BS1	48 (Except Double Cab)	Rear Speaker LH Wire and Cowl Wire (Under the Left Center Pillar)
BT1	48 (Except Double Cab)	Rear Speaker RH Wire and Cowl Wire (Under the Right Center Pillar)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IH	44	Right Kick Panel

