

# 2003 TOYOTA TACOMA ELECTRICAL WIRING DIAGRAM SYSTEM CIRCUITS

	Page
ABS .....	150
Air Conditioning .....	220
Automatic Transmission (2RZ-FE) .....	134
Back-Up Light .....	118
Charging .....	68
Cigarette Lighter .....	200
Clock .....	200
Combination Meter (w/ Tachometer) .....	208
Combination Meter (w/o Tachometer) .....	214
Cruise Control (Except 5VZ-FE 2WD M/T,3RZ-FE and 2RZ-FE) .....	138
Cruise Control (5VZ-FE 2WD M/T,3RZ-FE and 2RZ-FE) .....	144
Door Lock Control .....	178
Electronically Controlled Transmission (3RZ-FE) .....	128
Electronically Controlled Transmission (5VZ-FE) .....	122
Engine Control (2RZ-FE) .....	94
Engine Control (3RZ-FE) .....	86
Engine Control (5VZ-FE except 2WD M/T) .....	70
Engine Control (5VZ-FE 2WD M/T) .....	78
Headlight (w/ Daytime Running Light) .....	104
Headlight (w/o Daytime Running Light) .....	102
Horn .....	154
Ignition (3RZ-FE, 2RZ-FE) .....	66
Ignition (5VZ-FE) .....	58
Illumination .....	110
Interior Light .....	108
Key Reminder .....	196
Light Auto Turn Off .....	120
Power Outlet .....	198
Power Seat .....	202
Power Source .....	54
Power Window .....	182
Radio and Player .....	204
Rear Differential Lock .....	172
Remote Control Mirror (w/ Power Window) .....	188
Remote Control Mirror (w/o Power Window) .....	190
Seat Belt Warning .....	196
Shift Lock .....	176
SRS .....	157
Starting (3RZ-FE, 2RZ-FE) .....	62
Starting (5VZ-FE) .....	58
Stop Light .....	116
Taillight .....	110
Turn Signal and Hazard Warning Light .....	114
Wiper and Washer (w/ Int time SW Mechanism) .....	192
Wiper and Washer (w/o Int time SW Mechanism) .....	194
4WD (w/ 2-4 Select SW) .....	162
4WD (w/o 2-4 Select SW) .....	168