

BO07P-04

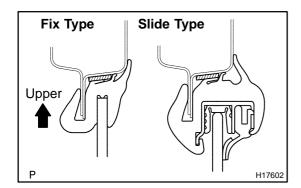

INSTALLATION


HINT:

The window glass will be installed as shown in the illustration.

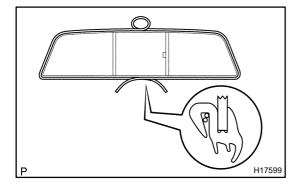


1. INSTALL BACK WINDOW GLASS WITH WINDOW FRAME

(a) Install the working cord to the frame, as shown in the illustration.

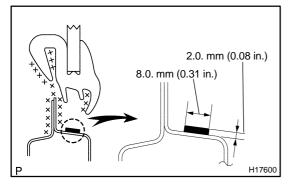

(b) Apply soapy water to the contact surface of the body and the weatherstrip lip.

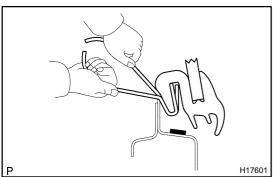

- (c) Hold the glass in position on the body.
- (d) Install the glass by pulling the cord from the room side, while pushing weatherstrip from the outside with your open hand.
- (e) To mark the glass fit in place, tap from the outside with your open hand.
- 2. INSPECT FOR LEAKS AND REPAIR
- (a) Conduct a leak test after the hardening time has elapsed.
- (b) Seal any leak with sealant.

Part No. 08833-00030 or equivalent

3. INSTALL ROOF HEAD LINING (See page BO-61, BO-66, BO-71)

2003 TOYOTA TACOMA (RM1002U)

Author: Date: 2412