
BO42H-02


REMOVAL

- 1. w/ Removable roof:
 - **REMOVE SUNSHADE TRIM**
- 2. w/ Removable roof:
 - REMOVE REMOVABLE ROOF LOCK HANDLE AND LOCK BASE
- 3. w/ Removable roof:
 - REMOVE SLIDING ROOF OPENING TRIM
- 4. REMOVE FRONT SEAT
- 5. REMOVE REAR SEAT
- 6. REMOVE CENTER CONSOLE

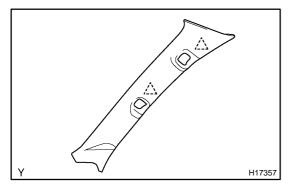


7. REMOVE FRONT PILLAR GARNISHES

- (a) Disconnect the weatherstrip around the front pillar garnish.
- (b) W/Assist grip:
 - Remove the 2 plugs and 2 bolts and assist grip.
- (c) Remove the front pillar garnish and 2 clips.
- 8. REMOVE REAR DOOR WEATHER STRIPS

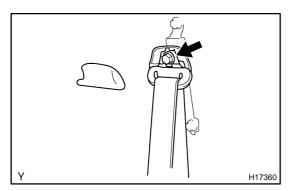

9. REMOVE UPPER CENTER PILLAR GARNISHES


- (a) Disconnect the front outer seat belt.Using a screwdriver, remove the cover and bolts and disconnect the seat belt.
- (b) Remove the 4 bolts and front scuff plate.
- (c) Remove the 2 bolts and rear scuff plate.

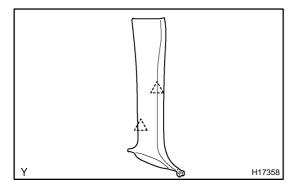


(d) Using a screwdriver, remove the lower center pillar garnish.

2003 TOYOTA TACOMA (RM1002U)

Author: Date: 2437

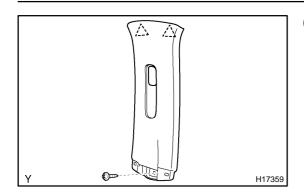


(e) Using a screwdriver, remove the screw, upper center pillar garnish.

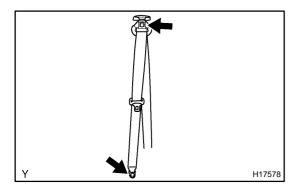


10. REMOVE REAR QUARTER GARNISHES

- (a) Disconnect the rear outer seat belt.
 - (1) Using a screwdriver, open the cover and remove the 2 bolts.
 - (2) Disconnect the seat belt from the garnish.

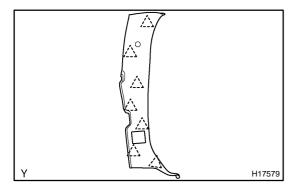


- (b) Using a screwdriver, remove the back panel upper garnish.
- (c) Using a screwdriver, remove the rear quarter garnish.

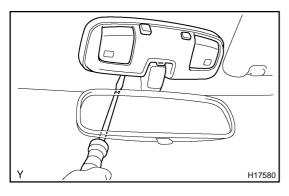

11. REMOVE MAP LAMP AND MIRROR


(a) Using a screwdriver, remove the cover.

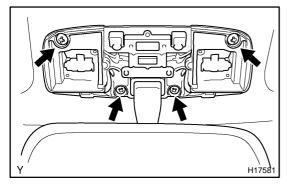

(b) Remove the 4 screws, map lamp and mirror, disconnect the connector.


2003 TOYOTA TACOMA (RM1002U)

Author: Date: 2438

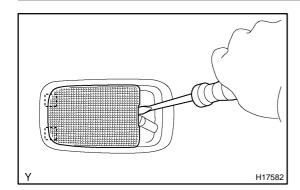

12. REMOVE ROOM LAMP

(a) Using a screwdriver, remove the cover.

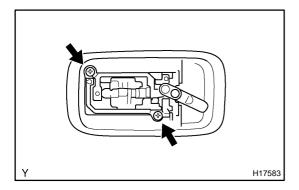


(b) Remove the 2 screws, and room lamp, disconnect the connector.

13. REMOVE REAR ASSIST GRIPS

- (a) Using a screwdriver, remove the 2 plugs, 2 bolts and rear assist grips.
- (b) Remove the other one.

14. REMOVE SUN VISORS

- (a) Remove the 2 screws and sun visor.
- (b) Remove the other one.

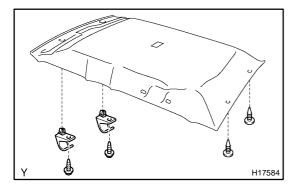

15. REMOVE ROOF HEADLINING

Remove the 2 screws, 2 sun visor holders, 2 clips and roof headlining from the passenger door.

Author: Date: 2439